 
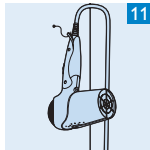 
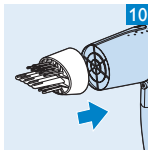 
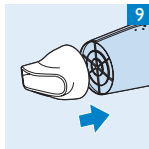 
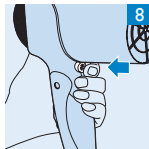 
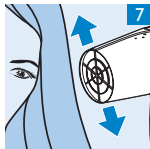 
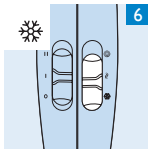 
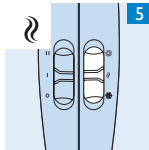 
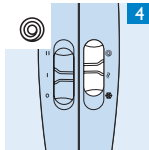 


1

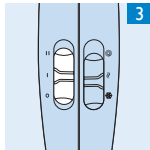

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. The Philips SalonShine Ion hairdryer has been specially designed to meet your personal needs, allowing you to dry your hair at a constant caring temperature, for healthy, shiny, frizz-free hair. The ioniser inside emits negatively charged ions that surround your hair. Negative ions reduce the build-up of static electricity and help to keep your hair in good condition, making it shiny, smooth and frizz-free.

General description (Fig. 1)

- A** Air inlet grille
- B** Air outlet grille
- C** Airflow slide switch
 - O = off
 - I = gentle airflow especially intended for styling
 - II = strong airflow for quick drying
- D** Temperature slide switch
 - ☉ = Quick-Dry setting
 - ☿ = Thermoprotect setting
 - ✱ = Cool Care setting
- E** Cool shot button
- F** Ion button with ion indicator light
- G** Hanging loop
- H** Comb diffuser (HP4887 only)
- I** Concentrator

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Keep the appliance away from water (Fig. 2). Do not use it near or over water contained in baths, washbasins, sinks etc. When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk, even when the appliance is switched off.
- Do not insert metal objects into the air grilles to avoid electric shock.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Check the condition of the mains cord regularly. Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Never block the air grilles.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance back on, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Always switch off the appliance before you put it down, even if it is only for a moment.
- Do not use the appliance on artificial hair.
- Do not use the appliance for any other purpose than intended.
- Always unplug the appliance after use.
- Do not wind the mains cord round the appliance.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

- You may notice a characteristic odour when you use this hairdryer. This is caused by the ions that are generated and it is not harmful to the human body.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Using the appliance

Drying

- 1** Put the plug in the wall socket.
- 2** Set the airflow slide switch to the desired setting to switch on the appliance (Fig. 3).
 - Set the airflow slide switch to setting II for ultra-quick drying.
 - Set the airflow slide switch to setting I for drying short hair or styling your hair.
- 3** Set the temperature slide switch to the Quick-Dry, Thermoprotect or Cool Care setting.

Quick-Dry setting ☉

- The Quick-Dry setting dries shower-wet hair very quickly and safely. (Fig. 4)
- It is recommended to use the Quick-Dry setting only briefly to avoid dehydrating your hair.

Thermoprotect setting ☿

- The Thermoprotect setting quickly and gently dries the hair at a constant, caring temperature of 57°C. (Fig. 5)

Cool Care setting ✱

- The Cool Care setting dries your hair with care and helps to seal in shine (Fig. 6).

- 4** To dry your hair, make brushing movements with the hairdryer at a small distance from the hair (Fig. 7).
- 5** When you have finished drying, press the cool shot button for a cool airflow. This closes the cuticles and adds shine to the hair (Fig. 8).
- 6** Set the airflow slide switch to O to switch off the appliance.

Ion function

The ion function provides additional shine and reduces frizz and static electricity. It is particularly suitable for dry and almost-dry hair.

- 1** Press the ion button to switch on the ion function.
 - ▶ The ion indicator light goes on to indicate that the ion function has been activated.

Attachments

Concentrator

The concentrator directs the airflow straight at the brush or comb with which you are styling your hair.

- 1** To connect the concentrator, simply snap it onto the appliance (Fig. 9).
- 2** To disconnect the concentrator, pull it off the appliance.

Comb diffuser (HP4887 only)

The comb diffuser has been specially developed to gently dry and style both straight and curly or wavy hair. The comb diffuser emits a gentle airflow and allows you to give your style volume, bounce and additional shine.

- 1** To connect the comb diffuser, simply snap it onto the appliance (Fig. 10).
- 2** To disconnect the comb diffuser, pull it off the appliance.

Cleaning

Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

- 1** Switch off the appliance and unplug it.
- 2** Clean the appliance with a dry cloth.
- 3** Remove any attachment from the appliance before you clean the attachment.
- 4** Clean the attachments with a moist cloth or rinse them under the tap.

- 5** Dry the attachments before you use or store them.

Storage

Do not wind the mains cord round the appliance.

- 1** Switch off the appliance and unplug it.
- 2** Put the appliance in a safe place and let it cool down.
- 3** You can store the appliance by hanging it from its hanging loop (Fig. 11).

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 12).

Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The appliance does not work.	There is a power failure or the socket to which the appliance is connected is not live.	Check if the power supply works. If it does, plug in another appliance to check whether the socket is live.
	The appliance has overheated and switched itself off.	Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance is not suitable for the voltage to which it is connected.	Make sure that the voltage indicated on the appliance corresponds to the local mains voltage.
	The mains cord is damaged	If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

繁體中文

簡介

恭喜您購買本產品並歡迎加入飛利浦！請於 www.philips.com/welcome 註冊您的產品，以善用飛利浦提供的支援。

飛利浦 SalonShine 負離子吹風機針對您個人需求量身打造，您在持續的溫和溫度下吹乾頭髮，秀髮健康閃亮不毛躁。內部的負離子器會在頭髮周圍釋放負離子，減低靜電，有助保護髮質，使頭髮閃亮、柔順、不毛躁。

一般說明 (圖 1)

- A** 進風柵口
- B** 出風柵口
- C** 風速調節滑動開關
 - O = 關
 - I = 專為造型所設計的輕柔氣流
 - II = 方便迅速吹乾頭髮的強力氣流
- D** 溫度滑動開關
 - ☉ = 快乾設定
 - ☺ = 護髮控溫設定
 - ☼ = 冷風護髮設定
- E** 冷風按鈕
- F** 有負離子指示燈的負離子按鈕
- G** 吊環
- H** 蓬鬆梳理造型器 (僅 HP4887)
- I** 集中出風口

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留說明以供日後參考。

危險

- 使用本產品時，請遠離水 (圖 2)！切勿靠近或在已盛水的浴缸、洗手台及水槽等容器上面。在浴室使用本產品後，請將插頭拔掉。因為即使產品電源關閉，產品仍然靠近水，還是容易產生危險。
- 請勿將金屬物品插入風口，以避免電擊。

警告

- 在您連接電源之前，請檢查本地的電源電壓是否與產品所標示的電源電壓相符。
- 請定期檢查電線的狀況。如果插頭、電線、或者產品本身發生損壞時，請勿使用本產品。
- 如果電線損壞，必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 本產品不適合供下列人士 (包括小孩) 使用：身體官能或心智能力退化者，或是經驗與使用知識缺乏者。他們需要由負責其安全的人員在旁監督，或指示產品的使用方法，方可使用。
- 請勿讓孩童將本產品當成玩具。

警告

- 為了加強安全，建議在通向浴室的電路迴路上安裝 30 毫安培以下的漏電斷路器 (RCD)。請洽詢合格的水電工。
- 不可阻塞風口。
- 本產品過熱時會自動斷電。請先拔除插頭並讓它冷卻數分鐘。檢查出風柵口是否被絨毛、頭髮阻塞，然後再開產品電源。
- 產品暫時擱置時，請務必先關閉電源，以確保安全。
- 請勿在假髮上使用本產品。
- 請勿將本產品用於其他用途。
- 用完本產品後，請務必將插頭拔掉。
- 請勿將電線纏繞在本產品上。
- 請勿使用其他製造商的任何配件或零件，或非飛利浦建議之配件或零件。如果您使用此類配件或零件，保固即會失效。
- 使用本吹風機時，可能會聞到一種特殊氣味。該氣味是負離子所造成的，對人體無害。

電磁波 (EMF)

本飛利浦產品符合電磁波 (Electromagnetic fields, EMF) 所有相關標準。只要使用方式正確並依照本使用手冊之說明進行操作，根據現有的科學研究資料，使用本產品並無安全顧慮。

使用此電器

吹整

- 1 將插頭插入插座。
- 2 將風速調節滑動開關調到想要的設定，即可啟動本產品。(圖 3)
- 將風速滑動開關調到 II，以便您以較快的速度吹乾頭髮。

- 將風速滑動開關調到 I，以便吹乾短髮或打理想造型。

- 3 將溫度滑動開關調到「快速吹乾」、「護髮控溫」或「冷風護髮」設定。

快乾設定 ☉

- 快乾設定讓您快速又安全地將沐浴後的濕髮吹乾。(圖 4)
- 建議您短暫地使用快乾設定，以避免頭髮過於乾燥。

護髮控溫設定 ☺

- 護髮控溫設定可讓您在持續且溫和的 57°C 中，迅速且溫和地吹乾頭髮。(圖 5)

冷風護髮設定 ☼

- 冷風護髮設定讓您吹乾頭髮同時保護頭髮，並增加頭髮的光澤感。(圖 6)

- 4 在距離頭髮一小段距離的地方，以上下移動的方式操作吹風機來吹乾頭髮。(圖 7)

- 5 頭髮吹乾時，按下瞬間冷風按鈕將吹風機調成冷風。這會關閉毛鱗片，讓秀髮更為亮麗。(圖 8)

- 6 將風速調節滑動開關調到 O，即可關閉產品。

負離子功能

負離子功能可提供額外的光澤感並減少毛躁與靜電現象。特別適合全乾或近全乾的頭髮。

- 1 按下負離子按鈕以啟動負離子功能。
- ▶ 負離子指示燈亮起時，代表負離子功能已經啟動。

配件

集中出風口

風力集中吹嘴可讓您對著圓梳或扁梳等造型工具直接吹整。

- 1 如果要裝上風力集中吹嘴，只要將它卡入本產品即可。(圖 9)
- 2 若要拆下風力集中吹嘴，將它從本產品上拔出即可。

蓬鬆梳理造型器 (僅 HP4887)

蓬鬆梳理造型器是為了溫和地烘乾頭髮並造型而設計，適用於直髮、捲髮及波浪髮型。蓬鬆梳理造型器可均勻地出風，讓您的頭髮看起來豐盈且有彈性，而且可提供額外的光澤感。

- 1 如果要裝上梳狀蓬鬆造型器，只要將它卡入本產品即可。(圖 10)
- 2 若要拆下梳狀蓬鬆造型器，將它從本產品上斜角拔出即可。

清潔

請勿讓產品浸入水或其他液體中，也不要在水龍頭下沖洗。

- 1 關閉產品電源，並拔除插頭。
- 2 請使用乾布來清潔吹風機。
- 3 請先將配件自產品取下，再清潔配件。
- 4 請使用濕布或在水龍頭下沖洗來清潔其他配件。
- 5 在您使用或收納配件前，請確保附件乾燥。

收納

請勿將電線纏繞在本產品上。

- 1 關閉產品電源，並拔除插頭。
- 2 請將本產品置於安全的地方，讓它完全冷卻。
- 3 您可以使用本產品的吊環將其吊起，以妥善收納。(圖 11)

環境保護

- 本產品使用壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。(圖 12)

保固與服務

若您需要相關服務或資訊，或是有任何問題，請瀏覽飛利浦網站，網址為 www.philips.com，或連絡您當地的飛利浦顧客服務中心 (您可以在全球保證書上找到連絡電話)。若您當地沒有顧客服務中心，請洽詢當地的飛利浦經銷商。

故障排除

本單元概述您使用本產品時最常遇到的問題。如果您無法利用以下資訊解決您遇到的問題，請聯絡您所在國家/地區的顧客服務中心。

問題	可能原因	解決方法
本產品無法運作。	電力供應有問題或產品的插座可能沒有電。	請檢查供電是否正常。如果供電正常，請插入另一個產品以檢查插座是否正常運作。
	產品過熱，開關已自行關閉。	在您重新開啟本產品之前，請檢查進風柵口，確定沒有被毛絮或毛髮等堵住。
	本產品的電壓與所連接的插座電壓不符。	請確認本產品的電壓與當地電壓相符。
	電線損壞	如果電線損壞，必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。