

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

HP8235




---

**User manual**

---

**PHILIPS**

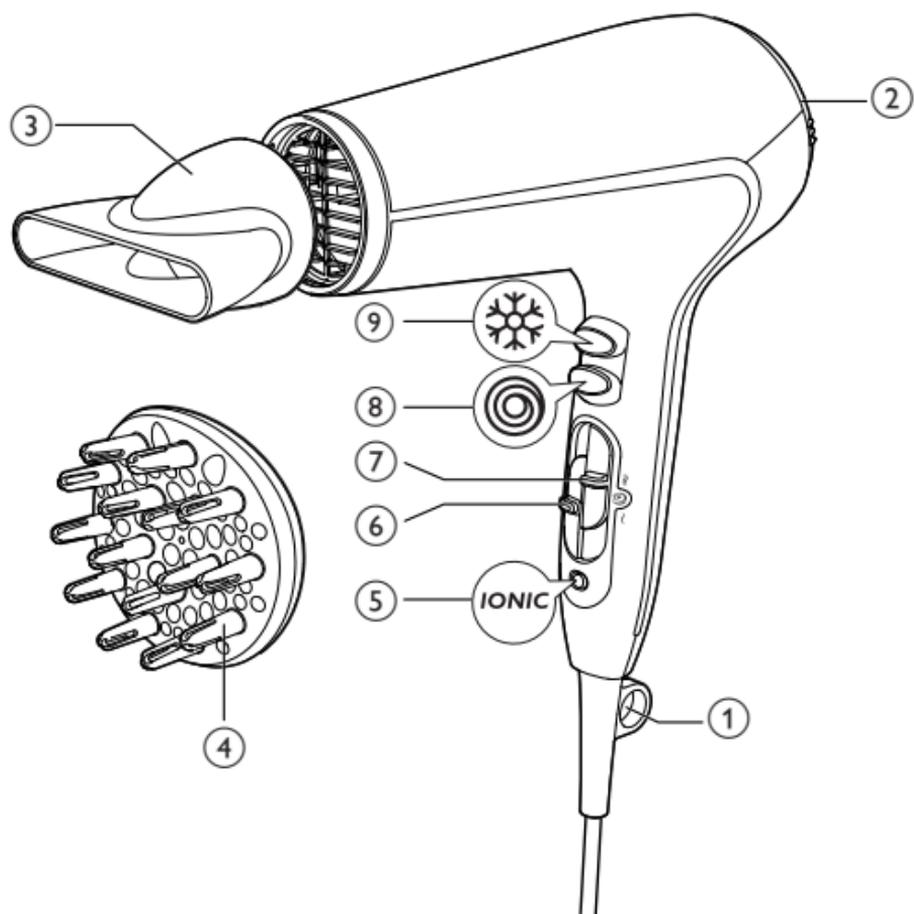

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.



- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by , a service centre or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the

appliance. Cleaning and user maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.

- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

---

## **Electromagnetic fields (EMF)**

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

# Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



## 2 Dry your hair

1 Connect the plug to a power supply socket.

2 Adjust the airflow switch (⑥) to **I** for gentle airflow and styling, or **II** for strong airflow and fast drying.

**Tip:** You can also use the turbo button (⑧) for extra powerful airflow. You can use the speed setting **I** for a more convenient quiet drying.

3 Adjust the temperature switch (⑦) to **☼** for hot airflow, **☽** for warm airflow, or **☾** for efficiently drying your hair at a constant caring temperature. Press the Cool shot button (⑨) for cool airflow to fix your style.

**The appliance with ionic function provides additional shine and reduces frizz.**

4 To turn the ionic function on or off, adjust the ionic slide switch (⑤) to **I** or **○**.

↳ The ionic function may produce a special odor. It is normal and caused by the ions which are generated.

### Nozzle

A nozzle enables you to direct the airflow straight at the brush or comb with which you are styling your hair, and to get perfect styling results and a shiny, polished look.

- To connect the nozzle (③), snap it onto the appliance.
- To disconnect the nozzle, pull it off the appliance.

## Volume diffuser

The volume diffuser is specially developed to gently dry both straight and curly or wavy hair.

The volume diffuser has a unique asymmetric design that is contoured to the head, making it easier and more intuitive to use.

- 1 To connect the volume diffuser ( ④ ), snap it onto the appliance. To disconnect the volume diffuser, pull it off the appliance.
- 2 To enhance your natural volume and maintain your curls, hold the dryer vertically to dry your hair.
- 3 To add volume at the roots, insert the pins into your hair in such a way that they touch your scalp.
- 4 Make rotating movements with the appliance to distribute the warm air through your hair.

### After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Take the air inlet grille ( ② ) off the appliance to remove hair and dust.
  - Rotate the air inlet grille anti-clockwise to take it off the appliance.
  - Rotate the air inlet grille clockwise to reattach it to the appliance.
- 4 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop ( ① ).

## 3 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## 4 Troubleshooting

---

Problem	Cause	Solution
The appliance does not work at all.	There may be a power failure or the power outlet to which the appliance is connected may not be live.	Check if there is a power failure and if the wall outlet is live.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

---



Specifications are subject to change without notice  
© 2013 Koninklijke Philips Electronics N.V.  
All rights reserved.

3140 035 34951

