


HP8270



EN User manual

ZH-CN 用户手册

PHILIPS

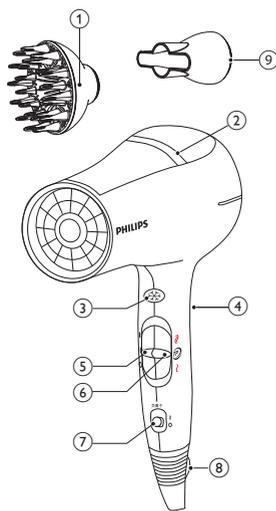

Specifications are subject to change without notice  
© 2013 Koninklijke Philips Electronics N.V.  
All rights reserved.

3140 035 34601



## English

### 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Always unplug the appliance after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.



### Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

### Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.




## 2 Introduction

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

The ActiveCare dryer has a unique and innovative new sensor technology called the TempPrecision sensor. This technology has been specifically designed to protect your hair from over-heating and is much gentler on the scalp than conventional dryers.

The TempPrecision sensor is an infrared sensor; that measures the temperature of your hair while drying it and will ensure that it never overheats your hair and scalp. This gives advanced protection to the hair from overheating the hair and the scalp and therefore keeps your hair healthier and shinier. We've already turned the sensor on so you can enjoy maximum protection right from the start.

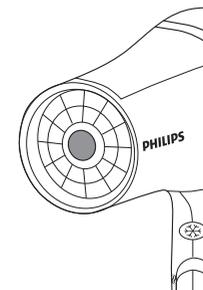

## 3 Dry your hair

- 1 Connect the plug to a power supply socket.
  - For precise drying, attach the nozzle (9) onto the hairdryer. The nozzle enables you to direct the airflow straight at the brush or comb with which you are styling your hair.
  - To enhance volume for curls and bouncy style, attach the diffuser (1) onto the hairdryer. To disconnect the attachment, pull it off the hairdryer.
  - You are recommended to use the styling nozzle (9) only for styling and use the Thermoprotect heat setting for this purpose.
- 2 Make sure the sensor switch (4) is on so that you are guaranteed to have protection from overheating the hair.
- 3 Adjust the airflow switch (5) and temperature switch (6) to suitable positions.

switch	settings	function
Temperature	☞ Quick dry	Dry shower-wet hair quickly
	☞ Thermoprotect	Provides the optimal drying temperature and gives additional protection from overheating the hair
	☞	Gently dry the hair
Airflow	☞	Strong airflow and fast drying
	I	Gentle airflow and styling
	○	Switch

↳ The LED (2) will always light up when the sensor is switched on.

- 4 Press the cool shot button ☞ (3) for cool airflow to fix your style.
- 5 The appliance is equipped with ion function, which provides additional shine and reduces frizz.
  - ↳ When the function is on, a special odor may be smelt. It is normal and caused by the ions which are generated.
  - To turn the ion function on or off, slide the IONIC switch (7) to I or O.



After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance by damp cloth.
- 4 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑧).
- 5 Remove the concentrator or diffuser before you clean the appliance.

## 4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com/welcome](http://www.philips.com/welcome) or contact the Philips Consumer Care Center in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## 5 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may not live.	Ensure the socket is live.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

## 简体中文

### 1 重要信息

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- 警告符号注释：禁止在洗澡或淋浴时使用。
- 本产品仅在浴室使用时，使用后拔掉插头，因为即使本产品开关断开后，接近水仍存在危险。
- 警告：不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 切勿将金属物体插入风口，以免触电。
- 切勿阻塞电吹风风口。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 使用后务必拔掉产品的插头。
- 切勿使用由其它制造商生产的，或未经 Philips 特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。



- 如果电源线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员来更换。
- 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们使用本产品进行监督或指导。
- 应照顾好儿童，确保他们不玩耍本产品。
- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。向 RCD 安装商咨询。
- 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。

### 电磁场 (EMF)

本产品符合与电磁场 (EMF) 相关的所有标准。目前的科学依据证明，如果正确使用并根据本用户手册中的说明进行操作，则本产品是安全的。


### 环境

弃置产品时，请不要将其与一般生活垃圾堆放在一起，应将其交给政府指定的回收中心。这样做有利于环保。



### 2 产品简介

感谢您的惠顾，欢迎光临 Philips! 为了您能充分享受 Philips 提供的支持，请在 [www.philips.com/welcome](http://www.philips.com/welcome) 上注册您的产品。ActiveCare 电吹风具有独特创新的全新传感器技术（称为 TempPrecision 传感器）。这项技术旨在保护头发不会过热，与传统电吹风相比，可让头发感觉更轻柔。TempPrecision 传感器是一种红外传感器，其会在吹干头发时测量头发的温度，从而确保头发和头皮绝不会过热。这项技术可为头发提供先进的保护，防止头发和头皮过热，从而让您的秀发更健康、更亮泽。我们已经打开了传感器，因此您从一开始就可以享受最完善的保护。

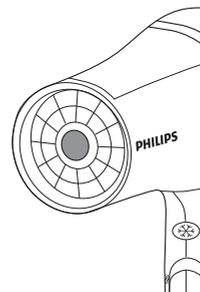

### 3 吹干头发

- 1 将插头连接至电源插座。
  - 要更精确地吹干头发，请将集风嘴 (⑨) 安装到电吹风上。集风嘴可以将气流集中到您用于制作发型的发梳上。
  - 要增加卷曲，制作卷发和弹性发型，可将扩散风嘴 (⑩) 安装到电吹风上。要卸下附件，将其从产品拉出即可。
  - 建议您仅在造型时使用造型集风嘴 (⑨) 并使用恒温护发热量设置。
- 2 确保传感器开关 (④) 处于打开位置，从而确保头发不会过热。
- 3 将风速开关 (⑤) 和温度开关 (⑥) 调至适当的位置。

开关	设置	功能
温度	快速吹干	快速吹干湿透的头发
	恒温护发	提供最佳的干燥温度和额外保护，防止头发过热。
		轻柔地吹干头发

气流	II	产生强风，快速吹干头发
	I	产生柔风，用于定型
	O	开关

- 传感器打开时，LED (②) 将始终亮起。
- 按冷风喷出钮 (③) 可获得冷风用于定型。
- 本产品具有负离子功能，可令秀发更加顺滑、亮泽。
  - 当此功能处于打开状态时，可能会发出一种特殊气味。这是正常情况，是由所产生的负离子导致的。
  - 要打开或关闭负离子功能，请将 IONIC 开关 (⑦) 滑至 I 或 O。

使用后:

- 1 关闭产品并拔下电源插头。
- 2 将产品置于隔热表面上，直至其冷却。
- 3 用湿布清洁本产品。
- 4 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环 (⑧) 将产品挂起存放。
- 5 清洁产品之前，请卸下集风嘴或扩散风嘴。

### 4 保修与服务

如果您需要了解有关信息（如更换附件的相关信息）或有任何疑问，请访问 Philips 网站 [www.philips.com/welcome](http://www.philips.com/welcome) 或与您所在国家/地区的 Philips 客户服务中心联系。电话号码可以在全球保修卡中找到。如果您所在的国家/地区没有 Philips 客户服务中心，请向当地的 Philips 经销商求助。

### 5 故障种类和处理方法

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能没有通电。	确保插座通电。
	产品可能过热，因此自动断电。	拔掉产品插头，让其冷却几分钟。再次打开产品电源之前，请检查出风口，确保没有被绒毛、头发等杂物堵塞。
	产品连接的电源电压可能与产品电压不符。	确保产品型号铭牌上标示的电压与当地电源电压相符。

## PHILIPS

产品 : 飞利浦电吹风  
 型号 : HP8270  
 额定电压 : 220V~  
 额定频率 : 50Hz  
 额定输入功率 : 2200W  
 生产日期 : 请见产品本体  
 产地 : 中国



珠海经济特区飞利浦家庭电器有限公司  
 中国珠海市三灶镇琴石工业区  
 邮政编码: 519040  
 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2009 及 GB17625.1-2003 制造