

PHILIPS

hand blender / chopper

4-speed control

stainless steel attachments



HR1358



PHILIPS



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using.

1. To protect against electrical shock, do not immerse cord, plug, or motor unit in water or other liquid. If Hand Blender falls into liquid, unplug from outlet immediately, then remove Hand Blender. Do not reach into the liquid without unplugging the unit first.
2. This appliance should not be used by children and care should be taken when used near children.
3. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
4. Make sure the Hand Blender is in the OFF position by releasing the power On/Off button, before unplugging or plugging into any electrical outlet.
5. Avoid contacting moving parts.
6. Do not operate this appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return the Hand Blender to the retail location where it was purchased for examination, repair, or adjustment.
7. Use this appliance only for its intended use as described in this manual. Do not use accessories or attachments, including canning jars, not recommended or sold by Philips Electronics North America Corporation, as they may cause fire, electric shock or injury.
8. Do not use outdoors or operate where oxygen is being administered or in the presence of explosive and/or flammable fumes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
10. This appliance is intended for household use ONLY; it is not for commercial or industrial use.

11. Any service of the Hand Blender should be performed by the retail location where it was purchased.
12. To disconnect, release the power "On/Off" button, then remove plug from electrical outlet. Remove plug by gripping the plug body and pulling it from the outlet. Never yank or twist the cord to unplug. Make sure the motor and blades completely stop turning before putting on or taking off parts.
13. During operation keep hands, hair, and clothing, as well as spatulas and other utensils away from attachments, blades and any mixing containers to prevent the possibility of severe injury to persons and/or damage to the Hand Blender. If scraping, folding, etc., is necessary, Hand Blender must be turned off, by releasing the power On/Off button and unplugged, and only use a rubber spatula.
14. Never leave the appliance unattended.
15. Blades are sharp. Handle carefully and with caution when removing, inserting or cleaning.
16. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time, to avoid splattering and burning. Always begin processing at the lowest speed setting.
17. To avoid any injury, never place cutting blade on base without first putting chopper bowl properly in place.
18. Be certain chopper lid is securely locked in place before operating chopper. Do not attempt to remove lid until blade has stopped rotating completely.
19. When using mixing bowl, beaker or chopper, check for presence of foreign objects before using. Always make sure that rubber sealing ring is in the correct position on chopper unit before using. The blender base/motor unit is intended for use only with attachments provided. Do not substitute with any other attachments.

20. Do not mount the wall holder over or near any portion of a heating or cooking appliance or a sink or basin.
21. Do not attempt to defeat the chopper lid interlock mechanism.

SAVE THESE INSTRUCTIONS

SPECIAL POLARIZED PLUG INSTRUCTIONS

This Philips Hand Blender has a polarized plug for an added safety feature (one blade is wider than the other). To reduce the risk of electrical shock:

- Plug will fit into polarized outlet only one way.
- If plug does not properly fit outlet at first, reverse it.
- If plug still does not fit, contact a qualified electrician.

DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE

The maximum rating is 200 watts, based on using the stainless steel blending bar that draws the greatest load (electrical power or current) and all other recommended attachments may draw significantly less electrical power or current.

Table of Contents

Features	2
Important	3
Using the Hand Blender	3-4
Using the Chopper	4
Using the Whisk	5
Questions & Preparation Times	6
Wall Mount Instructions	6-7
Cleaning	7
For Assistance	7
Warranty	Back Cover

Features

4 Speed Control Settings:

4=High Speed


3=Mid Speed

2=Normal Speed

1=Low Speed



Important:

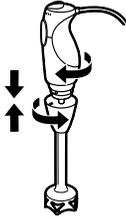

Assemble the Hand Blender properly before plugging it into the electrical outlet.

Unplug the Hand Blender immediately after use, i.e. before unscrewing the stainless steel blending bar.

Avoid touching the SHARP blades, especially when the Hand Blender is plugged in.




Never immerse the motor unit in water.

Keep the appliance out of the reach of children.

Do not exceed the quantities and preparation times indicated on the table (located on page 6).

If the blades get stuck, release the power On/Off button and **UNPLUG THE APPLIANCE** before removing the ingredients that are blocking the blades.


Let hot ingredients cool down before chopping them or pouring them into the beaker (max. temperature 80°C/176°F).

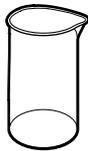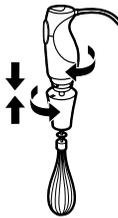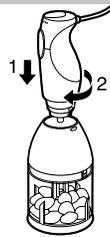


Using the Hand Blender

The Hand Blender is intended for:

- Blending fluids, such as dairy products, sauces, fruit, juice, soups, mixed drinks, shakes.
- Mixing soft ingredients, such as pancake batter or mayonnaise.
- Pureeing cooked ingredients, such as for making baby food. To obtain smoother results when pureeing add liquids when recipe indicates.

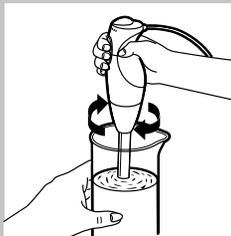

- I** Immerse the blade guard completely in the ingredients.

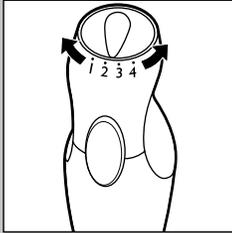


- 2** Switch the Hand Blender on by pressing and holding the power On/Off button and selecting the most suitable speed setting. Blend the ingredients by moving the appliance slowly up and down and in circles. This Philips Hand Blender has a Twist & Slice feature meaning one blade twists down, sharply cutting through ingredients, while the other slices sideways. Ingredients move continuously from bottom to top.

Note: Do not pull Hand Blender out of the ingredients or mixture while running to avoid splashing. Do not put pits, bones, or other hard ingredients into the mixing blend as they could damage the blade.

Always hold onto the Beaker when blending to avoid Beaker toppling over.

- 3** The speed settings allow you to adjust the speed of the Hand Blender to obtain optimal results. See the table for the recommended speed settings in section "Quantities and Preparation Times." Release the power On/Off button and unplug after using.


Using the Chopper

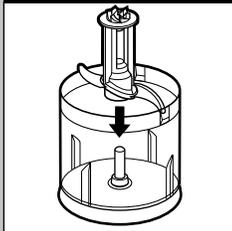

The chopper attachment can be used for chopping ingredients such as nuts, meat, onions, hard cheese, dried fruits, chocolate, garlic, herbs, dry bread, etc.


- 1** Insert cutting blade into chopping unit.

Cut large ingredients into pieces of approximately 1/2 inch/ 1.5 cm before processing.

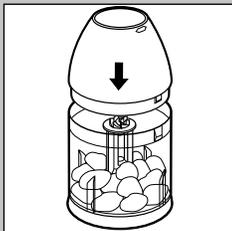

Note: Do not chop large ice cubes or extremely hard food, such as nutmeg, coffee beans and grains.

- 2** Secure the chopper coupling unit lid by making sure it has been properly fitted onto the chopper.

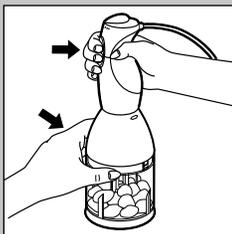


- 3** Attach the Motor Unit to the chopper coupling unit lid. Plug Motor Unit into 120VAC outlet. Press and hold the power On/Off button to start chopper unit.


If the ingredients stick to the chopper wall, loosen them by adding liquid or using a spatula. Make sure the cutting blade has stopped turning completely before inserting a spatula or other utensil.

Release the power On/Off button and unplug after using.

Using the Whisk

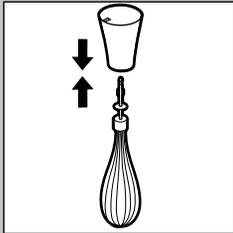


- 1 Attach whisk to coupling unit.

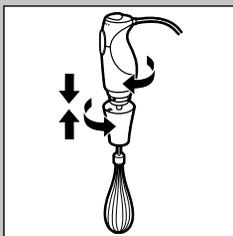

- 2 Attach Motor Unit to the Whisk. Plug Motor Unit into 120V AC outlet. Press and hold the power On/Off button and select desired speed.

To obtain a good whipping result, please use a wider bowl.

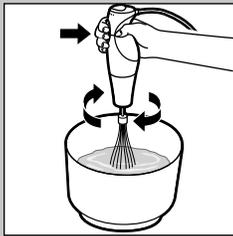


To avoid splashing, insert the whisk into the bowl, switch the appliance on and whip the ingredients by slowly moving the Hand Blender in circles.

- 3 Release the power On/Off button and unplug after using.

Quantities and Preparation Times


		Hand Blender		Chopper	
Ingredients	Quantity	Time	Speed	Quantity	Time Speed
Onions & eggs				1.8 - 3.5 oz 50 - 100 g	10 sec 1
Meat & fish	3.5 - 5 oz 100 - 150 g	1 min	3	1.8 - 7 oz 50 - 200 g	15 sec 3
Herbs				0.4 - 0.8 oz 10 - 20 g	10 sec 2
Fruits & vegetables	3.5 - 7 oz 100 - 200 g	1 min	4	1.8 - 7 oz 50 - 200 g	1 min 4
Baby food				1.8 - 5.3 oz	1 min 4
Soups & Sauces	100 - 250 g	1 min	4	50 - 150 g	
Cheese & nuts	1.8 - 3.5 oz 50 - 100 g	1 min	4	1.8 - 3.5 oz 50 - 100 g	1 min 4
Batters	3 - 8 oz 100 - 250 ml	1 min	3		
Shakes & mixed drinks	3 - 8 oz 100 - 250 ml	1 min	3		
Whisk					
Ingredients	Quantity	Time	Speed		
Cream	16 oz 500 ml	1.5 min	3		
Egg Whites	5 eggs	2 min	4		

Wall Mount Instruction

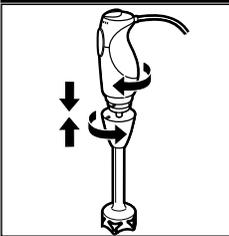


- 1 Attach the motor unit to the blade guard until it locks into place.

Note: When selecting a location to mount the wall holder, be sure to leave enough room above the wall holder to remove the Hand Blender. Also leave room below the holder to allow the Hand Blender to hang freely.

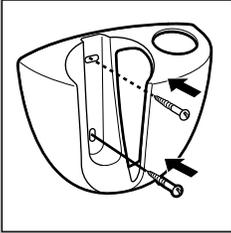

- 2** A wall holder, screws and plastic anchors are provided. The wall holder should be mounted vertically on the wall as pictured. Do not mount the storage bracket/unit over or near any portion of a heating or cooking appliance or a sink or basin.

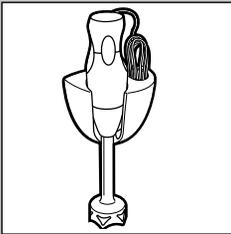

- 3** After mounting the wall holder place Hand Blender on the wall holder. Then wrap cord around and place it in the cord storage.

Cleaning

- 1** Clean the beaker, the lid, the chopper, the blade unit of the chopper and the whisk in the dishwasher or in warm soapy water.

It is recommended to remove the rubber ring from the chopper before cleaning.

- 2** The blade unit and the whisk of the Hand Blender can also be cleaned by immersing the blade unit and the whisk in warm soapy water and letting the appliance run for a while, on low speed setting. DO NOT immerse motor unit in water.

- 3** Wipe the motor unit, the coupling unit lid of the chopper and the coupling unit of the whisk with a damp cloth. Do not immerse these parts in water!

For Assistance

For assistance call toll free:

1-800-243-7884
or our website: www.philips.com

FULL ONE YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips product, model HR1358 (except cord), against defects in materials or workmanship for a period of one year from the date of purchase.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR UNAUTHORIZED SERVICE OF ANY TYPE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to address warranty issues, simply take the product back to the retail location where it was purchased.

* Read enclosed instructions carefully.

Manufactured for:
Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015

For Assistance call 1-800-243-7884
or visit our website www.philips.com

MADE IN CHINA.



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

LISTED

Twist & Slice is a Trademark of Philips Electronics North America Corporation.
PHILIPS and Philips Shield are Registered Trademarks of Koninklijke Philips Electronics N.V.

© 2001 Philips Electronics North America Corporation.
All Rights Reserved.

Printers Notes:

Color :

- (1) Black
- (2) Pantone 548 CV (Pantone 548 Screen of 30%)

Font Usages:

Gillsans <Plain>

Other:

Trapping Preference

Auto Method - Absolute

Overprint Limit - 95%