


PHILISHAVE

rechargeable
HS 355

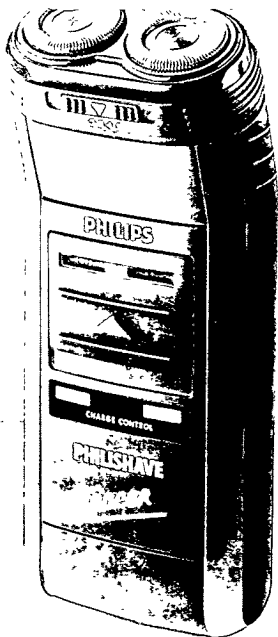

PHILIPS



ENGLISH**Page 6**

- Keep pages 4, 5 and 74 open when reading these operating instructions.

DEUTSCH**Seite 12**

- Schlagen Sie beim Lesen der Gebrauchsanweisung Seite 4, 5 und 74 auf.

NEDERLANDS**Pagina 18**

- Sla bij het lezen van de gebruiksaanwijzing de pagina's 4, 5 en 74 open.

ITALIANO**Pagina 24**

- Prima di usare il rasoio, aprite le pagine 4, 5 e 74 e leggete attentamente le istruzioni per l'uso.

ESPAÑOL**Página 30**

- Desplegar las páginas 4, 5 y 74 al leer las instrucciones de manejo.

PORTUGUÊS**Página 36**

- Durante a leitura do modo de emprêgo, desdobre e verifique as páginas 4, 5 e 74.

DANSK**Side 42**

- Hold side 4, 5 og 74 opslået mens De læser brugsanvisningen.

NORSK**Side 48**

- Slå opp på bruksanvisningen side 4, 5 og 74 før De leser videre.

SVENSKA**Sid 54**

- Ha sidan 4, 5 och 74 utvikt när ni läser bruksanvisningen.


SUOMI**Sivu 60**







- Pidä sivut 4, 5 ja 74 auki samalla kun luet käyttöohjetta.

FRANÇAIS**Page 66**

- Pour le mode d'emploi: dépliez les pages 4, 5 et 74.

1

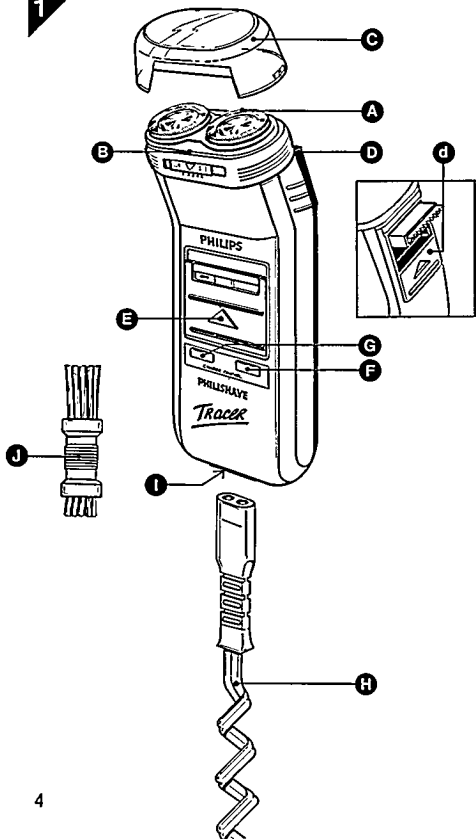

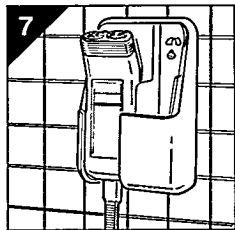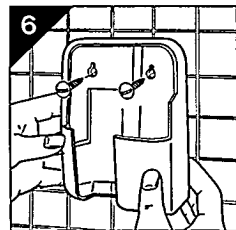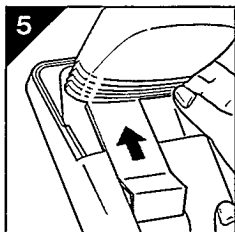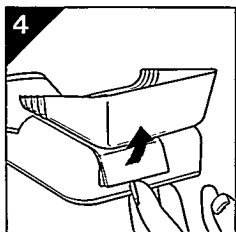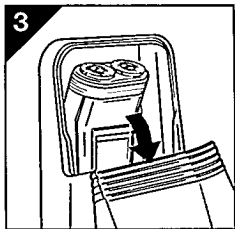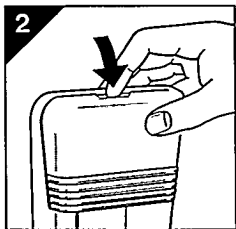

English

You now own an excellent Philishave® shaver featuring the unique Philishave Rotary Action shaving system.

IMPORTANT

- Please study carefully all the drawings when reading the instructions for use (pages 4, 5 and 74).
- If using the Philishave system for the first time, please bear in mind that your skin may need about two weeks to become fully accustomed to the new shaving method.
- Regular cleaning and maintenance ensures optimal performance and prolongs the shaver's working life.
- Do not allow the shaver to come into contact with water.
- Do not leave the appliance in a very warm place or in direct sunlight.

General description (fig. 1 on page 4)

- A** Shaving unit with two shaving heads. Each shaving head consists of a guard and a cutter.
- B** Comfort control (slide) to adjustment for skin sensitivity.
Start with the position for the most sensitive skin (arrow at the lowest number) and then try successive positions to find the one that suits you best.
- C** Protective cap. Replace the protective cap on the shaving unit after use.
- D** Trimmer. The trimmer is operated whilst the motor is running.
Switch on by moving the slide (d) in the direction of the arrow.
Switch off by moving the slide in the opposite direction.
Brush the trimmer thoroughly after use.

- E On/off switch.** The shaver is prevented from being switched on accidentally by the locking device incorporated in the switch.
On: keep the locking knob on the switch pressed-in and slide the switch upwards. (Indication "On" becomes visible.)
Off: slide the switch downwards. (Indication "Off" becomes visible.)
- F Charging lamp (green).** (See section "Charging".)
- G Red lamp.** When the built-in rechargeable batteries are almost empty, this lamp will light up. After switching off, the lamp will flash for about 4 secs. as a reminder to recharge the shaver.
- H Mains cord.** Using the mains cord you can operate the shaver on any mains voltage between 100 and 240 Volts AC/DC (charging and shaving).
- I Connector.** When using the mains cord insert the small plug firmly into the connector up to the indication mark.
- J Brush.** Refer to section "Maintenance and Cleaning" for correct usage.

Cassette (see the drawings on page 5)

How to open

Press on the arrow (fig. 2) and open the lid (fig. 3).

How to remove the lid

Press on the arrow (fig. 2) and open the lid (fig. 3).

Move the lip at the bottom side in the direction of the arrow (fig. 4) to dislock the lid.

Slide the lid in the direction of the arrow (fig. 5) to remove.

Wall-mounting

When wall-mounted you can use the cassette as a bracket (fig. 6 and 7). Screw in firmly, so that the cassette cannot be slid upwards too easily.

It is possible to charge the shaver while in this wall bracket.

Shaving tips

for a close, quick and comfortable shave

- The best results are obtained if the skin is dry. So shave preferably before washing or some time afterwards.
- If needed, apply a preshave lotion. This can be particularly helpful if the climate is warm and humid.
- The Philishave system gives you a quick, close and comfortable shave. Just move the shaving unit quickly over the skin.
- For the best results, stretch the skin to bring the hairs into an upright position.
Then move the shaving unit against the direction of the growth of the hairs.
- Use the trimmer for grooming sideburns, moustache and beard.

Charging

- Keep the cassette open if you have the appliance in it while (re)charging.
 - Slide the on/off switch (E) downwards (position "Off").
 - Connect the shaver to the mains:
 - First insert the small plug into the connector (I).
 - Then connect to the mains outlet.
- The green lamp (F) will light up.
- During half an hour the batteries are quick-charged.
 - Then the green pilot lamp will start blinking.
- Prolonged charging will not harm the shaver.
- A full charge allows cordless shaving for about 2 weeks (average shaving time 3 minutes per day). Regular cleaning has a beneficial effect on this (See section "Cleaning and maintenance".)

The built-in rechargeable batteries: life-time and properties

- We advise you to charge the built-in rechargeable batteries at temperatures between 5° C and 35° C (40° F and 95° F respectively).
Charging at temperatures outside this range will reduce their life-time.

- The capacity of rechargeable batteries decreases over the course of time. In general, after about five years a full charge will give half the original number of shaves.

Shaving when the batteries are empty

Directly from the mains

- Slide the on/off switch (E) downwards (position "Off").
- Connect the shaver to a mains outlet.
- Wait a few seconds and switch the shaver on.

Quick charging (for one cordless shave)

- Charging the shaver for 3 minutes will give sufficient energy for one cordless shave lasting about 3 minutes. (See section "Charging".)

Maintenance and Cleaning

(see the drawings on page 74)

- Always switch off the shaver before carrying out maintenance or cleaning.
- The rotating cutter blades of the Philishave system retain the shaved stubble neatly inside the shaving unit. In general, the shaving unit needs cleaning only once a week.

Every week

Fig. 8: Clean the guard slots using the short bristled end of the brush.

Fig. 9: Pull the shaving unit from the shaver.

Fig. 10 & 11: Clean the inside using the long bristled end of the brush.

Every three months

(Note: If your skin is of an oily type, or if you have been using a pre-shave lotion, this procedure should be carried out once a month.)

Fig. 12: Pull the shaving unit from the shaver.

Fig. 13: Hold the elevated part of the cluster frame. Press the two sections together and lift the cluster frame out of the shaving unit.

Fig. 14: Slide one shaving head (guard and cutter) out of the frame. Keep your finger under the shaving head to prevent the cutter from falling out of the guard.

Fig. 15: **Do not mix up the cutters and guards between the shaving heads as these have been especially ground to match each other.**

If the shaving quality should have decreased noticeably after cleaning, then change only the cutters once more.

Fig. 16: Hold the cutter as shown...

Fig. 17: ...and brush it clean carefully as illustrated. Use only the short bristled end of the brush.

Fig. 18: Clean the inside of the guard, using the long bristled end of the brush.

Fig. 19: Slide the shaving head back into place. Then clean the other shaving head in the same way.

Fig. 20: Replace the cluster frame with the shaving heads. ("Click".)

Fig. 21: Do not apply any pressure to the guards when replacing the shaving unit.

Reset the comfort control slide (B).

Fig. 22: If you have used a degreasing liquid (e.g. alcohol) to clean the shaving heads, or if your skin is very dry, lubricate the guards with one drop of light machine oil.

Every six months

Fig. 23: Apply two drops of light machine oil onto the teeth of the trimmer.

Replacement shaving heads

Worn or damaged shaving heads must be replaced only with original Philips replacement heads type HP 1917.

*

The rechargeable batteries inside this appliance contain substances which may pollute the environment. Please dispose of your discarded appliance properly.

*

Guarantee and Service

Your new shaver is guaranteed for **one year** against defects due to faulty workmanship or materials. Therefore, please complete and return the guarantee form immediately after purchase.

 
 
 
 
 
 
For guarantee and service you should apply to your dealer. For service during a period abroad, the international Philips organization is there to help you. (In U.S.A.: Norelco.)

This guarantee is no longer valid in case of alteration or repair by any unauthorized persons.

For guarantee conditions on shavers bought in the U.K. see separate purchase card.

These statements do not affect the statutory rights of the consumer.

This product is manufactured to comply with the radio interference requirements of the council directive 87/308/EEC.

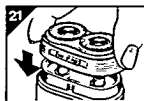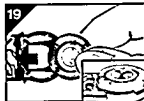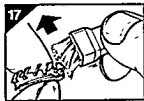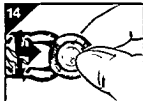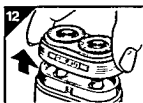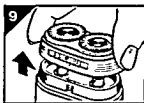



4222 000 37543