

4 Update software

Before you update the software of this player, check the current software version:

- Press **⬆**, and then select **[Setup]** > **[Advanced]** > **[Version Info.]**, and press **OK**.

Update software via the Internet

- 1 Connect the player to the Internet (see "Set up a network").
- 2 Press **⬆**, and select **[Setup]**.
- 3 Select **[Advanced]** > **[Software Update]** > **[Network]**.
 - ↳ If an upgrade media is detected, you are prompted to start the update.
- 4 Follow the instructions on the TV screen to update the software.
 - ↳ When the update is complete, this player automatically turns off and on again.

Update software via USB

- 1 Check the latest software version on www.philips.com/support.
 - Search for your model and click on "Software and drivers".
- 2 Download the software into a USB storage device.
 - ① Unzip the download, and make sure that the unzipped folder is named **"UPG "**
 - ② Put the **"UPG "** folder in the root directory.

- 3 Connect the USB storage device to the **⚡** (USB) connector on this player.
- 4 Press **⬆**, and select **[Setup]**.
- 5 Select **[Advanced]** > **[Software Update]** > **[USB]**.
 - ↳ If an upgrade media is detected, you are prompted to start the update.
- 6 Follow the instructions on the TV screen to update the software.
 - ↳ When the update is complete, this player automatically turns off and on again.



Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage this player.