

7 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.

Caution

- **Note:** Before updating your product to V1.10.00, please ensure that your product is updated to V1.06.03 first. A direct update from an older version than v1.06.03 to V1.10.00 may cause product to malfunction. Both software version are available in the firmware download section from the Philips support site.
- Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

READ ME FIRST

Before upgrading your product, please check the current software version on your product.

- 1) Unzip the downloaded file from the Philips Support Site
- 2) There will be two files named
XXXXXX_V1.06.03_DRM.zip and
XXXXXX_V1.10.00_DRM.zip
- if the software version is older than V1.06.03, please proceed to Step (3)
- if the software version is V1.06.03 or later, please proceed to step (6)
- 3) Unzip the file XXXXXX_V1.06.03_DRM.zip and copy the content (including folder) into the root of the USB drive.
- 4) Insert USB drive into the product USB port and proceed to upgrade the software (detailed instructions, please refer to the Firmware Instruction Notice)
- 5) Once the product upgrade is completed, check the software version on the product to confirm that upgrade is successful. Proceed to next step
- 6) Unzip the file XXXXXX_V1.10.00_DRM.zip and copy the content (including folder) into the root of the

USB drive.

- 7) Insert USB drive into the product USB port and proceed to upgrade the software (detailed instructions, please refer to the Firmware Instruction Notice)
- 8) Once the product upgrade is completed, check the software version on the product to confirm that upgrade is successful

Check software version

Check the version of the current software installed on your home theater.

- 1 Press  (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Version information].
 - » The software version is displayed.
 - 'System SW' displayed indicates the overall software version. 'Subsystem SW' indicates the version of different features. For example, if 'Subsystem SW' is '35-00-00-05', the last two digits ('05') indicate the current version of the onscreen help installed on your home theater.

Update software through USB

What you need

- A USB flash drive that is FAT or NTFS-formatted, with at least 256MB of memory. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips.com/support.
- 3 At the Philips Support website, find your product and locate the Software and

drivers.

» The software update is available as a zip file.

- 4 Save the zip file in the root directory to your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
 - » The files are extracted under the **UPG** folder of your USB flash drive.
- 6 Disconnect the USB flash drive from your computer.

Step 2: Update the software

Caution

- Do not switch off the home theater or remove the USB flash drive during the update.

- 1 Connect the USB flash drive containing the downloaded file to your hometheater.
 - Make sure that no disc is inside the disc compartment.
- 2 Press  (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Advanced] > [Software update] > [USB].
- 5 Follow the onscreen instructions to confirm the update.
 - » Update process takes about 5 minutes to complete.
 - » Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

1. Connect your home theater to home network with a high-speed Internet access (see 'Connect and set up a home network' on page 13).
2. Press  (Home).
3. Select [Setup], and then press OK.
4. Select [Advanced] > [Software update] > [Network].
 - » If an upgrade media is detected, you are prompted to start or cancel the update.
 - » Downloading of the upgrading file may take long, depending on your home network condition.
5. Follow the onscreen instructions to confirm the update.
 - » Update process takes about 5 minutes to complete.
 - » Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

Update software through the Internet