

Update your software

Philips continually tries to improve its products. To make sure that your product has the latest features and fixes, update it with the latest software. After you upgrade your software, you need to reconfigure basic settings for your home theater.

You can get software updates from your dealer or from www.philips.com/support.

In this update

This is a software update for:

Model: [HTS2500/05](#)

System software Version: [25.12](#)

This update addressed the following issues:

- Improved system performance

What you need

Before you update the software, make sure that you have the following:

- A USB storage device with about 5 Mbytes of free space. The USB must be FAT or DOS-formatted. Do not use a USB hard drive for the software update.
- A PC with internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows®, or Stuffit® for Macintosh®).

Step 1: Check the current software version

1. Press **SETUP**
2. Select the { **Preferences** } menu.
3. Select { **Version Info** }, and press OK to check the software version of this unit..
4. The software version is displayed.
5. If the software version is lower than indicated version above, upgrade the software. Otherwise, do not upgrade.

Step 2: Download the latest software

6. Connect a USB storage device to your PC.
7. On your PC, navigate to www.philips.com/support.
8. Find your product and locate the available the software and drivers.

9. If the software version is later than the version on your product, click the software update.
10. Accept the license agreement, and save the ZIP file to the USB storage device.
11. Using the archive utility, extract 'HTS2XXXMTK.bin', 'HTS2XXXMCU.bin' and 'HTS2XXXMCU.bin' to the root directory of the USB storage device.
12. Disconnect the USB storage device from the PC.

Step 3: Update the software using USB

During the software update, do not switch off the home theater or remove the USB storage device.

Do not press any buttons or interrupt the mains supply during the upgrading process, otherwise the HTS may become defective.

1. Connect the USB storage device to your home theater.
2. Switch on your home theater and TV, and switch your TV to the correct source for your home theater.
3. Press **USB** on the home theater remote control.
4. A dialogue will now appear - follow the instructions to update the software of your HTS.
5. During upgrading, the red LED of the standby button will blink;
6. After the upgrading is completed, the set will go into standby mode automatically. Then you may remove the USB flash storage device.
7. When the update is finished, the home theater automatically switches to standby. If it does not, disconnect the power cord for a few seconds and then reconnect it.
8. If you see the message [No valid upgrade software found!], check that:
 - The software is meant for your home theater.
 - The 2 bin files are in the root directory of the USB storage device and the name is not changed.
9. When the HTS displays "No USB" on screen, please try with another USB device which can be detected by the HTS.
10. If the update fails, try again. If it fails again, contact Philips Consumer Care.
11. Disconnect the USB storage device and switch on the home theater.