

# Update your software

---

Philips continually tries to improve its products. To make sure that your product has the latest features and fixes, update it with the latest software. After you upgrade your software, you need to reconfigure basic settings for your home theater.

You can get software updates from your dealer or from [www.philips.com/support](http://www.philips.com/support).

## What you need

Before you update the software, make sure that you have the following items:

- A USB storage device with at least 5 Mbytes of free space. Do not use a USB hard drive for the software update.
- An archive tool that supports the ZIP file format (for example, WinZip® for Microsoft® Windows®, or StuffIt® for Macintosh®).

## Step 1: Check the current software version

1. Press  SETUP.
2. Select [Preference Setup] > [Version Info.], then press OK.
  - » The software version is displayed in a screen similar to the following screen.

Current Model : HTS5120/xxV1.5S

3. If the software version is lower than System Software Version: V1.5S, you can update the software. Otherwise, you do not need to update.

## Step 2: Download the latest software

1. Connect a USB storage device to your PC.
2. On your PC, navigate to [www.philips.com/support](http://www.philips.com/support).
3. Find your product and locate the available the software and drivers.
4. Accept the license agreement, and save the ZIP file to the USB storage device.
5. Using the archive utility, extract 'HTS5120.bin' to the root directory of the USB storage device.
6. Disconnect the USB storage device from the PC.

## Step 3: Update the software

During the software update, do not switch off the home theater or remove the USB storage device.

If the power supply goes off during the update, do not remove the USB storage device from the home theater. The update will continue

[when the power supply is restored.](#)

1. Connect the USB storage device to your home theater.
2. Switch on your home theater and TV, and switch your TV to the correct source for your home theater.
3. Press USB on the home theater remote control.
4. Follow the instructions on TV to update the software.
  - » When the update is complete, the home theater automatically switches to standby. If it does not, disconnect the power cord for a few seconds and then reconnect it.
  - If the update fails, try again. If it fails again, contact Philips Consumer Care.
5. Disconnect the USB storage device and switch on the home theater.

#### **In this update**

This update addresses the following issues:

- [Solved MP3 audio dropout for USB playback](#)