

Introduction

The upgrade version of this software is **Version 26** and can be used to upgrade Philips HTS9800W/12, HTS9800W/37 and HTS9800W/55 to the latest status.

The upgrade allows the HTS9800W improves CDDA recognition, SCART detection and Bass/Treble.

Upgrade Procedure

Step 1 Check your current firmware version

- 1 Power up the set in **DISC** mode and make sure there is no disc inside the set, then press **<DISPLAY>** button on the remote control.
- 2 The software version and other information are display on the TV screen as follows:
G69MI VXX 9800-XX X XX
Servo : XXXXXXXX Reg:X
HDCP XXXX (PASS or FAIL)

Example :

G69MI V26 9800-12 2 08 -> Indicates Software version 26, stroke version 12, OTP version 8.

Servo : 94110000 Reg:2 -> Indicates Servo version 94110000 and Region code 2.

HDCP PASS -> Indicates HDCP pass.

Note:

Do **NOT** upgrade your set if the software version number is higher than V26!

The firmware information is also useful when you call Philips Customer Care Center.

Step 2 Download Firmware upgrade

- 1 Check you have the following tools:
 - PC (Pentium III 300MHz processor or higher)
 - CD-R/RW writer and writing application software
 - Blank CD-R or CD-RW disc
 - Internet access (broadband or high speed)
- 2 Click the link to download Firmware Upgrade to your PC




- 3 Unzip the .zip file
 - i) Do not rename the filename.
 - ii) Visit <http://www.winzip.com/> for downloads if you cannot open the .zip file.

Step 3 Burning Upgrade on CD-R / CD-RW

- 1 Extract the files by unzipping the zipped file.
- 2 Write the extracted files – not the zip file – onto a blank CD-R or CD-RW disc, using the following settings:
 - File System CD-ROM Joliet
 - File name length : max 31 chars (ISO Level 2)
 - Mode : 2/XA
 - Character set : ASCII
 - Single session
 - Write Speed : Low
- 3 Finalize the disc. (The application may do this automatically.)


Tip: For more information on burning software we suggest you can refer to two popular burning software programs

www.nero.com
www.easycdcreator.com

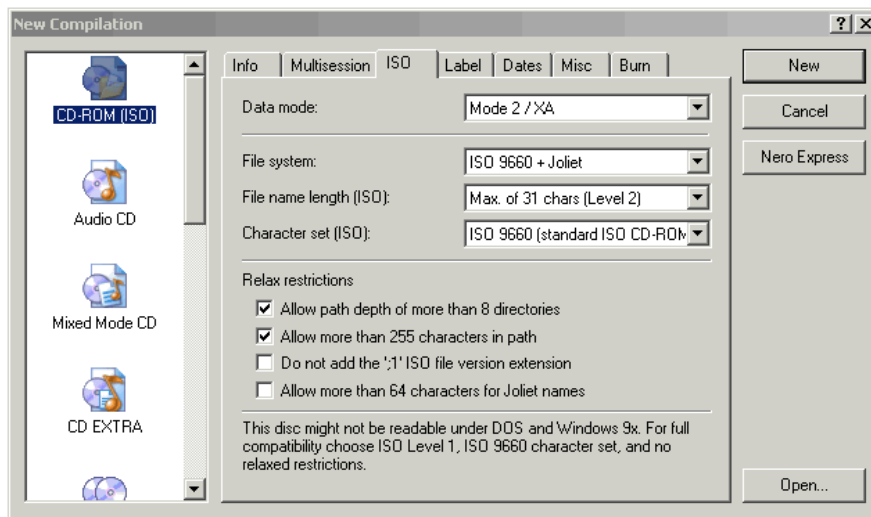


Using Nero Burning Rom

Please make sure you are using **Nero Burning Rom** and not Nero Express. If necessary, you can start Nero Burning Rom directly from the Nero folder in your Windows Start Menu.

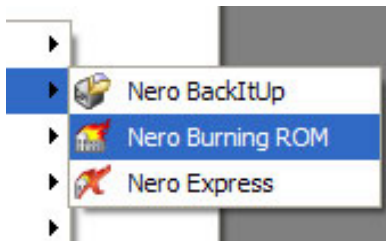


1. Insert a blank CD-R or CD-RW disc
2. Open Nero Burning Rom
3. Select '**Burn Image**' from the '**Recorder**' menu

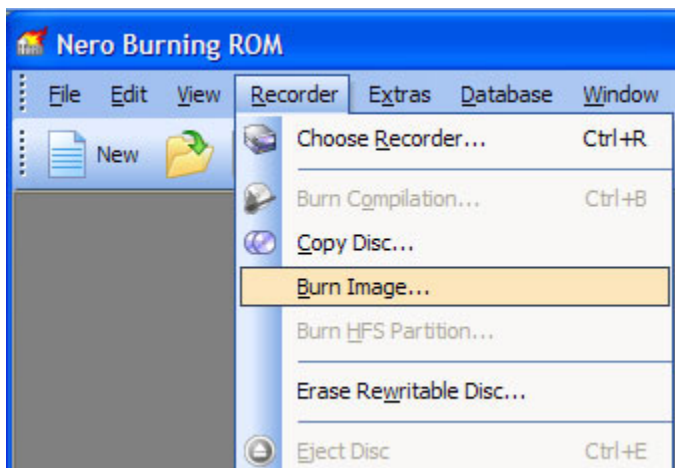


4. Select the unzipped file that you saved
5. Click **'Burn'**
→ The Firmware upgrade will now be burned onto the disc

Using CD Creator

1. Insert a blank CD-R or CD-RW disc
2. Open CD Creator
3. Select **'Create Data CD'**
4. Select **'Record CD from CD image'** in the **'File'** menu

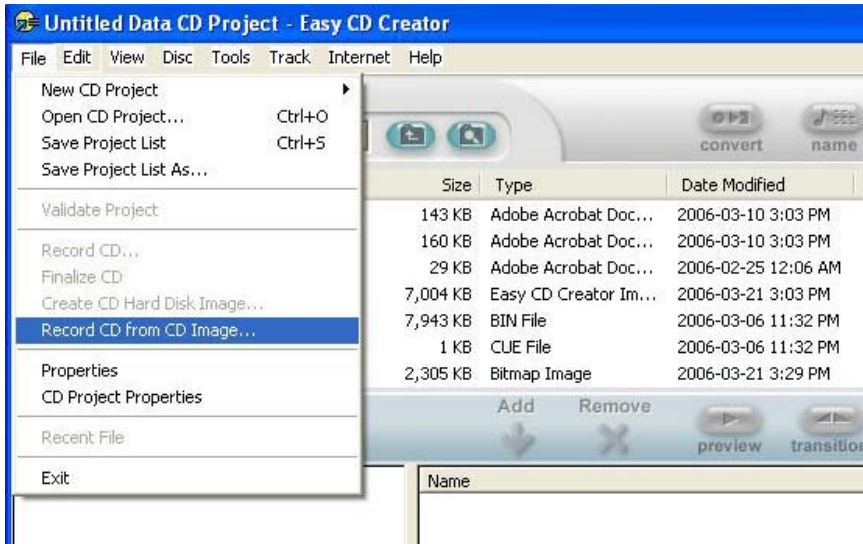

5. Select the unzipped file that you saved
6. Click **'Start Recording'**
→ The Firmware upgrade will now be burned onto the disc

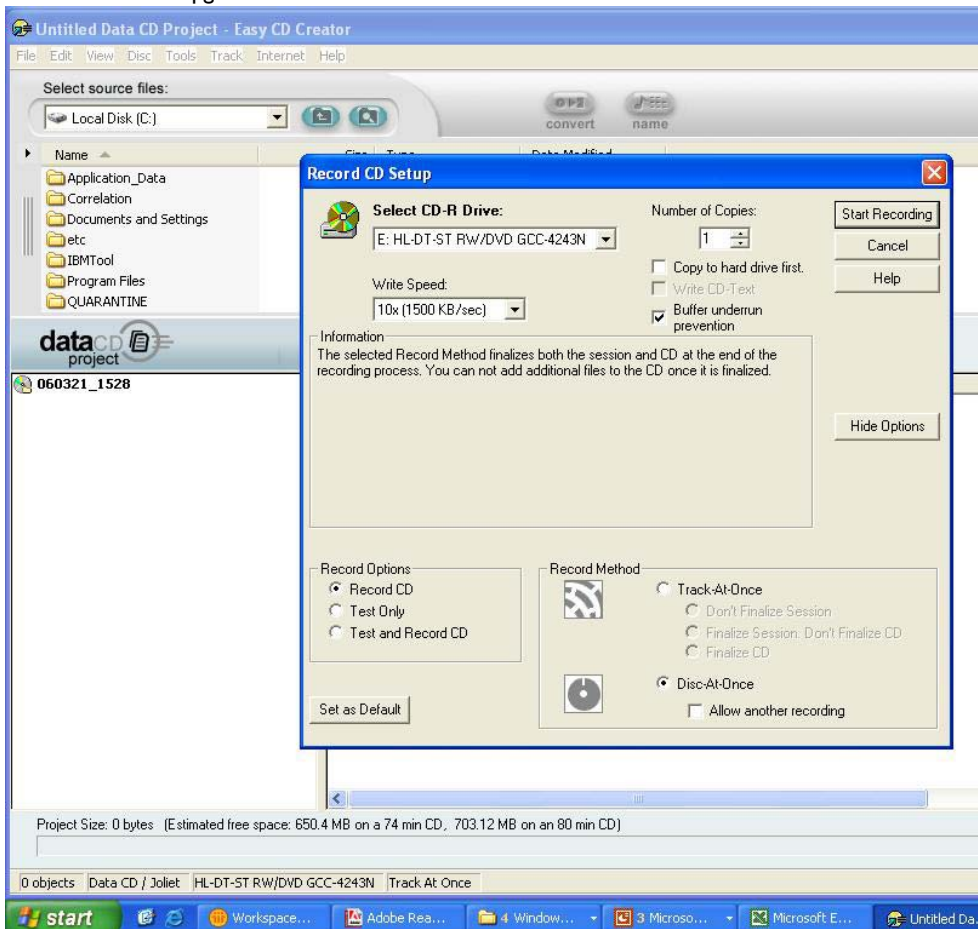

Step 4 Apply Upgrade to your Set

1. Power up the set and insert the prepared Upgrade CDR.
2. The set will automatically start upgrading.
3. Set's FTD will display **ERASE**. After which the upgrade disc will automatically be ejected. Remove Disc from set.
4. FTD will show **WRITE -> UPG END** in about 2 minutes time.
5. The set will go to standby and wake up automatically in disc mode. Software upgrading is completed

Your product is successfully upgraded!

Step 5 Verifying firmware version

To check the firmware version, see **Step 1**.

Helpful hints: If you have any problem, see **Troubleshooting**.

Firmware upgrade history

Version 26

- The upgrade allows the HTS9800W to have improved CDDA recognition, SCART detection and Bass/Treble.