

# What is in the box



Power supply for the handset charger



Charging cradle



Handset



User Manual



Guarantee



Quick start guide

## Note

- In some countries, you have to connect the line adaptor to the line cord, then plug the line cord to the line socket.
- In multi-handset packs, there are additional handsets and chargers with power supply units.

## Caution

- Use only the supplied batteries and adaptor

# Welcome to Philips

Register your product at [www.philips.com/welcome](http://www.philips.com/welcome)



# Welcome



Be responsible  
Respect copyrights

© 2009 Koninklijke Philips Electronics N.V. All rights reserved.  
 Reproduction in whole or in part is prohibited without the written consent of the copyright owner.  
 Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.



Printed in China

# CE 0168

ID965H\_12\_EN\_QSG\_V4.0

# 1 Charge



## Install the handset

- 1 The batteries are pre-installed in the handset. Follow the direction of the arrow printed on the battery tape and pull it off from the battery door before charging.
- 2 Place the handset on the charging cradle to charge the handset.

**Note** Charge the batteries for 24 hours before first use.

For more information on the battery icon status, see the User Manual.

Ensure the handset and base station are powered on and linked before you can charge the handset.

## Configure your phone (if necessary)

- 1 Set the date and time.
  - ↳ The phone is now ready to use.

# 2 Enjoy

## Make a call

- 1 Press and dial the phone number; or
- 2 Dial the phone number and press to dial out the call.

## Answer a call

- 1 When the phone rings, press or to answer the call.


## Adjust the earpiece volume

- 1 Press or to adjust the volume during a call.

## Set the handset's ringtone

You can select from 20 ringtones.

- 1 Press **menu**.
- 2 Select **[PERSONAL SET] > [HANDSET TONES] > [RING TONES]**, then press **[SELECT]** to confirm.
- 3 Select a ringtone, then press **[SELECT]** to confirm.
  - ↳ The setting is saved.

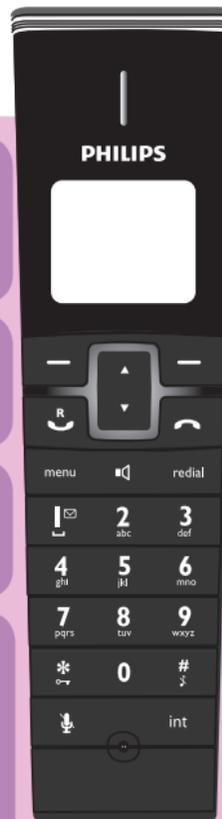

## ECO mode

The **[ECO]** mode reduces the transmission power of the handset and base station.

- 1 Press **menu**.
- 2 Select **[ADVANCED SET] > [ECO]**, then press **[SELECT]** to confirm.
- 3 Select the new setting, then press **[SELECT]** to confirm.
  - ↳ The setting is saved.
  - ↳ **[ECO]** is displayed instead of in standby mode.

**Note** When the **[ECO]** mode is activated, the connection range between the handset and the base station can be reduced.

Online help: [www.philips.com/support](http://www.philips.com/support)

# Troubleshooting

## No dialing tone

- Check your phone connections. The handset is out of range. Move it closer to the base station.

## The signal icon flashes

- The handset is out of range. Move it closer to the base station. If the handset displays **[UNREGISTERED]**, register the handset.

## The caller ID does not display

- The service is not activated. Check with your service provider. The caller's information is withheld or unavailable. For more information, see the User Manual.