


What is in the box

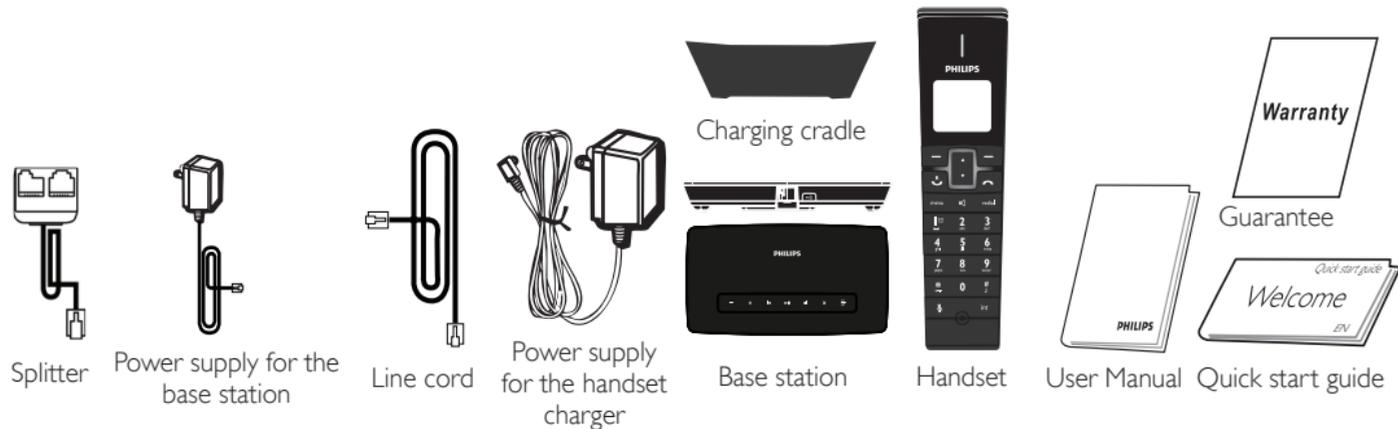

Note

- In some countries, you have to connect the line adaptor to the line cord, then plug the line cord to the line socket.
- In multi-handset packs, there are additional handsets and chargers with power supply units.

Caution

- Use only the supplied batteries and adaptor

Welcome to Philips

Register your product at www.philips.com/welcome



Be responsible
Respect copyrights

© 2009 Koninklijke Philips Electronics N.V. All rights reserved.
 Reproduction in whole or in part is prohibited without the written consent of the copyright owner.
 Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.




Printed in China

CE 0168

ID965_05_EN_QSG_V4.1

Welcome

1 Connect

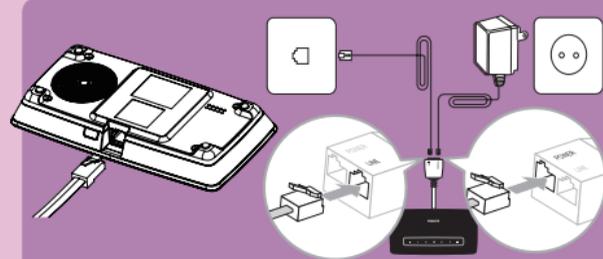

Connect the base station

- 1 Connect the supplied splitter to the socket on the bottom of the base station.
- 2 Connect one end of the telephone line cord and output plug of the power socket to the respective splitter connectors.
- 3 Connect the other end of power socket to a standard wall outlet and the telephone line cord to the phone socket.

2 Charge



Install the handset

- 1 The batteries are pre-installed in the handset. Follow the direction of the arrow printed on the battery tape and pull it off from the battery door before charging.
- 2 Place the handset on the charging cradle to charge the handset.

Note Charge the batteries for 24 hours before first use. For more information on the battery icon status, see the User Manual. Ensure the handset and base station are powered on and linked before you can charge the handset.

Configure your phone (if necessary)

- 1 When you see the welcome message, press **[OK]**, select your country, press **[SELECT]** to confirm.
↳ The country setting is saved.
- 2 Set the date and time.
↳ The phone is now ready to use.

3 Enjoy

Make a call

- 1 Press **[R]** and dial the phone number; or
- 2 Dial the phone number and press **[R]** to dial out the call.

Answer a call

- 1 When the phone rings, press **[R]** or **[V]** to answer the call.

Set the handset's ringtone

You can select from 20 ringtones.

- 1 Press **menu**.
- 2 Select **[PERSONAL SET] > [HANDSET TONES] > [RING TONES]**, then press **[SELECT]** to confirm.
- 3 Select a ringtone, then press **[SELECT]** to confirm.
↳ The setting is saved.

Add a record

- 1 Press **menu**.
- 2 Select **[PHONEBOOK] > [NEW ENTRY]**, then press **[SELECT]** to confirm.
- 3 Enter the name then press **[OK]** to confirm.
- 4 Enter the number, then press **[SAVE]** to confirm.



View the phonebook

- 1 Press **[V]**.
- 2 Select a contact and view the available information.

Adjust the earpiece volume

- 1 Press **[▲]** or **[▼]** to adjust the volume during a call.

ECO mode

The **[ECO]** mode reduces the transmission power of the handset and base station.

- 1 Press **menu**.
- 2 Select **[ADVANCED SET] > [ECO]**, then press **[SELECT]** to confirm.
- 3 Select the new setting, then press **[SELECT]** to confirm.
↳ The setting is saved.
↳ **[ECO]** is displayed instead of **[Y]** in standby mode.

Note When the **[ECO]** mode is activated, the connection range between the handset and the base station can be reduced.

Listen to messages recorded on the answering machine

- Press **[on/off]** to turn on/off the answering machine in standby mode.
- Start/Stop playback: Press **[▶]**.
- Adjust the volume: Press **[+ / -]**.
- Skip backward:

During message playback, press **[◀]** to play the message from the beginning. During the first second of the current message, press **[◀]** to play the previous message.

- Skip forward: Press **[▶]** to skip to the next message.
- Delete the current message: Press **[X]**.

Note For more information, see the Telephone answering machine section in the user manual.



Online help: www.philips.com/support Troubleshooting

No dialing tone

- Check your phone connections. The handset is out of range. Move it closer to the base station.

The signal icon flashes

- The handset is out of range. Move it closer to the base station. If the handset displays **[UNREGISTERED]**, register the handset.

The caller ID does not display

- The service is not activated. Check with your service provider. The caller's information is withheld or unavailable. For more information, see the User Manual.