

PHILIPS

MMS 172FM Multimedia Speaker System User Guide



Characteristic and specification


Characteristic

- * Fit for music, games, movies and internet;
- * Pure timbre, good dynamic response;
- * Wooden subwoofer+2 satellite speakers;
- * Deep bass, clean treble;
- * Minimize distortion for high output;
- * Dynamic bass boost;
- * 2.1 channel with FM radio;
- * CD/FM selector switch for external input & FM selection;
- * TUNE & RESET switch for FM stations tuning;

Specification:


- * Power output: 9W × 2 + 16W RMS
- * Frequency response: 35Hz-20KHz
- * FM Frequency range: 87.5MHz- 108MHz
- * Input sensitivity: 520mV
- * Harmonic Distortion: <0.3% (1W 1KHz)
- * S/N: >75dB
- * Separate: >45dB
- * Driver unit:
 - woofer 5.25"
 - satellite speaker 2.5" magnetic shield
- * Audio input port: 3.5mm stereo jack
- * Audio output port: 2RCA jack
- * Input: 230V~ 50Hz 140mA
- * Production size: (LXWXH)
 - Woofer: 185x225x230 mm
 - Satellite speaker: 90x90x102 mm

Installation

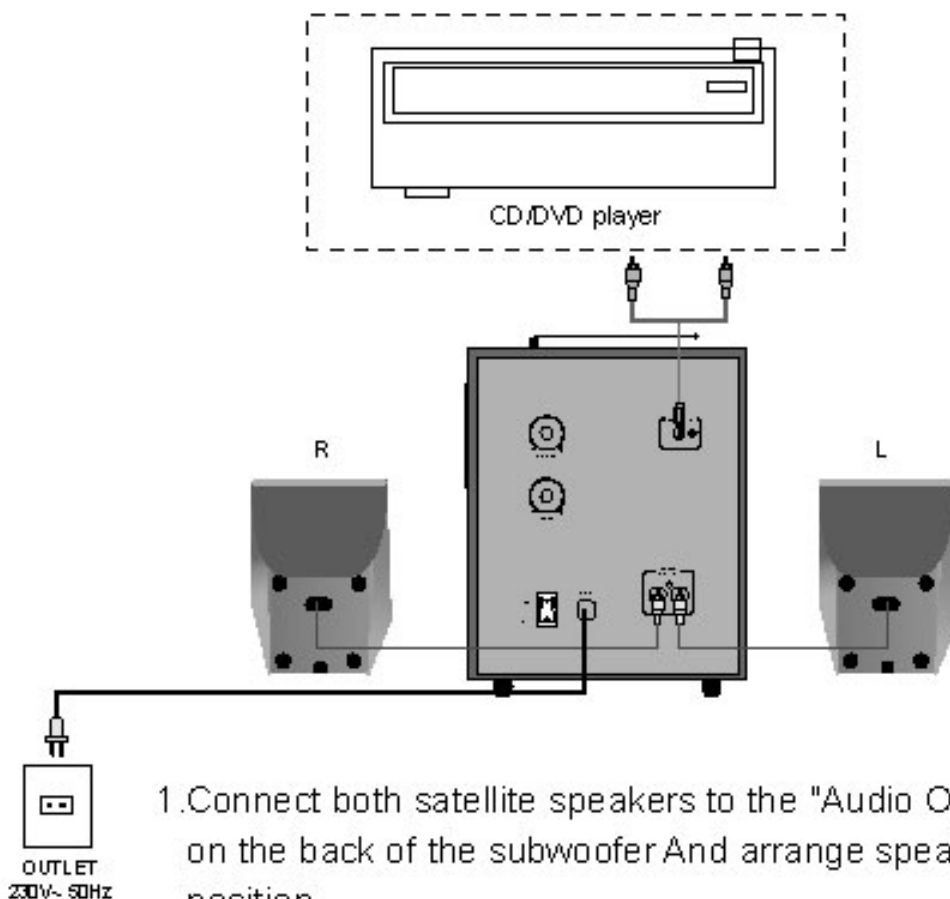

1. Connect both satellite speakers to the "Audio Output" connector on the back of the subwoofer And arrange speakers according to position.
2. Connect the 3.5mm stereo cable end to the "Audio Input" jack at the back of subwoofer and other end 2RCA jack to the "LINE OUT" of CD/DVD Player.
3. Connect power plug to the outlet.

* Keep the power switched off when connecting power plug.

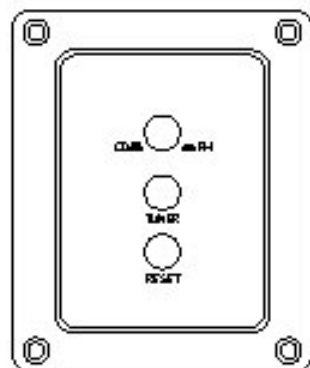

FM Function operation:

1. Press CD/FM button to shift between CD and FM input signal.
2. Press TUNER button to scan the FM stations. It starts with low frequency stations and ends with high frequency stations.
3. Press RESET button to bring back the tuning frequency to lowest frequency. After pressing RESET button, press TUNER button to tune to valid FM station.

