



Philips
Flash audio player

128MB*

KEY005

Wearable MP3

Up to 4 hours of music

Get into your key groove! Wear and flaunt the small and sleek 128MB Key005 and enjoy your favourite MP3/WMA music on the go. Transfer your music and data or recharge via Direct USB. And it's 100% shock-free - just like you!

Ready to wear, Ready to go

- Stylish compact and weighing only 35 grams
- Ultra lightweight, strong and durable magnesium body
- External battery pack for hours more enjoyment
- 5-Key in-cord remote control to easily control your music

Easy, intuitive music experience on the go

- Direct USB for easy file transfers - without cables
- Direct battery recharge via USB Direct

Your music, your data - on the go, everyday

- 128MB* built-in memory
- MP3 and WMA playback
- USB mass storage to store and carry your data files

PHILIPS

Specifications

Sound

- Frequency response: 30 - 16000 Hz
- THD: 0.1 - 1.0%
- Output Power: 2 x 4 mW (16 Ohm)

Audio Playback

- Compression format: MP3, Windows Media™ Audio
- MP3 bit rates: 8-320 kbps and VBR
- MP3 sample rates: 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz
- WMA bit rates: 5 - 192
- WMA sample rates: 8, 11.025, 16, 22.050, 32, 44.1, 48

Storage Media

- Built-in memory (RAM): 128
- Built-in memory type: NAND Flash
- Music memory capacity, MP3: up to 35
- Mass storage class compliant

Connectivity

- Headphone: 3.5 mm
- USB: USB 1.1

Accessories

- CD-ROM: AY3496
- Headphones: HE570/77P
- Remote control: AY3784
- External Battery Pack: AY3382
- Quick start guide



Software

- Music Match Jukebox: Music Match Jukebox

System Requirements

- CD-ROM drive
- Hard disk space: 50 MB
- Mac OS: OS9 & 10
- PC OS: Windows 98, 2000, ME, XP
- Processor: Pentium MMX 166 MHz or higher
- RAM memory: 96 MB RAM
- Sound card

Dimensions

- casing material: Magnesium
- Master carton dimensions: 123 x 198 x 194 mm
- Master carton quantity: 6
- Packaging dimensions (W x H x D): 91 x 168 x 35 mm
- Packaging type: D-box
- Product dimensions (W x H x D): 27 x 86 x 13.5 mm
- Product weight: 0.035 kg

Power

- Battery capacity: 550
- Battery Type: NiMH
- Charging time: approximately 4 hours hr
- External battery pack
- External battery type: 1 x AAA
- Playtime on external battery: 10 hours
- Playtime on internal battery: 6.5 hours

Highlights

Stylish, small and compact

Stylish compact and weighing only 35 grams

Magnesium body

Ultra lightweight, strong and durable magnesium body

External battery pack

The External battery pack is a sleek battery pack that snaps snugly onto your player and delivers additional power for music enjoyment on the go. The External battery pack uses standard alkaline batteries from where the player draws power. The result is even longer hours of pure enjoyment.

5-Key in-cord remote control

Philips 5-Key in-cord remote control places access to playback controls right at your fingertips. The remote control connects to your device via a compact plug and uses a standard headphone socket allowing you to easily and conveniently swap headphones.

Direct USB

Devices with direct USB can be plugged directly into the USB port of your PC without the need for any cable. Your computer will automatically recognize the device as a removable USB mass storage device (Windows 98 requires additional drivers) allowing you to easily drag and drop files via Windows Explorer (or Apple Folders) between your computer and device. Simply pack your device with music and data on the go - everyday.

USB Direct battery recharge

Direct battery recharge via USB offers ultra convenience when recharging your device. No need to bother with separate chargers or cables, simply plug n' recharge your device directly on your PC.

128MB* built-in memory

128MB* built-in memory

MP3 and WMA playback

Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your GoGear player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

USB mass storage device

USB mass storage devices offer a convenient way to save, backup and move your files around. The devices connect to your computer using a USB connection and do not require any special software to be installed (only Windows 98 and Me need drivers). The device automatically shows up as a removable drive in Windows Explorer allowing you to simply drag and drop files to and from the device.

