

user manual

manuel d'utilisation
gebruikershandleiding
användar-handbok

| benutzerhandbuch
| manuale per l'utente

| manual del usuario
| manual do usuário

wearable digital camcorder



PHILIPS

System requirements:

Système requise:

Systemanforderungen:

Requisitos sistema:

Systemvereisten:

Requisiti del sistema:

Requisitos do sistema:

System krav:

- Windows 98SE / 2000 / ME / XP

 
English	1
Français	23
Deutsch	45
Español	67
Nederlands	89
Italiano	111
Português	133
Svenska	155

We hope you enjoy your wearable digital camcorder

Please visit www.philips.com/support
and enter your product name to view:

- FAQ, Frequently Asked Questions
- Latest user manuals
- Latest computer software downloads
- Firmware upgrade files

*The model and production numbers can be found next to the USB port.
(Please remove the USB cover to see)*

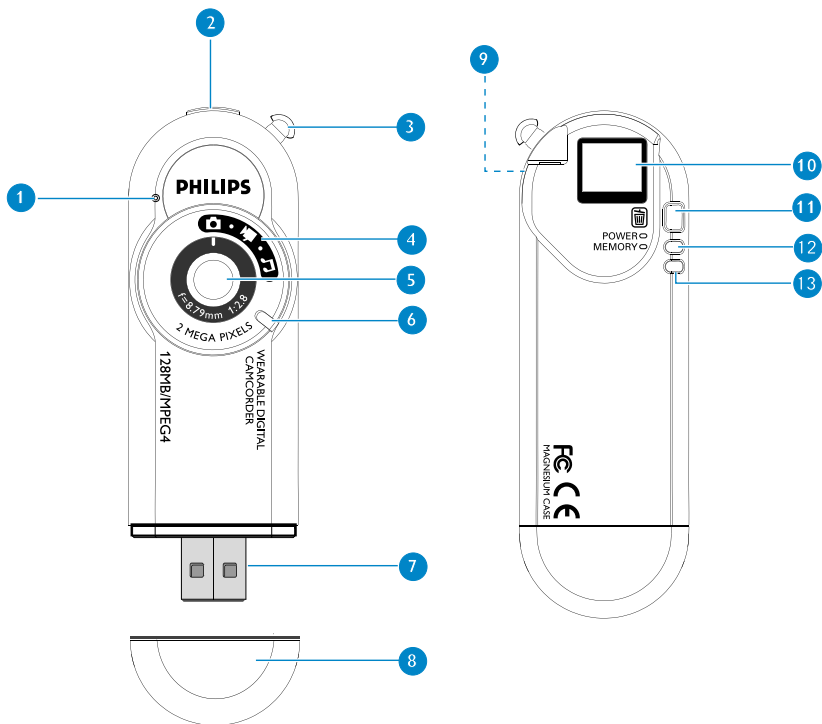

Knowing Your Camcorder

Your camcorder is a multi-functional USB device that combines MPEG4 video capture with 2 Megapixel still picture capture. It plays back both video and pictures through its micro display viewfinder. It also plays MP3 audio files.

- ① **Microphone:** records sounds during video capturing
- ② **Shutter button:** captures video and still picture
- ③ **Strap hole:** attaches supplied neck strap
- ④ **Mode dial:** switches on / off; changes media mode
- ⑤ **Lens**
- ⑥ **Grip:** positions thumb to power on / off
- ⑦ **USB port:** connects to computer / battery pack
- ⑧ **USB cover:** protects USB port
- ⑨ **Headphones socket:** connects remote control connector / headphones; activates playback mode
- ⑩ **Viewfinder / Micro display:** frames subject / view media playback
- ⑪ **Delete button:** delete media files
- ⑫ **Power level indicator:** provides battery information
- ⑬ **Memory capacity level indicator:** provides memory capacity information

Preparation

Attaching your neckstrap

Thread the neck strap through the hole as shown in the picture.

 


Installation

Please insert the by-packed CD into your CDROM drive and follow on screen instructions to complete driver and software installation.

Powering your camcorder

Your camcorder has a built-in USB rechargeable battery. To charge, switch on your computer. Detach the USB cover. Connect your camcorder **DIRECTLY** to your computer's USB port. Charge your camcorder until the **Power level indicator** lights up and stops blinking (approximately 3 hours). Keep your computer switched on during charging. Disconnect safely after charging completes. (See page 15 for more information)



IMPORTANT!

WINDOWS 98SE users:

DO NOT CONNECT your camcorder to the computer **BEFORE** driver installation.



TIP

- You can also use the supplied battery module to provide instant power to your camcorder. When your camcorder is charged and the battery module is in use, your camcorder will first use up the power from the external battery.
- You can organize and transfer your files while your camcorder is charging. (See page 15 for more information)

Powering on for capture modes

- ① Turn **Mode dial** clockwise to power ON and to access different media modes.
- ② Your camcorder will show your mode status by displaying these icons (in red) on the **Viewfinder / Micro display**:



Still picture mode



Video mode

Powering on for playback modes

- ① Connect your remote control (see page 8 for more information).
- ② Press and hold **▶||** for 2 seconds to power on.
- ③ Turn **Mode dial** to access different media modes.
- ④ Your camcorder will show your mode status by displaying these icons on the **Viewfinder / Micro display**:



MP3 playback mode




Still picture mode



Video mode

Taking Still Pictures


- 1 Turn **Mode dial** to .
- 2 Hold the camcorder upright in your hand.
Make sure the lens is not obstructed / covered when you take pictures.
Look through the **Viewfinder** to frame your subject.
- 3 Keep the camcorder steady and press the **Shutter** halfway down to test picture conditions.
For best results, check the status of all indicators on the camcorder when you take a picture. (See page 11 for more information)
- 4 Press the **Shutter** fully down to take your pictures.
Your camcorder will confirm the capture by a brief picture playback.
DO NOT turn the **Mode dial** until the **Memory indicator** stops blinking.



TIP

Your camcorder automatically powers off if there is no operation within 60 seconds. Turn the **Mode dial** anti-clockwise to power OFF and clockwise to your desired mode to power ON again.

 
Capturing Video

- ① Turn the **Mode Dial** to .
- ② Hold the camcorder upright in your hand.
Make sure the lens is not obstructed / covered when you capture videos.
Look through the **Viewfinder** to frame your subject.
- ③ Keep the camcorder steady and press the **Shutter** to start capturing.
For best results, check the status of all indicators on the camcorder when you capture. (See page 11 for more information)
- ④ Press the **Shutter** again to stop capturing.
Your camcorder will confirm the capture by saving the captured file.
DO NOT turn the **Mode dial** until the **Memory indicator** stops blinking.



TIP

Your camcorder automatically powers off if there is no operation within 60 seconds. Turn the **Mode dial** anti-clockwise to power OFF and clockwise to your desired mode to power ON again.

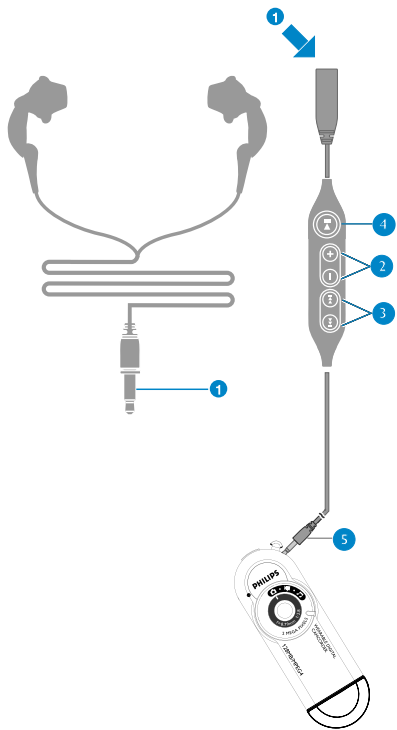

Remote Control

Your remote control allows you to playback all the media files from your camcorder.

- ① **Headphones connector**
- ② **Volume up +** : for increasing volume
Volume down - : for decreasing volume
- ③ **▶▶** : next
◀◀ : previous
- ④ **Power ▶||** : Power on / off and Play / Pause
- ⑤ **Remote Control connector**

Connecting Your Remote Control

- ① Insert the remote control connector to your camcorder.
- ② Insert the headphone connector to the headphone socket.

Visual Media Playback

- ① Connect your remote control (see page 8 for more information). Press and hold **▶||** for 2 seconds to power on. Turn the **Mode dial** to your desired visual playback mode. (See page 5)
- ② Look through the **Viewfinder / Micro Display** to view your media files.

Basic Operation	Control to press
Switch on / off	Press and hold ▶ for 2 seconds
Play media	Press ▶
Pause media	Press ▶ during media playback
Change volume (video only)	Press + to increase or - to decrease
Go to next or previous media	Press ▶▶ for next and ◀◀ for previous
Delete media	Press Delete during playback. Press Delete again to confirm deletion when prompted.
Reset	Press and hold Shutter and Delete and power ON



TIP

Your still pictures and video captures will display in slide show (one after one automatically) as you press **▶||**.














Indicators on your camcorder

Your camcorder tells you various information by LEDs and beeps:

User action	Signal	Meaning
USB Connection	Double beep	Camcorder connected and charging
	Green LED blinks	Camcorder charging
	Green LED on	Camcorder fully charged
Powering on	Double beep	Camcorder on
Capturing	Single beep	Picture taken
(Battery level)	Green LED on	Battery full
	Green LED blinks	Battery low
	Green LED off	Insufficient battery
(Memory capacity level)	Yellow LED on	Sufficient memory capacity for new captures
	Yellow LED blinks	Almost insufficient memory capacity for new captures
	Yellow LED off	Insufficient memory capacity for new captures
(Saving status)	Yellow LED blinks quickly	Saving media file
Deleting file	Single beep	Delete confirmed


Icons and messages on the Micro Display

Your camcorder tells you various information via the micro display:

Icons on the Micro Display (Capture mode)			
	Battery level		Battery empty
	Picture capture mode		Video capture mode
	Poor light conditions		Recording in progress
	Saving media file		
Icons on the Micro Display (Playback mode)			
	MP3 playback mode	TRACK	Track number
	Picture playback mode	PICT	Picture number
	Video playback mode	CLIP	Video number
	Playing media file		Playback paused
	Deleting a media file		
Messages on the Micro Display		Meaning	
Battery empty!		Insufficient battery. Charge the battery or switch to back up battery	
Battery Low! Switch to backup battery		Battery low. Charge the battery or switch to backup battery	

Messages on the Micro Display	Meaning
Memory full!	Insufficient memory for new captures. Delete unwanted captures on camcorder.
Memory format error Press [delete] to reformat	Wrong file format detected. See page 16 for more information.
All data will be lost Press [delete] to continue	Warning message before internal formatting. Press [delete] to continue
Unable to read file!	Cannot read the selected file
Delete this picture? Press [delete] again to confirm	Warning message before deletion. Press [delete] to continue
Delete this video? Press [delete] again to confirm	Warning message before deletion. Press [delete] to continue
Delete this track? Press [delete] again to confirm	Warning message before deletion. Press [delete] to continue
Deleted!	Selected file is deleted
No audio track	No audio track stored on camcorder
No picture	No picture stored on camcorder
No video	No video stored on camcorder
Please wait. Formatting in progress	Internal formatting. Do not perform any operation.
Free memory	Available space on camcorder (shown during power-up)

Music playback

- ① Connect the remote control (see page 8 for more information). Press and hold **▶||** for 2 seconds to power on.
Turn the **Mode dial** to . (See page 5)
- ② Connect headphones and enjoy.

Basic Operation	Control to press
Switch on / off	Press and hold ▶ for 2 seconds
Play music	Press ▶
Pause music	Press ▶ during playback
Change volume	Press + to increase or - to decrease
Go to next or previous track	Press ▶▶ for next and ◀◀ for previous
Delete track	Press Delete during playback. Press Delete again to confirm deletion when prompted.

USB Connection

Your camcorder will appear as a new USB mass storage in **Windows Explorer** when USB connected. You can use your camcorder as a mass storage device for any data files.

Transferring files

Click and highlight one or more files to transfer between your camcorder and your computer. Use drag and drop actions to complete your transfer. The green LED on your camcorder blinks during file transfer.



Viewing your captures

Connect your camcorder **DIRECTLY** to your computer's USB port. From **Windows Explorer**, click on the mass storage folder and then the **DCIM** folder. You can view your captures from the subfolder **100PHCAM**. **PICTxxx.jpg** files are your pictures. **CLIPxxx.asf** files are your videos.

Organizing your music files

To play music on your camcorder, transfer *.mp3 files to the root directory of the mass storage folder.

Disconnecting safely from computer

After file transfer completes, disconnect camcorder safely from your computer by clicking  on the task bar to avoid file error. **WINDOWS 98SE users:** there is no  icon. Simply disconnect camcorder after file transfer completes.

Formatting your camcorder

Only format your camcorder with FAT16 and FAT32 file systems.

IMPORTANT! KEEP A COPY OF YOUR ORIGINAL FILES!

Please keep a copy of the original files transferred to your camcorder. Philips is not responsible for any loss of content if the product becomes damaged or not readable.

Internal Formatting

Your camcorder has an internal formatting system. This is to ensure that you can always use the capturing function on the go. The internal formatting is activated if you have previously used a wrong format system during USB connection.

Message on micro display	Meaning
Wrong format system of memory	Wrong format system detected.


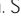
- ① Press **Delete** to start internal formatting.
- ② Your camcorder is ready for use after the screen message **Formatting the memory** disappears in the micro display.

WARNING!

ALL THE DATA IN THE MEMORY WILL BE LOST WHEN YOUR CAMCORDER STARTS INTERNAL FORMATTING! BACK UP YOUR DATA VIA USB CONNECTION IF YOU WANT TO KEEP YOUR DATA! (see page 14)

Firmware Upgrades

For the best interaction between your camcorder and your computer, check www.philips.com/support for the latest upgrades available.

- ① You may need to enter the model number, e.g. key019, to access the upgrade file. Make sure you save the file(s) in a folder on your computer. Unzip them before you install the upgrade.
- ② Connect your camcorder to your computer. Copy the extracted firmware file into the root directory of your camcorder. After file transfer completes, disconnect camcorder safely from your computer by clicking  on the task bar to avoid file error. **WINDOWS 98SE users:** there is no  icon. Simply disconnect camcorder after file transfer completes.
- ③ Press and hold **Shutter** and turn the **Mode dial** to power ON. Your camcorder will start upgrading. During firmware upgrade, both LEDs will blink.
- ④ Turn the **Mode dial** to power OFF when the LEDs stop blinking. Firmware upgrade is complete and camcorder is ready for use.

Troubleshooting

If a fault occurs, first check the points listed. For further help and other troubleshooting tips, please also check out FAQ for your camcorder at www.philips.com/support. If you are unable to find a solution from these hints, consult your dealer or service center.

WARNING: Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

Problem	Cause	Solution
No response	Battery drained	Charge the battery (see page 4)
	Insufficient camcorder memory capacity	Copy files from your camcorder to your computer and delete the original to free up memory space for more new captures. (see page 14)
	Camcorder busy	Press and hold Delete and Shutter for 2 seconds to reset your camcorder
USB doesn't work	Poor light condition	Check light conditions
	Loose connection	Check connection
	Wrong OS version	Your operation system must be Windows 98SE or later
Cannot play track	USB driver not installed	Windows 98SE user only: install the USB driver provided in by-packed CD
	Track format not supported	Your camcorder can only play MP3 tracks
Video doesn't play	Plug-in not installed	Please install the Direct X plug-in on Windows Media Player
	Software not installed	Install VideoImpression provided in by-packed CD and Windows Media Player 9.0+ (www.microsoft.com/downloads)

Safety and maintenance

- **Child safety:** The neckstrap is not a toy. Special care should be taken if handled by young children. Avoid placing the neckstrap around the neck of a child to prevent strangulation!

Take care when using headphones

- **Hearing safety:** Listen at a moderate volume. Using headphones at high volume can impair your hearing.
- **Traffic safety:** Do not use while driving or cycling as you may cause an accident

To avoid damage or malfunction:

- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your camcorder or allow objects to fall on it. Strong shocks and vibrations may cause malfunction.
- This product is not waterproof: do not allow your camcorder to be submersed in water. Avoid exposing the USB socket to water. Water entering the camcorder may cause major damage.
- Avoid touching the lens and viewfinder with your fingers. To remove fingerprints, use a soft damp cloth.
- Prevent damage to your eyes: do not look at the sun through the viewfinder!
- Avoid sudden changes of temperature as this may cause condensation on the lens and viewfinder. Allow the camcorder to adjust to the surrounding temperature.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the camcorder. To clean, use a soft damp cloth.
- Active mobile phones & strong magnetic fields in the vicinity may cause interference.
- The supplied software CD-ROM is not an audio CD. Playing CD-ROMs on audio equipment may damage your audio equipment!

Technical Data

Dimension	32 x 95.7 x 22.5mm	Weight	60g
Aperture	F2.8	Audio format	ADPCM
Image sensor size	13mm (1/2*)	Image sensor resolution	2M
Frame rate	30fps	Image sensor type	CMOS
Video file format	ASF	Video format	MPEG4
Video resolution	QVGA		
Exposure range	EV 7-14	Focus distance	>1.3m
Lens	fixed focus length	Picture file format	JPEG
Audio playback	MP3, 8 - 320 kbps		

Built-in memory capacity	128MB NAND Flash* (Up to 25 minutes video capture, or 200 pictures, or 30 MP3 tracks at 128 kbps) * Actual formatted capacity will be less
Built-in battery	rechargeable 330mAh Li-ion (via USB), fully charged in approximately 3 hours
External battery	2 x AA
Battery recording time	43 minutes using internal battery; 30 minutes using external
PC interface	USB 1.1
Casing material	magnesium body, plastic USB cover

PHILIPS reserves the right to make design and specification changes for product improvement without prior notice.

Modifications not authorized by the manufacturer may void users authority to operate this device.

All rights reserved.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET.

Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

Copyright information

All other brand and product names are trademarks of their respective companies or organizations.

Unauthorized duplication of any recordings downloaded from the internet or made from audio CDs is a violation of copyright laws and international treaties.

Notice for the USA



Note:

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to **part 15** of the **FCC Rules**. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Notice for Canada

This Class B digital apparatus complies with Canadian ICES-003.

This product complies with the radio interference requirements of the European Union.

This set complies with the radio interference requirements of the European Union.

Cet appareil est conforme aux normes de la Communauté européenne en matière d'interférences radio.

Dieses Gerät entspricht den Funkentstörungsvorschriften der Europäischen Gemeinschaft.

Este reproductor cumple las normas para interferencias de radio establecidas por la Comunidad Europea.

Dit apparaat voldoet aan de radio-ontstoringseisen van de Europese Unie.

Questo prodotto è conforme ai requisiti sulle interferenze radio dell'Unione Europea.

Este aparelho está de acordo com os requisitos da Comunidade Europeia relativos à interferência de rádio.

Denna apparat uppfyller EU:s krav beträffande radiostörningar.

© Koninklijke Philips Electronics N.V. 2004

All rights reserved.

www.philips.com

Printed in China

