




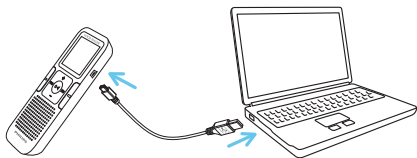

1

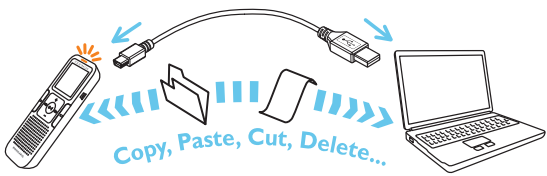

2

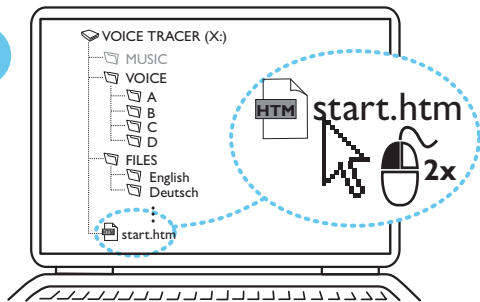

VOICE TRACER

LFH0612

LFH0617

LFH0632

LFH0633

LFH0642

LFH0646

LFH0652



Quick start guide


Register your product and get support at www.philips.com/welcome

© 2010 Royal Philips Electronics. All rights reserved.

Specifications are subject to change without notice.

Trademarks are the property of Royal Philips Electronics or their respective owners.

Document Version 1.01, 04/06/2010

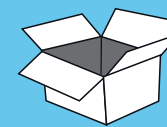

LFH0612

LFH0617

LFH0632

LFH0633

LFH0642

LFH0646


LFH0652

LFH0632


LFH0633

LFH0642

LFH0646

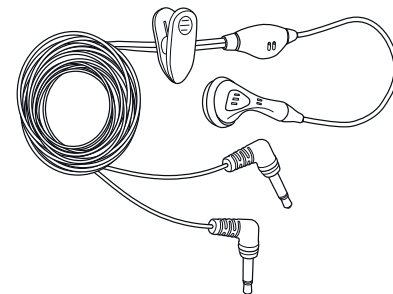


LFH0652

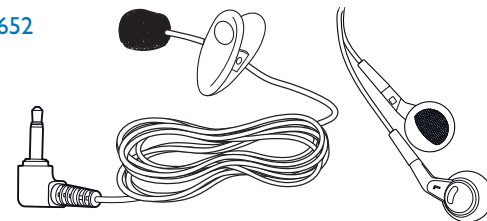





1

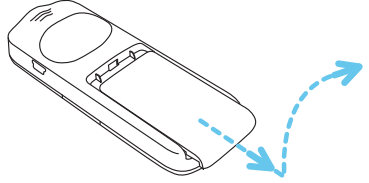


2

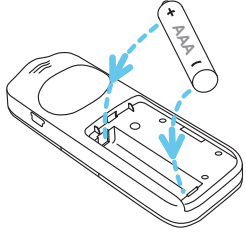

3

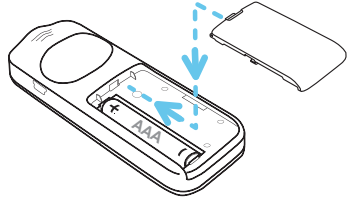

4

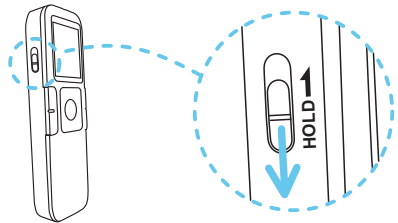

1s [Power On Icon]

OFF >> ON

[A] [B] [C] [D]

[Speaker Icon] [Microphone Icon]

[Pause Icon]

[STOP]

ON >> OFF

[MP3 File Icon] .mp3 → [A] [B] [C] [D]



1s [Power On Icon]

OFF >> ON

[A] [B] [C] [D]

[Speaker Icon] [Microphone Icon]

[Play/Pause Icon]

[STOP]

[Volume Up/Down Icons]



MENU

MODE SLP LP SP HQ SHQ PCM

LFH0612 ●
LFH0617 ●
LFH0632 ●
LFH0633 ●
LFH0642 ●
LFH0646 ●
LFH0652 ●

MI C [Microphone Icon] HI LO
VA [VA Icon] ON OFF
CL40 ICE [Ice Icon] ON OFF
BEEP [BEEP Icon] ON OFF
AutoOFF [Moon Icon] 5 15
FORMAT [X Icon] NO YES
INFO [i Icon] 100 20 10 09/25
L 16Hz [Sun Icon] ON OFF
SPLI t [Split Icon] NO YES
d 14 1dE [Triangle Icon] OFF 30 60
CHARGE [Battery Icon] ON OFF
EQUALI [Equalizer Icon] OFF P OP JA 22 CL 15