


MC175

Compact Audio System

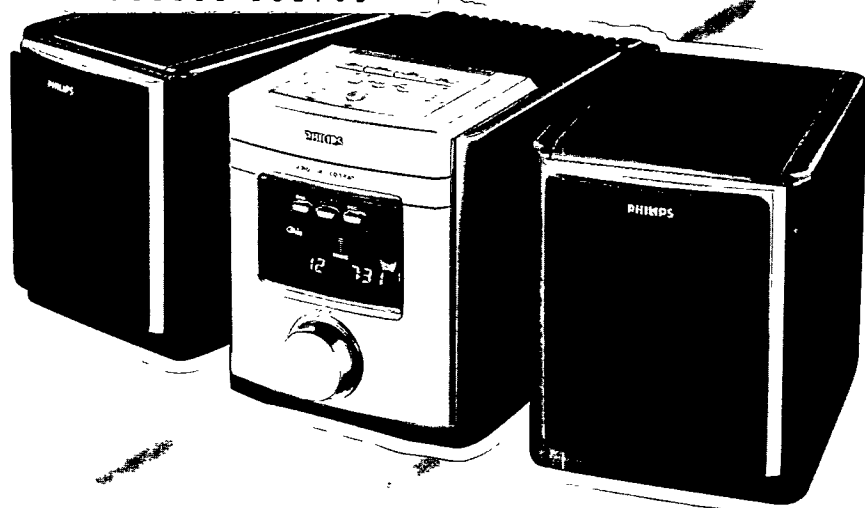

Let's make things better.



PHILIPS

Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA No abrir, riesgo de choque eléctrico	
	ATENCIÓN Verifique que el voltaje de alimentación sea el requerido para su aparato	
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.		

Descripción: Sistema Compacto de Audio
Modelo: MC 175/01
Alimentación: 110-127/220-240 V; ~50-60 Hz
Consumo: 65 W
Importador: Philips Mexicana, S.A. de C.V.
Domicilio: Norte 45, # 669, Col. Industrial Vallejo
Localidad y Telefono: C.P. 02300 México D.F., Tel. 7284200
Exportador: Philips HK Ltd.
País de Origen: China

Nº de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

Controls and connections.....	4-5	Clock/Timer.....	8
General information.....	6	CD player, CD handling.....	9-10
Remote control.....	6	Radio.....	11
Power supply.....	6	Troubleshooting.....	12
Basic functions.....	7	Technical data.....	12

English

Généralités.....	13	Horloge/Timer.....	17
Télécommande.....	13	Lecteur de CD, manipulation des CD.....	18-19
Alimentation électrique.....	13	Radio.....	20
Commandes et raccordements.....	14-15	Recherche de pannes.....	21
Fonctions de base.....	16	Caractéristiques techniques.....	21

Français

Controles y conexiones.....	22-23	Reloj/Temporizador.....	26
Información general.....	24	Reproductor de CD, manejo del CD.....	27-28
Control remoto.....	24	Radio.....	29
Suministro eléctrico.....	24	Resolución de problemas.....	30
Funciones básicas.....	25	Datos técnicos.....	30

Español

一般說明.....	31	時鐘/定時器.....	35
遙控器.....	31	雷射唱機, CD片使用須知.....	36-37
電源供給.....	31	收音機.....	38
控制器和連接端子.....	32-33	故障排除.....	39
基本功能.....	34	技術規格.....	39



中文

Guarantee and Service valid for New Zealand	40	Garantía para México	42
Guarantee and Service valid for Australia	41		

Guarantees

CONTROLS AND CONNECTIONS

English

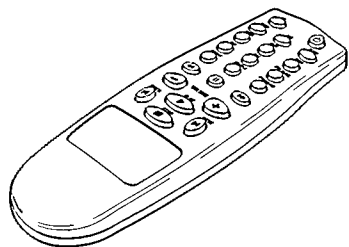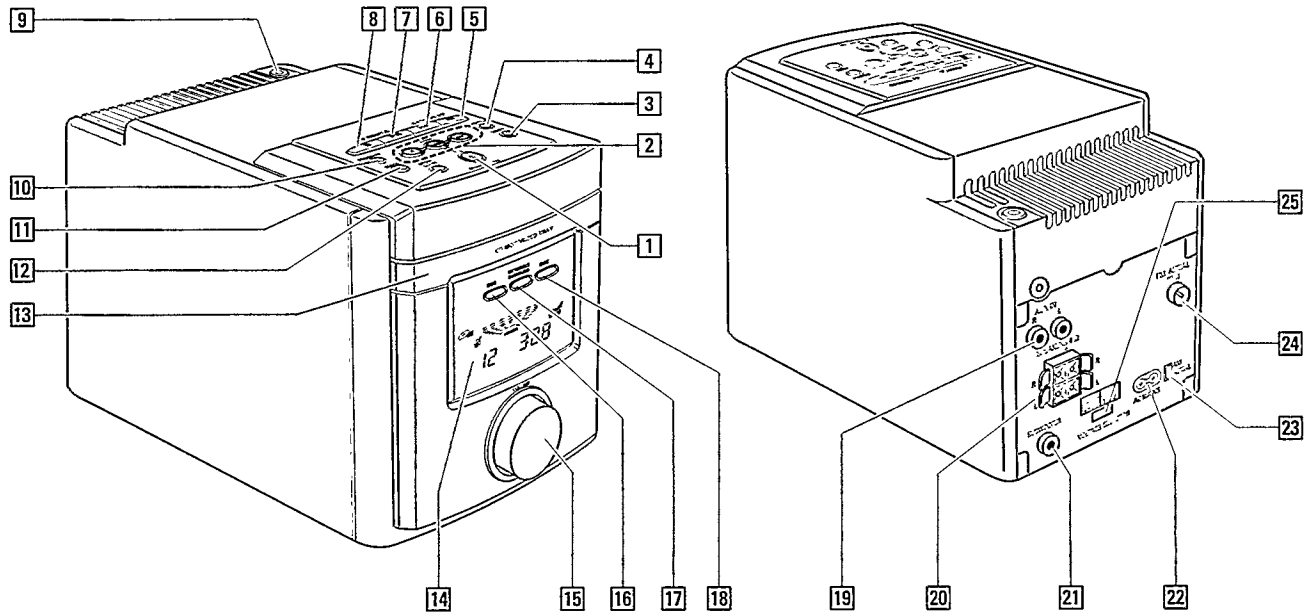

On top and front

- [1] **STANDBY-ON** ...switches the set on and to standby
- [2] **CD**selects the CD player
- [2] **TUNER**selects the tuner
BANDselects the wave band
- [2] **AUX**selects the input for an additional appliance
- [3] **TIMER**activates and deactivates the timer
- [4] **SHUFFLE**plays tracks in random order
- [6] **▶▶**skips and searches forward
TUNING ▶▶tunes to radio stations
- [6] **◀◀**skips and searches backward
◀◀ TUNINGtunes to radio stations
- [7] **▶||**starts and interrupts CD play
PRESET ▲selects preset radio stations
- [8] **■**stops CD play and erases the program
▼ PRESETselects preset radio stations
- [9] **📎**3.5mm headphone socket
Note: Connecting the headphones will switch off the speakers.
- [10] **PROGRAM****CD**: programs tracks and reviews the program
RADIO: programs radio stations
- [11] **CLOCK**selects the clock function
- [12] **OPEN/CLOSE** ...opens/closes the CD tray
- [13]CD tray
- [14]Display
- [16] **VOLUME**adjusts the volume
- [16] **DBB****DYNAMIC BASS BOOST**
 enhances the bass

- [17] **INCREDIBLE SURROUND**creates a phenomenal stereo effect
- [18] **DSC****DIGITAL SOUND CONTROL**
 enhances sound characteristics

On the back

- [19] **AUX IN R/L**connect to the audio output of an additional appliance
- [20] **SPEAKERS 4 Ω**connect the supplied speakers here
- [21] **SUBWOOFER**connect a subwoofer here
- [22] **AC MAINS**After all other connections have been made, connect this mains lead to the wall socket.
- [23] **AM AERIAL**connect the supplied AM frame antenna here
- [24] **FM AERIAL 75 Ω**connect the supplied antenna wire here
- [25] **VOLTAGE SELECTOR**... (Not on all versions). To be set to the local mains voltage. Disconnect the mains lead first, if this selector has to be reset.

On the remote control

- CD**selects the CD player
- 📎**switches to standby
- TUNER**selects the tuner
- AUX**selects the input for an additional appliance
- SLEEP**activates the sleeptimer
- TIMER**activates and deactivates the timer
- MUTE**mutes the sound
- NEWS**the button has no function with this set

- DBB****DYNAMIC BASS BOOST**
 enhances the bass
- DSC****DIGITAL SOUND CONTROL**
 enhances sound characteristics
- INC. SURR.**creates a phenomenal stereo effect
- REPEAT**repeats a track, the entire CD or the program
- SHUFFLE**plays tracks in random order
- PROGRAM****CD**: programs tracks and reviews the program
◀◀**CD**: searches backward
RADIO: tunes to radio stations
- ||**interrupts CD play
- ▶▶****CD**: searches forward
RADIO: tunes to radio stations
- VOLUME -/+**decreases/increases the volume
- PREV. ◀****CD**: skips backward
RADIO: selects a preset radio station
- PLAY ▶**starts CD play
- NEXT ▶|****CD**: skips forward
RADIO: selects a preset radio station
- STOP ■**stops CD play and erases the program

Note: Select the desired sound source first, then press the required function key.

Supplied accessories

- 2 loudspeaker boxes
- 2 loudspeaker cables
- Remote control
- 2 batteries for the remote control
- AM/MW frame antenna
- FM wire antenna
- Mains lead


Safety information

Place the set on a solid surface. Make sure there is sufficient space around the set to prevent overheating.


Active mobile phones near to the CD-player may cause malfunctions.

Maintenance

Do not expose the set, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

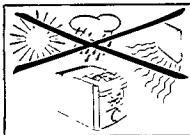

You can clean the set with a soft, slightly dampened lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.

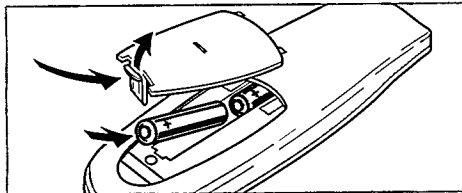

Batteries for the remote control

- Open the battery compartment of the remote control and insert 2 batteries, type R03, UM-4 or AAA-cells (preferably alkaline).



Remove batteries if they are flat or the set is not going to be used for a long time.

Batteries contain chemical substances, so they should be disposed of properly.

Loudspeaker connections

The loudspeaker terminals are click-fit connectors. Use them as shown below.

- Connect the unmarked wire to the red terminal and the marked (black) wire to the black terminal.

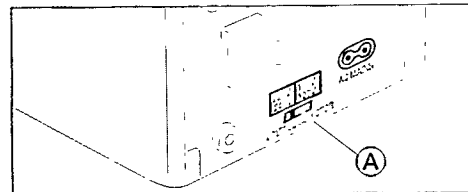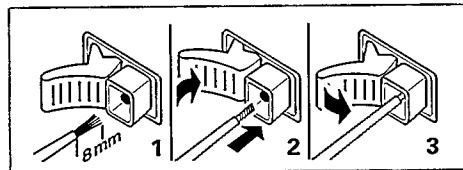


Mains

The type plate is located on the back of the set.

- 1 If your set is equipped with a voltage selector (A) set it to your local mains voltage if necessary.
- 2 Connect the mains cable to the AC MAINS inlet and the wall socket. This switches on the mains supply.

To disconnect the set from the mains completely, remove the mains plug from the wall socket.

To avoid overheating of the set a safety circuit has been built in. Therefore your set may disconnect under extreme conditions. If this happens, switch the set off and let it cool down before reusing it.

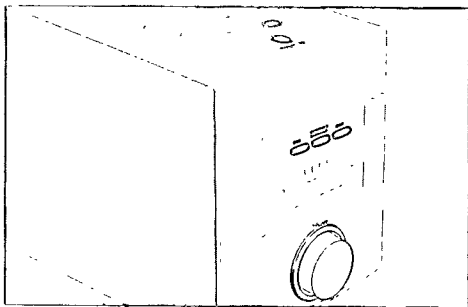

Switching on

To switch the set on press STANDBY-ON on the set.

To switch the set to standby press STANDBY-ON again (⏻ on the remote control).

Demo mode

The demo mode displays various digital features of the set. It can be activated during standby.

Activating and deactivating the demo mode

- 1 Keep STANDBY-ON on the set depressed for at least 5 seconds.
→ The demo mode is activated.
- 2 Press STANDBY-ON (⏻ on the remote control).
→ The demo mode is deactivated.

Volume and sound adjustment

Adjust the volume by using VOLUME (VOLUME +/- on the remote control).

→ The volume level between VOL MIN and VOL MAX is displayed.

 
Press DSC repeatedly to select the desired sound characteristics.

→ JAZZ ✓, CLASSIC ⚡, POP ↓ or OPTIMAL is displayed.

Press DBB to switch the bass enhancement on and off.

→ **DBB** is shown.

Press INCREDIBLE SURROUND (INC. SURR. on the remote control) to switch the surround sound effect on and off.

→  is shown.

Note: The effect of INCREDIBLE SURROUND may vary with different types of music.

- 1 Press MUTE on the remote control to interrupt the sound reproduction instantly.
→ Playback will continue without sound.
- 2 Press MUTE on the remote control again to reactivate the sound reproduction.

Using additional appliances

It is possible to use an additional appliance, e. g. tape recorder with the set. Refer to the instruction manual of the appliance for connections and operations.


- 1 Insert the red plug of a cinch cable to the red socket (AUX IN R) and the white one to the white socket (AUX IN L).
- 2 Connect the other end of the cinch cable to the additional appliance.
- 3 Press AUX to select the input for the appliance.
→ **AUX** is displayed.
- 4 Operate your appliance as usual and adjust the volume and sound at the set.

Note: It is not possible to use a turntable with AUX IN.

Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.

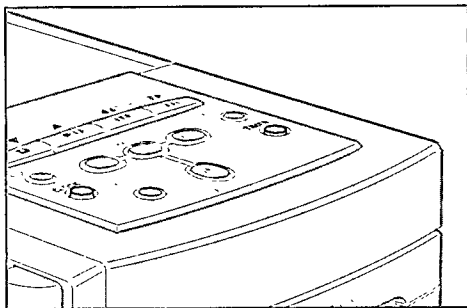


Clock setting



- 1 Press **CLOCK** on the set.
→ The clock digits **00:00** flash.
- 2 Press **▼ PRESET ▲** on the set to set the hour.
- 3 Press **◀◀ TUNING ▶▶** on the set to set the minutes.
- 4 Press **CLOCK** on the set to confirm the settings.

Timer setting

The set can be used as an alarm clock, whereby the CD or tuner is switched on at a set time.

- 1 Keep **TIMER** on the set depressed for more than 2 seconds.
→  flashes.
- 2 Press **▼ PRESET ▲** on the set to select the desired sound source.
→ **CD** or **TUNER** is shown.
- 3 Press **TIMER** on the set.
→ The clock digits flash.
- 4 Press **▼ PRESET ▲** on the set to set the desired hour.
- 5 Press **◀◀ TUNING ▶▶** on the set to set the desired minute.
- 6 Press **TIMER** on the set to confirm the settings.


Timer activation and deactivation

- Press **TIMER** during standby or playback.
→  is shown.
- Press **TIMER** anytime to deactivate the timer.
→  goes off.

Sleeptimer

The sleeptimer is a set period of time before the set switches off. The clock time has to be set before the sleeptimer can be used.

- 1 Press **SLEEP** on the remote control until the desired sleeper time is displayed.
→ **SLEEP, 60, 45, 30, 15, 10, OFF**
 - 2 As soon as the desired time is displayed, do not press **SLEEP** again.
→ After the chosen time has elapsed, the set switches to standby.
- To deactivate the sleeptimer, press **SLEEP** on the remote control until **OFF** is displayed.

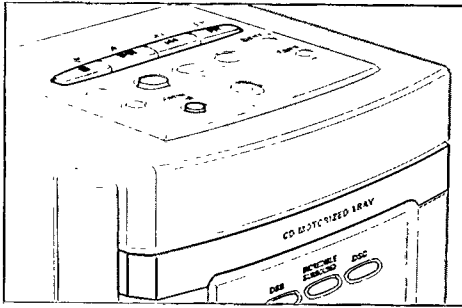

Playing a CD

This CD player can play all kinds of Audio Discs such as CD-Recordables and CD-Rewritables. Do not try to play a CD-ROM, CD-I, CDV or computer CD.

- 1 Press OPEN/CLOSE on the set.
→ **CD** is shown and the tray is opened.
- 2 Insert an audio CD (printed side up) and close the tray by pressing OPEN/CLOSE on the set again.
→ **READING** is displayed. Then, the CD player stops.
The total number of tracks and the total playing time of the CD are displayed.
- 3 Press **▶II** (PLAY ▶) on the remote control) to start playback.
→ The current track number and the elapsed playing time are displayed.
- 4 Press **■** (STOP ■) on the remote control) to stop playback.
→ The total number of tracks and the total playing time of the CD are displayed.

- You can interrupt playback by pressing **▶II** (II) on the remote control).
→ The time where playback was interrupted is flashing.
- Continue playback by pressing **▶II** (PLAY ▶) on the remote control).

Note: Playback will also stop if:

- you open the CD tray,
- the end of the CD is reached, or
- you select TUNER or AUX.

SHUFFLE and REPEAT

Repeating a track, the CD or the program

- 1 Press repeatedly REPEAT on the remote control during playback to select either:
→ **REPEAT**: The current track is played repeatedly.
→ **REPEAT ALL**: The entire CD (or program) is played repeatedly.
- 2 Playback starts in the chosen mode.
- 3 To return to normal playback, press REPEAT on the remote control until the display indication disappears.

Playing tracks in random order

- 1 Press SHUFFLE during playback.
→ **SHUFFLE** is shown and all tracks of the CD (or program) are played in random order.
- 2 To return to normal playback, press SHUFFLE again.

Note: It is possible to combine shuffle and repeat, e. g.

SHUFFLE REPEAT ALL

Selecting a track and searching

Selecting a track during playback

- Briefly press **◀◀** or **▶▶** (PREV. ◀◀ or NEXT ▶▶) on the remote control) once or several times to skip to the beginning of the current, previous or subsequent track(s).
→ Playback continues with the selected track.

Selecting a track when playback is stopped

- 1 Briefly press **◀◀** or **▶▶** (PREV. ◀◀ or NEXT ▶▶) on the remote control) once or several times.


- 2 Press **▶II** (PLAY ▶) on the remote control) to start CD play.

→ Playback starts with the selected track.

Searching for a passage during playback

- 1 Keep **◀◀** or **▶▶** depressed (**◀◀** or **▶▶** on the remote control) to find a particular passage in a backward or forward direction.
→ Playback continues at a low volume.
- 2 Release the button when you reach the desired passage.
→ Normal playback continues.

Note: During shuffle, while repeating a track or playing a program, searching is only possible within the particular track.

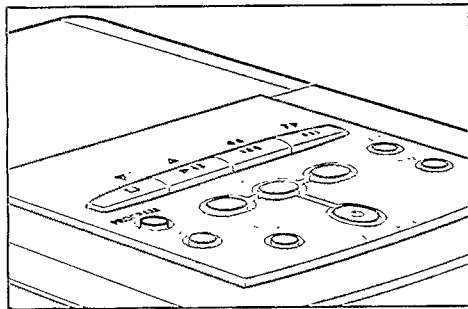

Programming track numbers

You can select up to 20 tracks and store them in the memory in a desired sequence. You can store any track more than once.

- 1 If necessary press ■ (STOP ■ on the remote control) to stop playback.
- 2 Select a desired track with ◀◀ or ▶▶ (PREV. ◀◀ or NEXT ▶▶) on the remote control).
- 3 Press PROGRAM to store the track.
→ PROGRAM flashes and the calculated playing time of the tracks programmed is shown.
- 4 Select and store all desired tracks in this way.
- 5 Press ▶▶ (PLAY ▶▶ on the remote control) to listen to your selection of tracks.

Reviewing the program

- 1 If necessary press ■ (STOP ■ on the remote control) to stop playback.
- 2 To review your program keep PROGRAM depressed for more than 2 seconds.
→ The display shows all stored tracks in sequence.

Note: If you try to store more than 20 tracks the display shows PROGRAM FULL.

Erasing the program

- 1 If necessary press ■ (STOP ■ on the remote control) to stop playback.
- 2 Press ■ (STOP ■ on the remote control) to erase the program.
→ PROGRAM [CLEAR] is displayed once, PROGRAM goes off and the program is erased.


Note: The program will also be erased if you
– interrupt the power supply,
– open the CD tray.

CD player and CD handling


If the CD player cannot read CDs correctly use a commonly available cleaning CD to clean the lens before taking the CD player for repair. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.


The lens may cloud over when the set is suddenly moved from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.

To take the CD out of its box easily, press the centre spindle while lifting the CD. Always pick up the CD by the edge and put it back in its box after use.

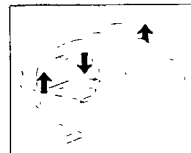

To clean the CD, wipe it in a straight line from the centre toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.

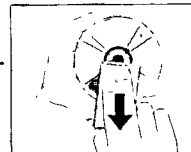

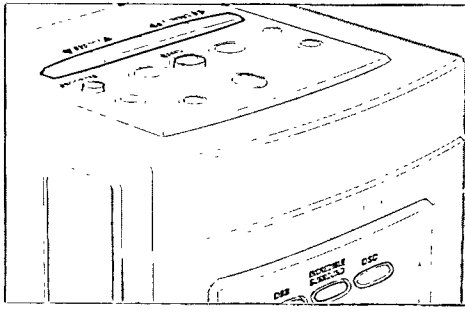

Tuning to radio stations

- 1 Press **TUNER**.
→ **TUNER** is shown.
 - 2 Select a wave band by pressing **BAND** repeatedly.
→ The selected waveband is shown.
 - 3 Keep **◀◀TUNING▶▶** (**◀◀** or **▶▶** on the remote control) depressed for approximately 1 second.
→ **SEARCH** is displayed and the radio tunes to a station with sufficient strength.
 - 4 Repeat searching until you find the desired station.
- To tune to a weak station briefly press **◀◀TUNING▶▶** (**◀◀** or **▶▶** on the remote control) as often as necessary for optimum reception.

Programming radio stations

It is possible to store up to 30 radio stations. The set can select and program stations by itself or you can choose them yourself.

Automatic programming

Using automatic programming will overwrite your former presets.

- Keep **PROGRAM** on the set depressed for more than 2 seconds.
→ **RUTO** is displayed and all available stations are programmed.

Manual programming

- 1 Tune to a desired radio station (see "Tuning to radio stations").
- 2 Press **PROGRAM** on the set.
→ **PROGRAM** flashes.
- 3 Press **▼ PRESET ▲** to assign a number from 1 to 30 to this station.
- 4 Press **PROGRAM** on the set to confirm the setting.
→ **PROGRAM** goes off, the preset number and the frequency of the preset station are displayed.

Tuning to preset stations

- Press **▼ PRESET ▲** until the preset number of the desired station is displayed.

Switching FM antenna sensitivity

If the signal of a FM transmitter is too strong or too weak, it is possible to adjust the antenna sensitivity.

- Keep **DSC** depressed for more than 5 seconds.
→ Either **LOCAL** or **DISTANT** is displayed.

Switchable tuning grid (not on all versions)

In North- and South America the frequency step between MW (AM) channels is 10kHz. In other countries this step is 9kHz. Usually the frequency step has been preset for your area.

In some versions the frequency step can be changed as follows:

- 1 Disconnect the set from the mains.
- 2 Keep **PROGRAM** and **■** on the set depressed while re-plugging the set to the mains.
- 3 Release **PROGRAM** and **■**.
→ **TUNER** is shown followed by either **GRID 10** or **GRID 9**.

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller
Philips New Zealand Ltd.**

✉ P.O. Box 41.021

Auckland

☎ (09) 84 94 160

fax ☎ (09) 84 97 858

Warranty conditions valid for Colour Television, Video Cassette Recorders, Audio Systems, and Portable Audio.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Sound and Vision warrants its products to the purchaser as follows and subject to the stated conditions.

12 months free service

Any defect in materials or workmanship in the product occurring within 12 months from the original date of purchase will be rectified free of charge by Philips Service or one of our authorised service centers.

Conditions of warranty

1. All claims for warranty service should be made to your nearest Philips Service Branch or to a Philips authorised service dealer. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects occurring under normal use of the product when operated in accordance with the instructions.
3. Home service within the normal service area of Philips Service or one of our authorised service centres will be provided for television receivers with screen size 59cm and above. All other products are to be brought or sent to your nearest Philips Service Branch or to an authorised service centre.
4. This warranty does not cover:
 - a) Mileage or traveling time, pickup or delivery, cost of insurance.
 - b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.

c) Product failures caused by misuse, neglect, normal wear and tear, accidental breakage, transit damage, inexpert repairs or modification by unauthorised persons, lightning strikes, vermin infestation or liquid spillage.

d) Cleaning of video or audio heads.

e) Inadequate receiving antennae.

f) Replacement of worn or used batteries, styli or other consumables.

The conditions contained in this warranty replace and override the provisions of the World-Wide Guarantee for Products sold in Australia.

Philips Service Branches

To contact your nearest Philips Service Branch call **13 13 92** from anywhere in Australia.

Sydney

Technology Park
Australia Centre
3 Figtree Drive
Homebush NSW 2140

Newcastle & Central Coast

984 Hunter Street
Newcastle West NSW 2302

Perth

1 Fredrick Street
Belmont WA 6104

Melbourne

Cnr Wellington &
Springsvale Roads
Mulgrave VIC 3170

Brisbane

10 Graystone Street
Tingalpa QLD 4173

Also Service Centres:

Adelaide

348 Torrens Road
Croydon Park SA 5008

Hobart

2A Pierce Street
Moonah TAS 7009

Wollongong

1/216 Corrimal Street
Wollongong NSW 2500

Canberra

Unit F,
66-70 Maryborough Street
Fyshwick ACT 2609

Service is also provided through 1,200 accredited service dealers throughout Australia. To find out about your nearest centre, call **13 13 92**.

Call us direct on the Philips Customer Helpline

Philips customer care lasts as long as you keep the product. Whenever you need any information on the care or operation of your product, remember it's always best to go straight to the source. Phone Philips Helpline direct on

13 13 91

7 days a week

— your call is always welcome.

Please record the following information for your records and keep in a safe place.

Model No:.....


Serial No:.....

***Please retain your purchase
receipt which is required to claim
service under warranty.***

Philips Electronics Australia Limited
ACN 008 445 743, 3 Figtree Drive
Homebush NSW 2140

Version 2, 08/97, FFCP-030

Guarantees

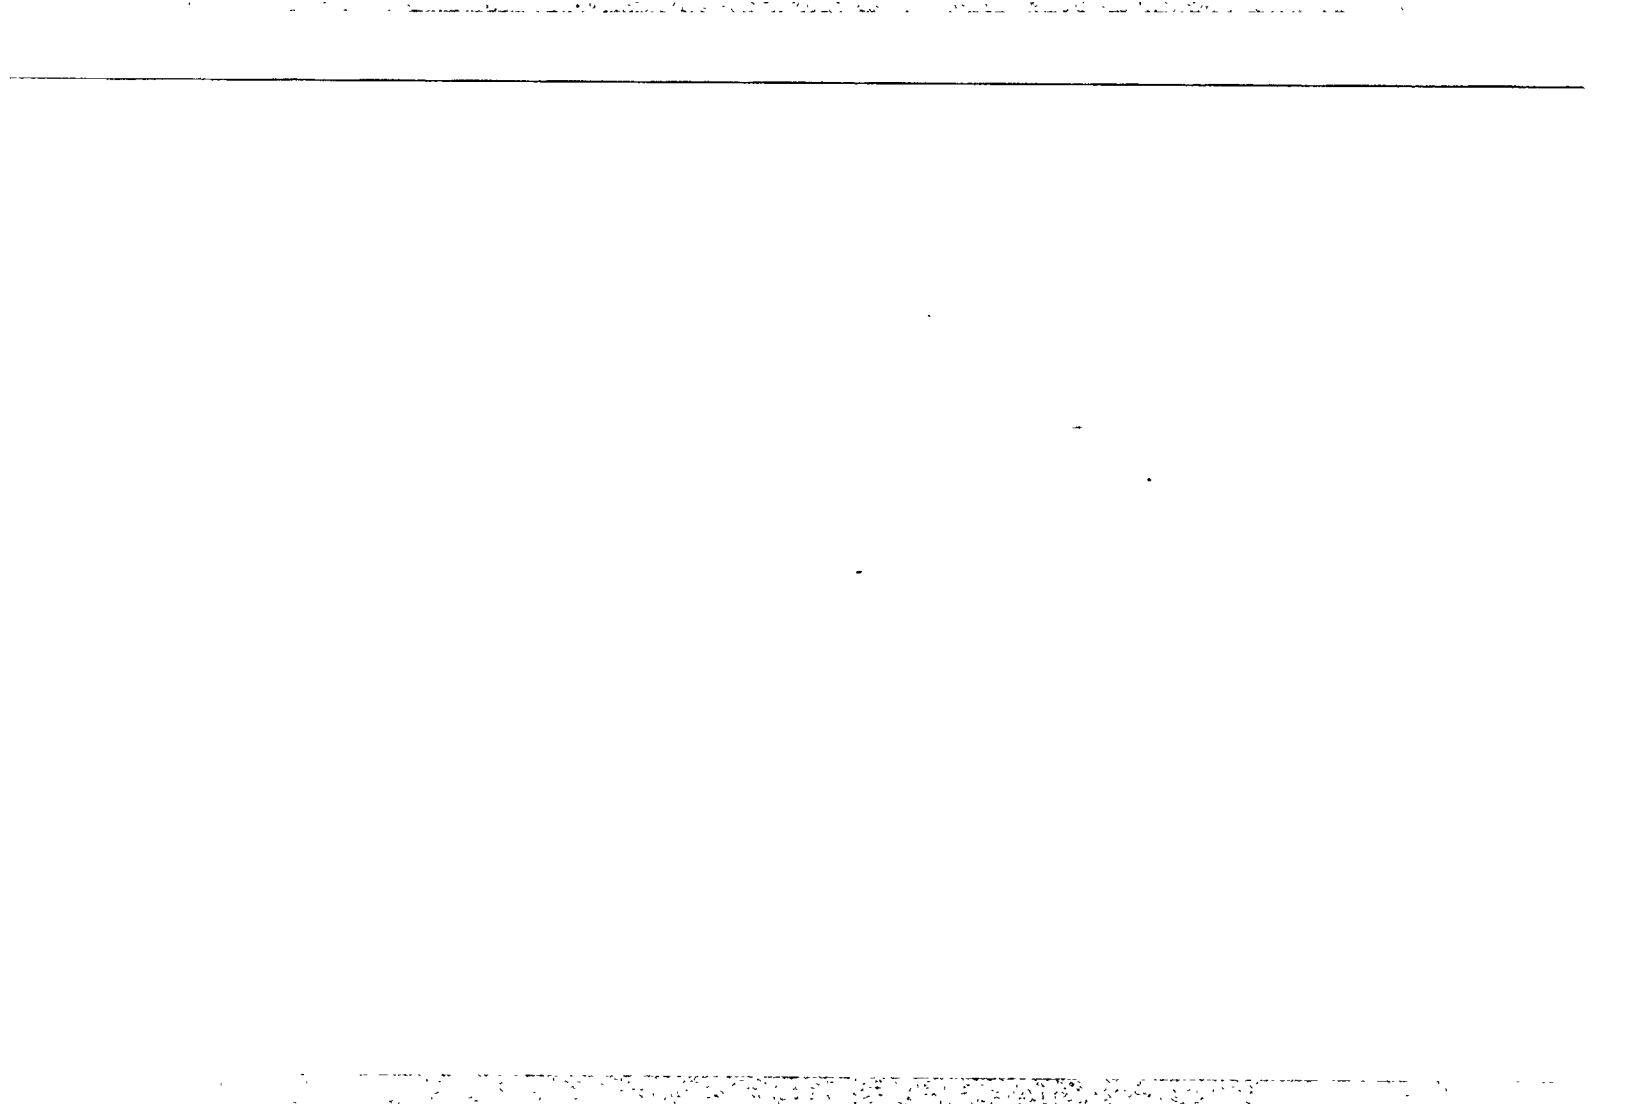

English

Français

Español

中文

Meet Philips at the Internet
<http://www.philips.com>

