

# Quick Start Guide









Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

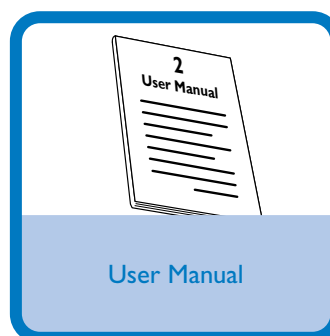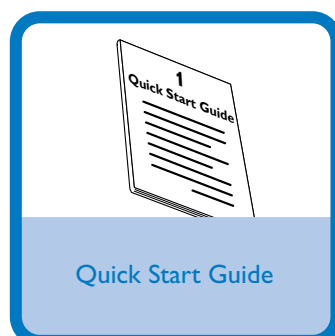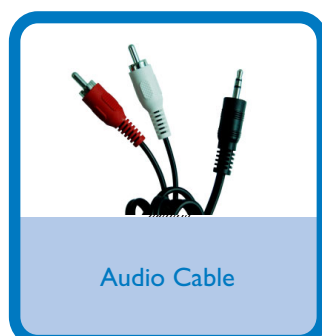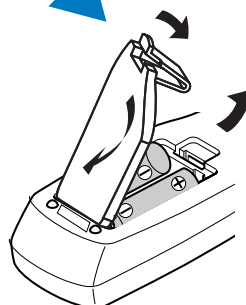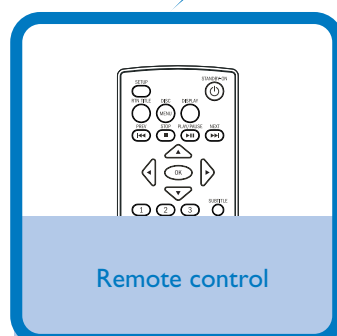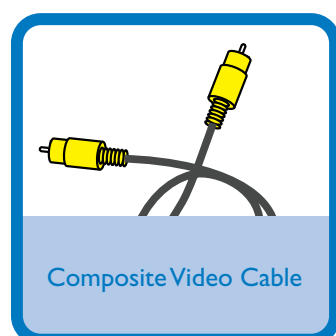

# PHILIPS

## Step A *Connect*

1

Connect the speaker cables.

2

Connect the audio cables.

3

Connect the composite video cable to a TV.

4


Connect the power supplies of the system, subwoofer and TV.

### **IMPORTANT!**

– A separate power switch is provided on the front of the subwoofer. Please switch it on after completing all connections in order to enjoy 2.1-channel sound output.

### *Tip*

– See the User Manual for other TV connection options.

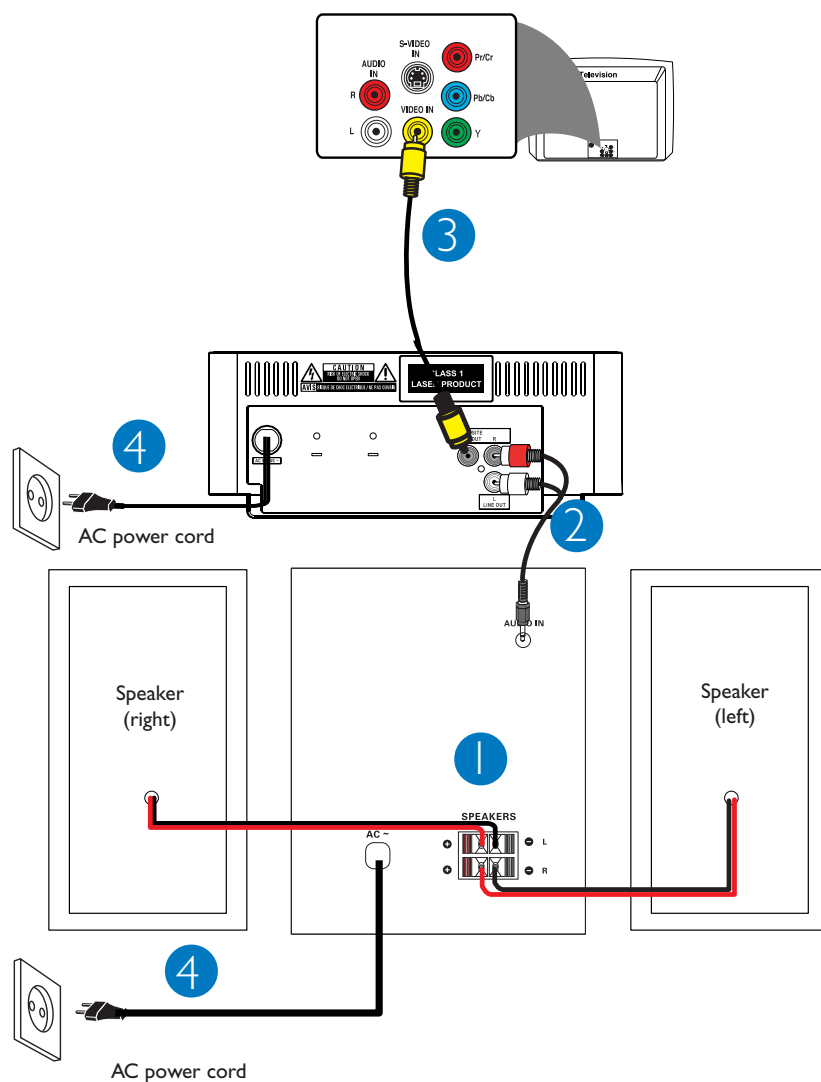

## Step B Setup


### Setting up the TV

1

Press **STANDBY-ON**  to turn the DVD player on.




2

Turn on the TV and set it to the correct Video In channel.

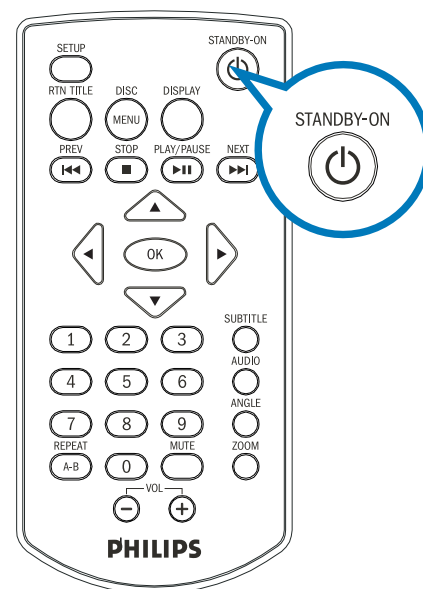

## Step B Setup

### Setting DVD menu options

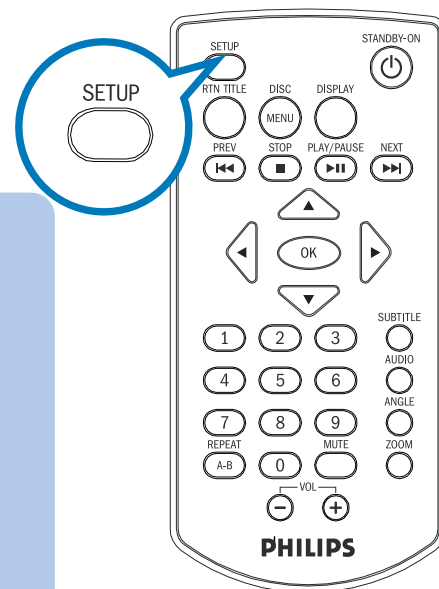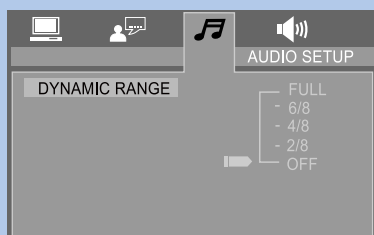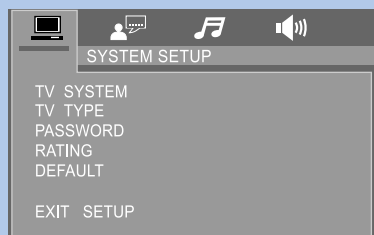

#### Tip

See chapters "Preparations" and "DVD Menu Options" in the User Manual for detailed descriptions.


## Playing a disc

1 Push **OPEN•CLOSE** ▲ on the top of the system to open the disc door.

2 Insert a disc with the print side facing up and close the disc door.

3 Playback will start automatically. If not press ►||.

4 To stop playback, press ■.

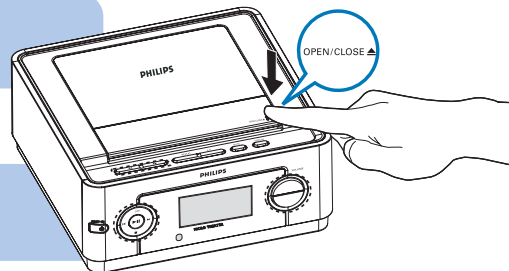

### Tip

*Detailed playback features and additional functions are described in the accompanied user manual.*



© Royal Philips Electronics N.V. 2008  
All rights reserved.

<http://www.philips.com>

