

Quick Start Guide










Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

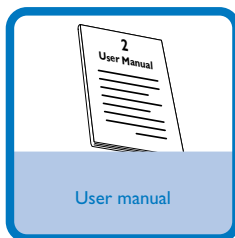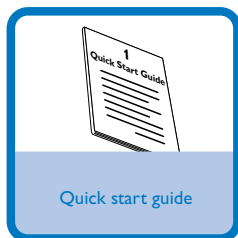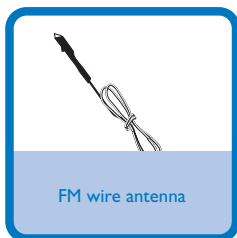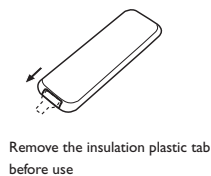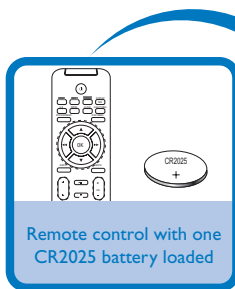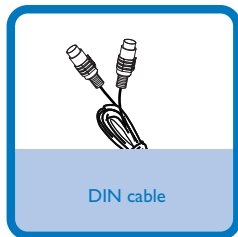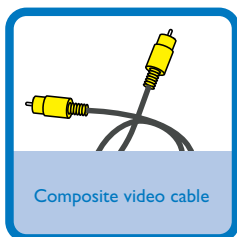

Step A Connect


Important!

– This set can only be operated after the supplied DIN cable has been connected.

Tips


- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

- 1 Connect the speaker wires of the right speaker and subwoofer to the left speaker.
- 2 Connect the supplied FM wire antenna.
- 3 Connect the left speaker and the DVD player by using the supplied DIN cable.
- 4 Connect the DVD player to your TV using the supplied composite video cable.
- 5 Connect the AC power cord to the wall socket.

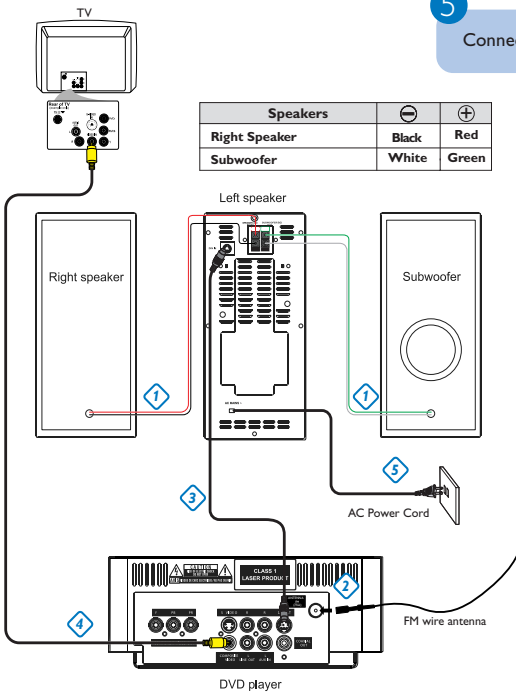

| Speakers | ⊖ | ⊕ |
|---------------|-------|-------|
| Right Speaker | Black | Red |
| Subwoofer | White | Green |

- A** To listen to TV channels through this system, use the audio cable (white/red, not supplied) to connect **AUX IN (L/R)** jacks to the corresponding **AUDIO OUT** jacks on the TV set.
- Before starting operation, press **AUX** on the remote control to select "AUX" to activate the input source.
- B** To listen to disc playback of this system through TV, use the audio cable (white/red, not supplied) to connect **LINE OUT (L/R)** jacks to the corresponding **AUDIO IN** jacks on the TV set.

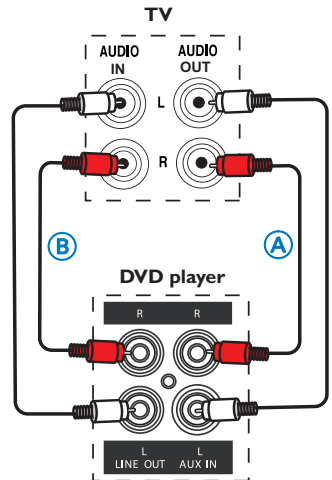

Step B Setup


Setting up the TV

- 1 Press **SOURCE** (DISC on the remote) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

Step B Setup

Setting the clock

- 1 In standby or power on mode, press and hold **CLOCK** on the remote control. The clock digits flash on the display.
- 2 Press **◀/▶** repeatedly to set the hours.
- 3 Press **◀▶** repeatedly to set the minutes.
- 4 Press **CLOCK** again to store the setting.

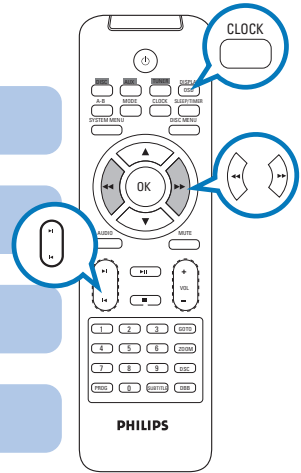



Setting DVD menu options

IMPORTANT!

If the **progressive scan** feature is activated but the connected TV does not support progressive signals or the video cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode then turn on to interlaced mode.
- 2) Select "OFF" in PROGRESSIVE menu of the system setup menu to turn off progressive scan, then press SYSTEM MENU on the remote to exit the system menu.

Or To turn off progressive scan, you may also first open the disc door, then hold down **▶** on the front panel, and press numeric key "1" on the remote.

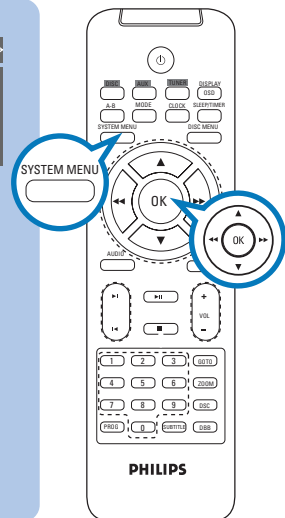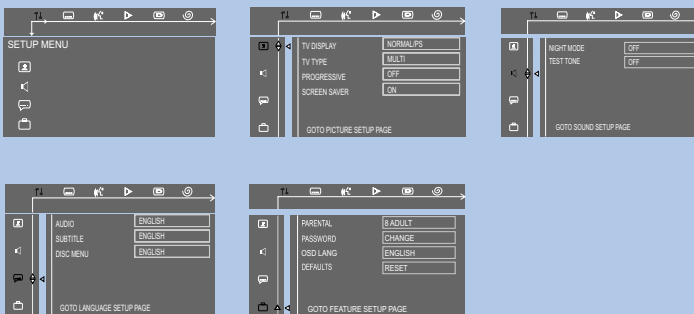

Tip

See chapters "Getting Started" and "DVD menu operations" in the User Manual for detailed descriptions.

