

# Quick Start Guide



 
Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.



AV cables (Y/W/R)





Quick Start Guide



Remote control with  
battery

Remove the plastic  
protective sheet

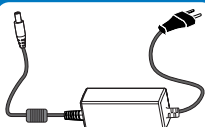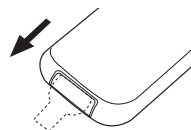

Power adaptor



FM antenna



User Manual



**PHILIPS**

## Step A Connect


### Tip

See the User Manual for other TV connection options.

- 1 Connect the speaker cables.
- 2 Connect the FM antenna.
- 3 Connect the composite video cable (yellow, supplied) to a TV.
- 4 Connect the power cords of the system and TV.

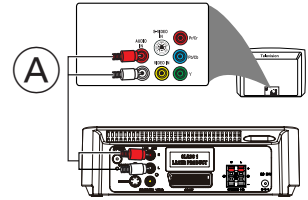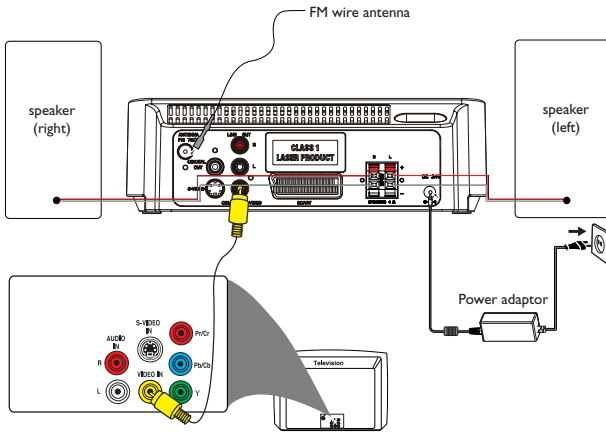

**A** To hear the sound of this DVD Player through your TV, use the audio cables (white/red, supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

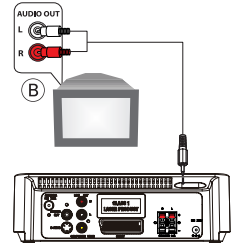


**B** To listen to TV through this system, use a cinch cable (not supplied) to connect **AUX IN** jack (3.5mm) to the corresponding **AUDIO OUT** jacks on the TV set.

## Step B Setup

### Setting up the TV


- 1 Press **SOURCE (DISC)** on the remote control to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

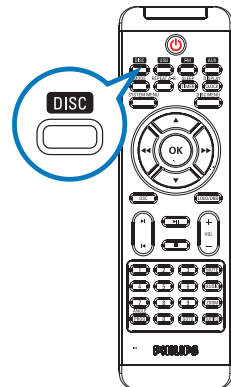






## Step B Setup

### Setting the clock

- 1 In standby mode, press and hold **DISPLAY/CLOCK**. The clock digits flash on the display panel.
- 2 Press **TUNING <</>>** (or <</>> on the remote control) to set the hours.
- 3 Press <|/ >| to set the minutes.
- 4 Press **PROG** to select between 12 hour and 24 hour display.
- 5 Press **DISPLAY/CLOCK** again to store the setting.

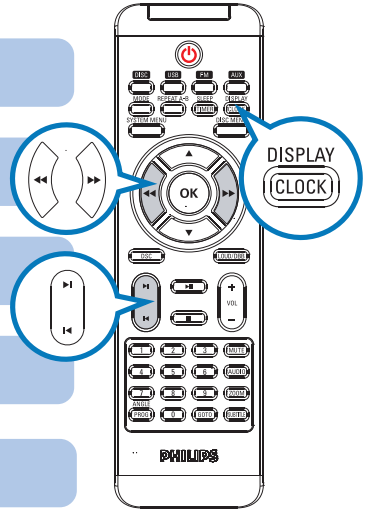

### Setting system menu options

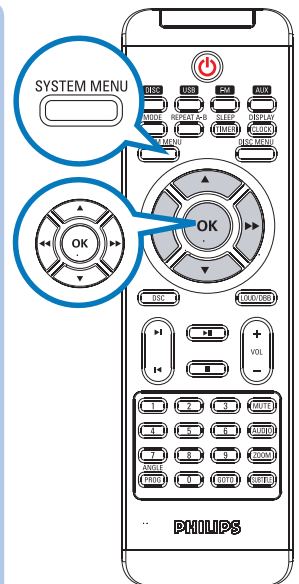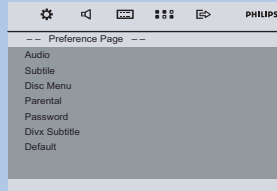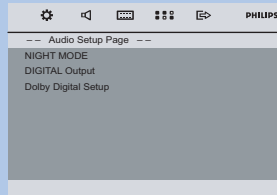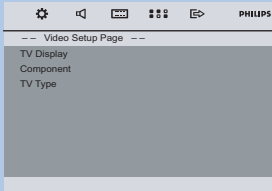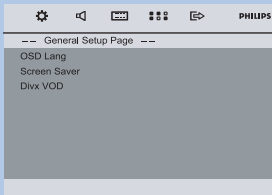

#### Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.



## Playing a disc

- 1 Press **OPEN-CLOSE** to open the disc door and load in a disc, then press the same button again to close the disc door.  
→ Make sure the label side of the disc is facing up.



- 2 Playback will start automatically. If not press **▶||**.

- 3 To stop playback, press **■**.

## Programming and tuning to radio stations

- 1 Press **SOURCE** (**FM** on the remote control) to select tuner source.
- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 Press **◀|▶** until the desired preset station is displayed.

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket on the front panel of the main set.
- 2 Press **SOURCE** (or **USB** on the remote control) once or more to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

