

Quick Use Guide



MCD280

 


PHILIPS

Use this simple and quick way to watch your favourite DVD movie and enjoy your Home Cinema experience!

Helpful Hints

You only need to make one video connection to your TV in order to view the DVD playback.






If your TV has S-Video or Component (Pr/Cr Pb/Cb/Y) video jacks, use one of these video connections instead for higher picture quality.



If your TV has only a single Antenna In jack, you will need an accessory RF modulator. The RF modulator converts the video from the DVD system so it can play through the TV's Antenna connector. Refer to your owner's manual for proper connection.

When listening to TV programs, press **AUX In** button on the remote to set the DVD system to AUX mode in order for the sound to be heard.

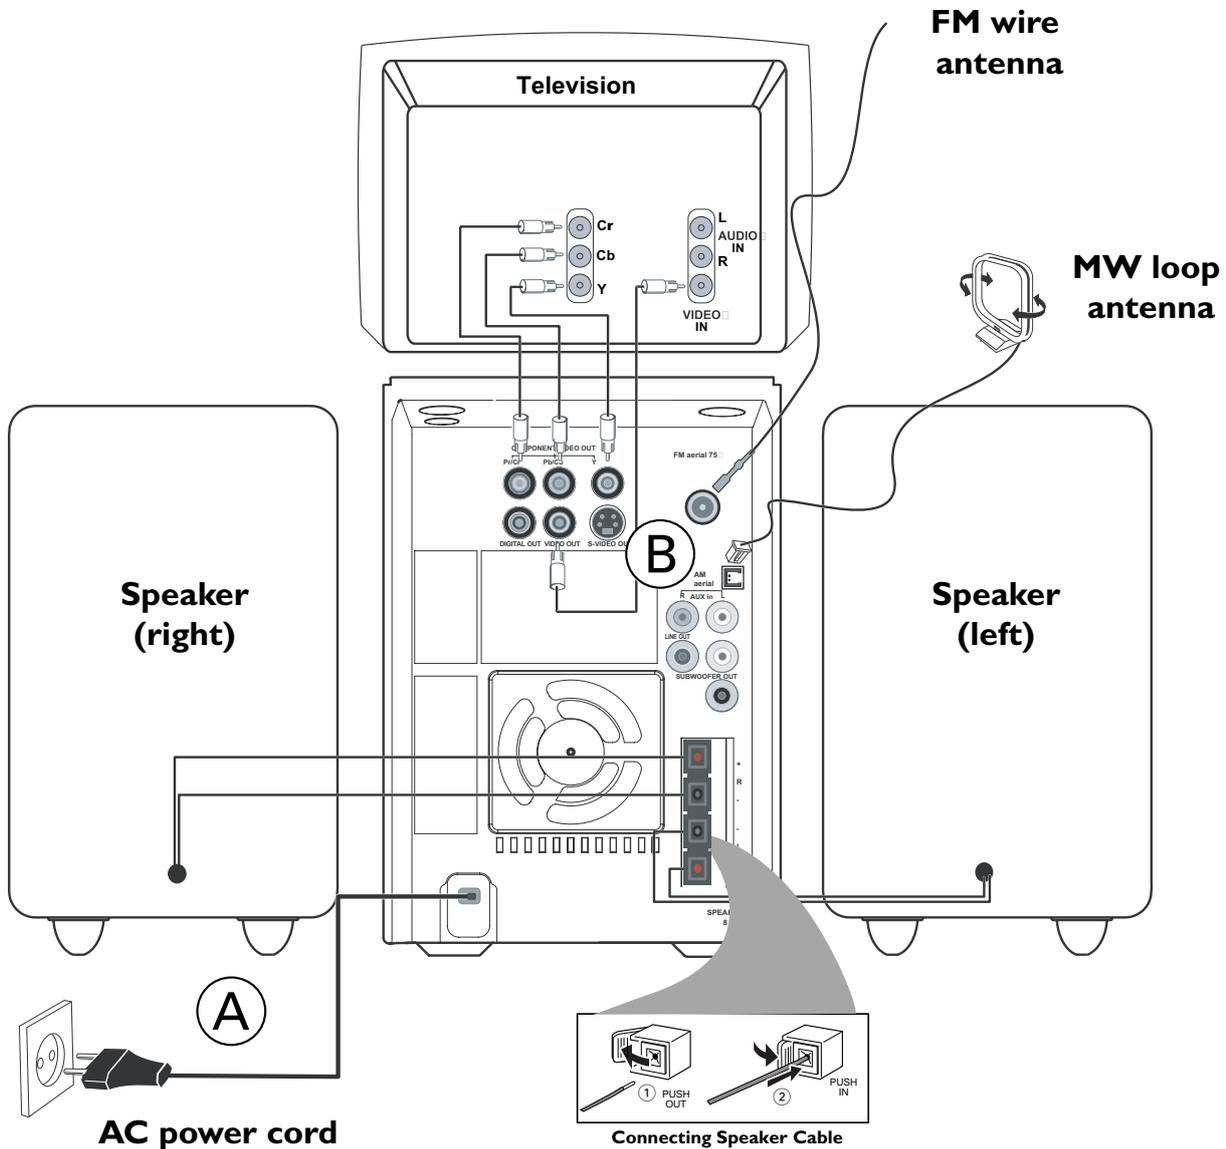

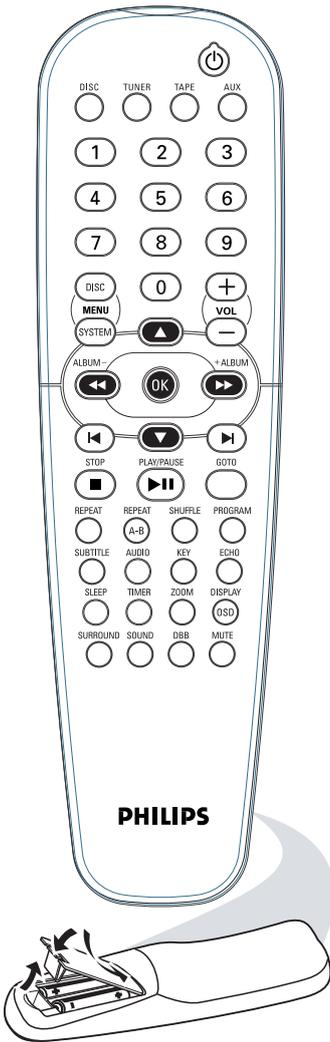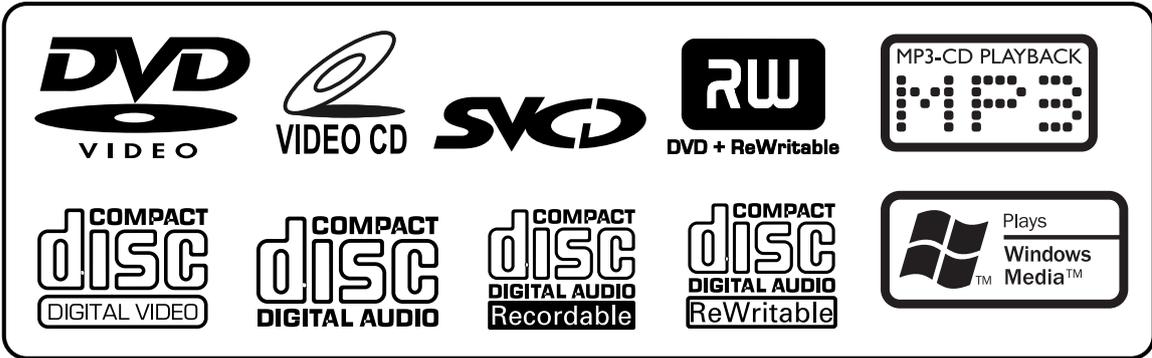

Make sure your DVD system and TV are connected and turned on!

Playing a disc

- 1 Press DISC on the remote control.**
You can also press **SOURCE** on the front panel to select **DISC**.
- 2 Turn on the TV and select the correct Video In mode.**
You should see the blue Philips DVD background screen on the TV (If no disc in the DVD system).
- 3 Press OPEN•CLOSE ▲ on the top of the DVD system and load a disc, then press OPEN•CLOSE ▲ again to close the disc compartment.**
Make sure the disc label is facing up. For double-sided discs, load the side you want to play face up.
- 4 Playback will start automatically.**
If a disc menu appears, use ◀◀/▶▶/▲/▼ buttons on the remote to make the necessary selection, then press OK to confirm. Or, use the numeric keypad on the remote to select features. Follow the instructions given in the disc menu.
- 5 To stop playback, press STOP ■.**

Region Codes

DVDs must be labeled for **ALL** regions or **Region 3**, in order to play on this DVD system.



You should find the below accessories in the packaging box.

<p>Audio cables (white, red)</p>	<p>component video cables (red, blue, green)</p>	<p>MW loop antenna FM wire antenna</p>
<p>Composite video cable (yellow)</p>	<p>AA size batteries</p>	<p>Plug adapter (not for all versions)</p>



Detailed playback features and additional functions are described in the accompanying owner's manual