

Quick Start Guide












Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

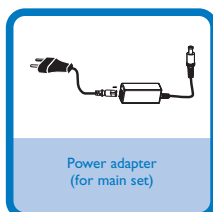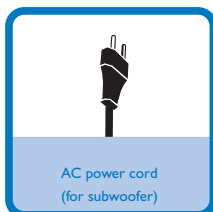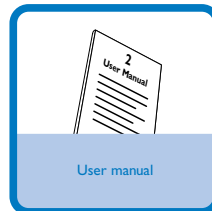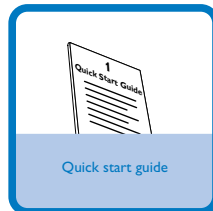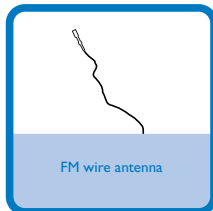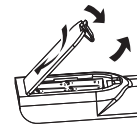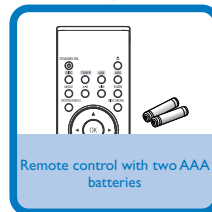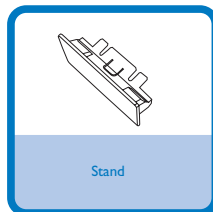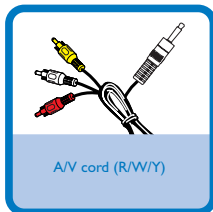


PHILIPS

Step A *Connect*

Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.
- In case of wireless connection failure between the main set and subwoofer, see the User Manual for manual pairing (“Installation - Step 1: Connecting speakers - Connecting the wireless subwoofer”).


- 1 Connect the speaker cables.
- 2 Connect the FM antenna.
- 3 Connect the A/V cord to a TV.
- 4 Connect the power cords of the system and TV.
- 5 Power on both the main set and subwoofer.
→ Wireless connection will set up automatically.

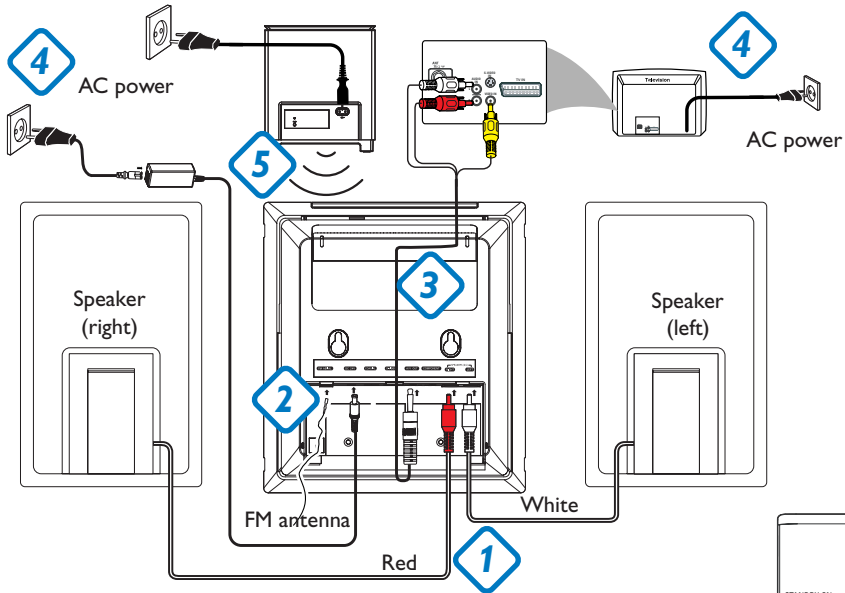

Step B *Setup*

Setting up the TV

- 1 Press **SOURCE** (**DISC** on the remote control) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

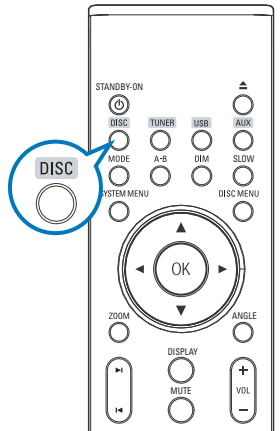

Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold **STANDBY-ON/ECO POWER**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the remote control.

2

When the hour digits flash, press **VOLUME+/- (VOL+/-)** on the remote control) to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then press **VOLUME+/- (VOL+/-)** on the remote) to set the minutes.

4


Press **CLOCK** again to confirm the time setting.

Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM MENU** on the remote to exit the system menu and then **DISC** and “1” to exit progressive scan.

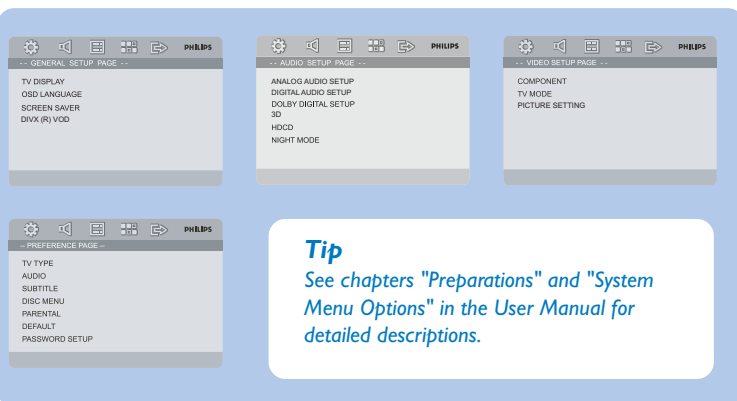

The image shows four screenshots of the Philips TV system menu. The top row contains three screenshots: 'GENERAL SETUP PAGE', 'AUDIO SETUP PAGE', and 'VIDEO SETUP PAGE'. The bottom left screenshot shows the 'PREFERENCE PAGE'. The 'AUDIO SETUP PAGE' includes options for ANALOG AUDIO SETUP, DIGITAL AUDIO SETUP, DOLBY DIGITAL SETUP, 3D, HDCD, and NIGHT MODE. The 'VIDEO SETUP PAGE' includes options for COMPONENT, TV MODE, and PICTURE SETTING. The 'PREFERENCE PAGE' includes options for TV TYPE, AUDIO, SUBTITLE, DISC MENU, PARENTAL, DEFAULT, and PASSWORD SETUP.

Tip
See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

