

Quick Start Guide












Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

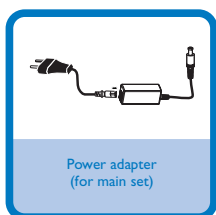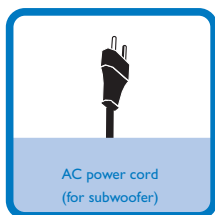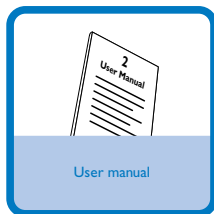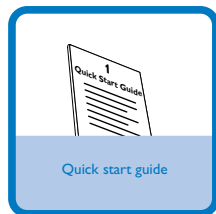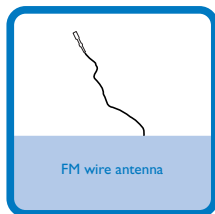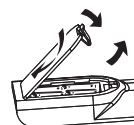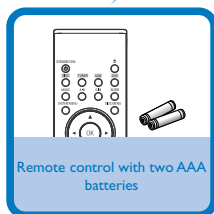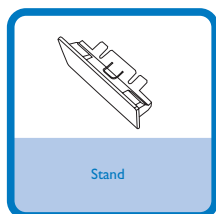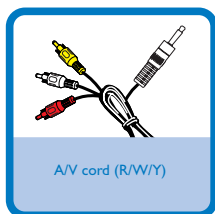


PHILIPS

Step A Connect

Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.
- In case of wireless connection failure between the main set and subwoofer, see the User Manual for manual pairing (“Installation - Step 1: Connecting speakers - Connecting the wireless subwoofer”).


- 1 Connect the speaker cables.
- 2 Connect the FM antenna.
- 3 Connect the A/V cord to a TV.
- 4 Connect the power cords of the system and TV.
- 5 Power on both the main set and subwoofer.
→ Wireless connection will set up automatically.

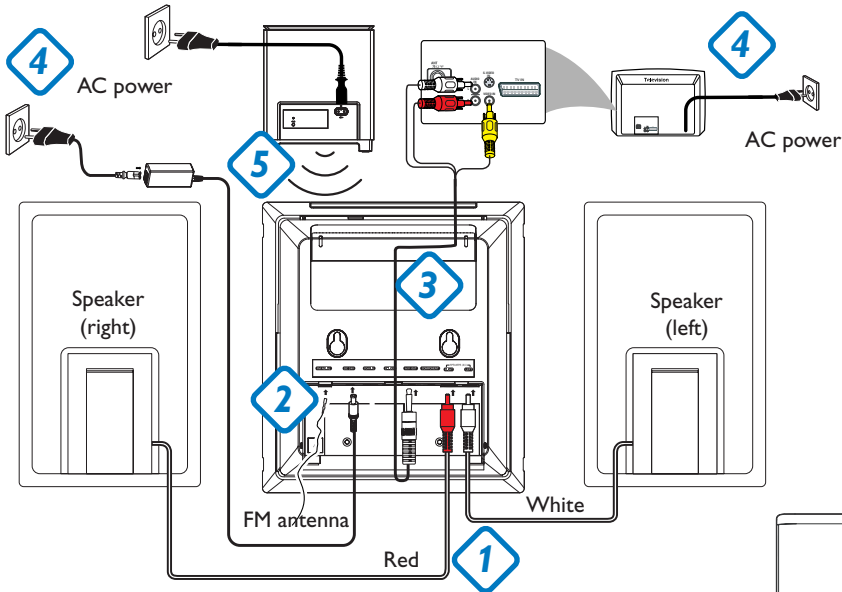

Step B Setup

Setting up the TV

- 1 Press **SOURCE** (DISC on the remote control) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

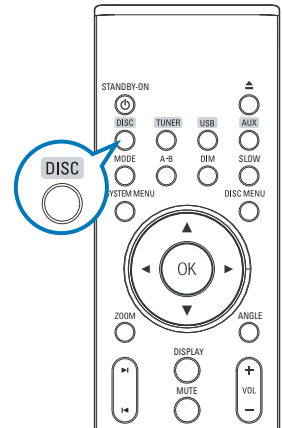

Step B Setup

Setting the clock

1

In standby mode, press and hold **CLOCK** on the remote control.

2

When the hour digits flash, press **VOLUME-/+** (**VOL+/-** on the remote control) to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then press **VOLUME-/+** (**VOL+/-** on the remote) to set the minutes.

4


Press **CLOCK** again to confirm the time setting.

Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM MENU** on the remote to exit the system menu and then **DISC** and "1" to exit progressive scan.

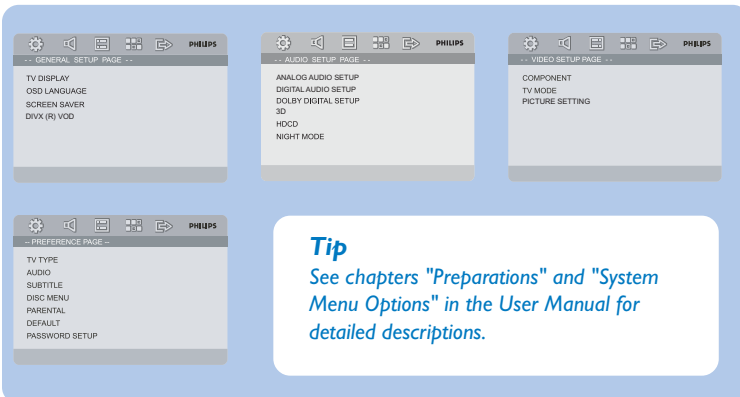

The image displays four screenshots of the Philips TV system menu. The first screenshot shows the 'GENERAL SETUP PAGE' with options: TV DISPLAY, OSD LANGUAGE, SCREEN SAVER, and DIVX (R) VCD. The second screenshot shows the 'AUDIO SETUP PAGE' with options: ANALOG AUDIO SETUP, DIGITAL AUDIO SETUP, DOLBY DIGITAL SETUP, SD, HDCD, and NIGHT MODE. The third screenshot shows the 'VIDEO SETUP PAGE' with options: COMPONENT, TV MODE, and PICTURE SETTING. The fourth screenshot shows the 'PREFERENCE PAGE' with options: TV TYPE, AUDIO, SUBTITLE, DISC MENU, PARENTAL, DEFAULT, and PASSWORD SETUP.

Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

