

Quick Start Guide






Step A *Connect*

Step B *Setup*





Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

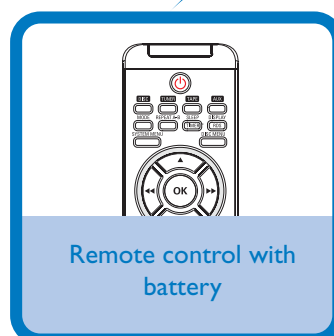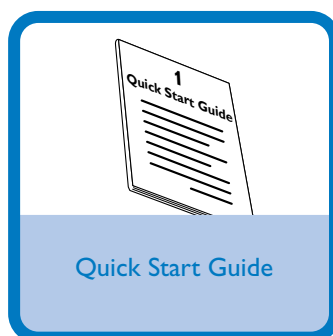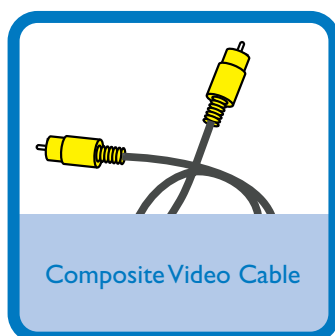

Remove the plastic protective sheet

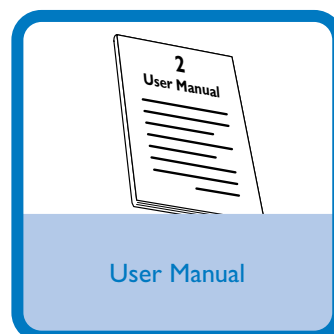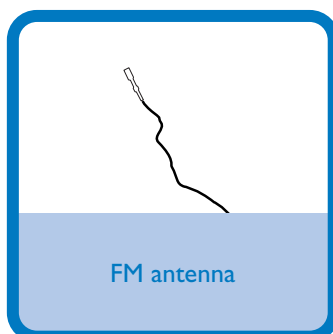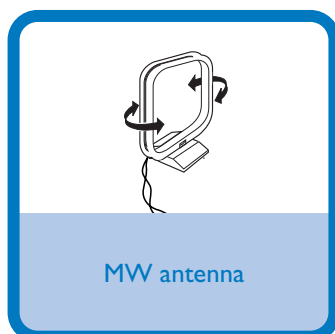
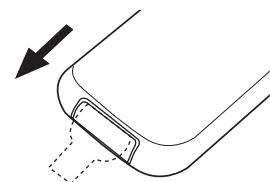


Step A *Connect*


Tip

See the User Manual for other TV connection options.

- 1 Connect the speaker cables.
- 2 Connect the FM and MW antennas.
- 3 Connect the composite video cable to a TV.
- 4 Connect the power cords of the system and TV.

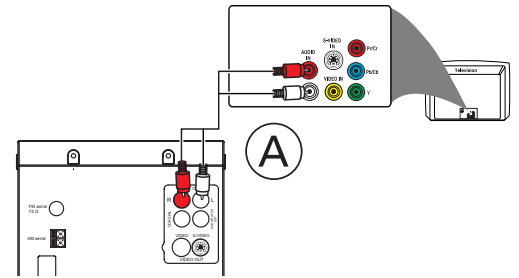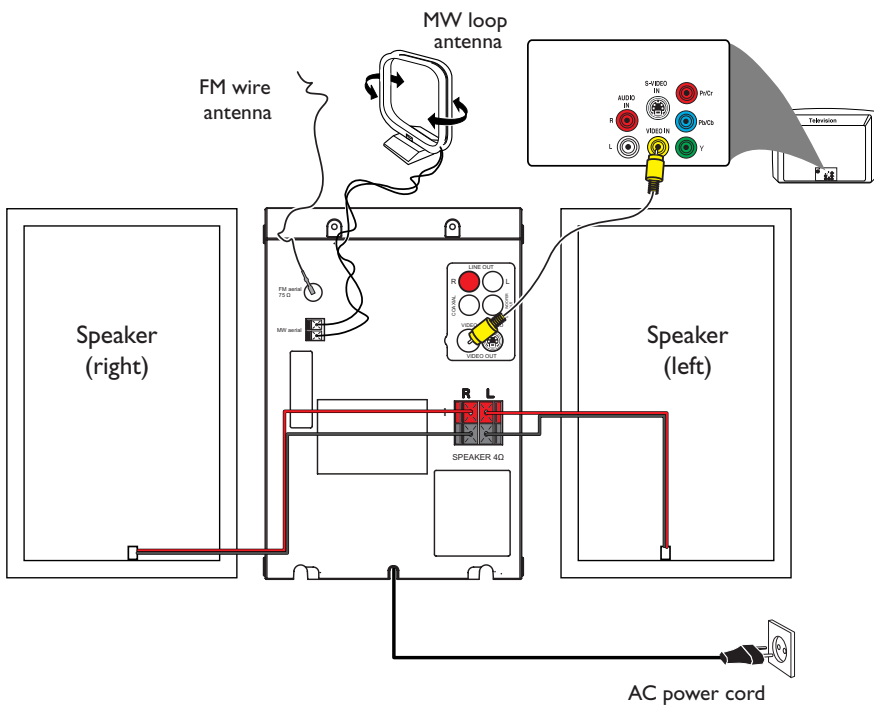

Ⓐ To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

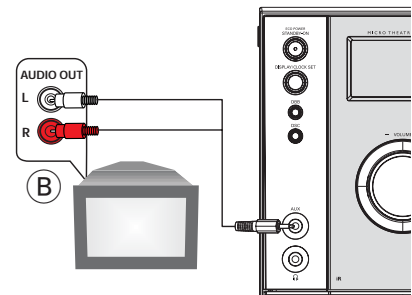


Ⓑ To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **AUX** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

Step B *Setup*

Setting up the TV


- 1 Press **SOURCE** (**DISC** on the remote) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

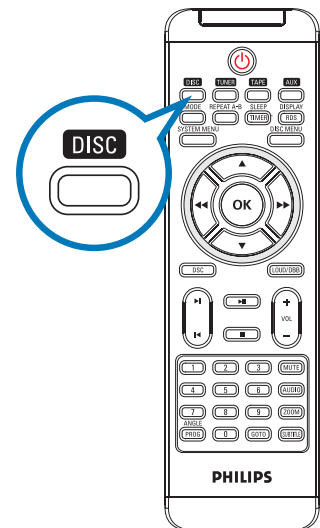






Step B Setup

Setting the clock

- 1 In standby mode, press and hold **DISPLAY/CLOCK SET** on the system.
- 2 When the hour digits flash, turn the **VOLUME +/-** control on the front panel or press **VOL +/-** on the remote to set the hours.
- 3 Press **DISPLAY/CLOCK SET** again and the minute digits flash. Then turn the **VOLUME +/-** control on the front panel or press **VOL +/-** on the remote to set the minutes.
- 4 Press **DISPLAY/CLOCK SET** again to confirm the time setting.

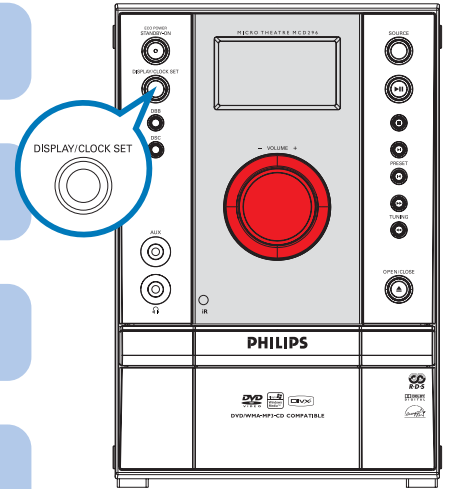

Setting system menu options

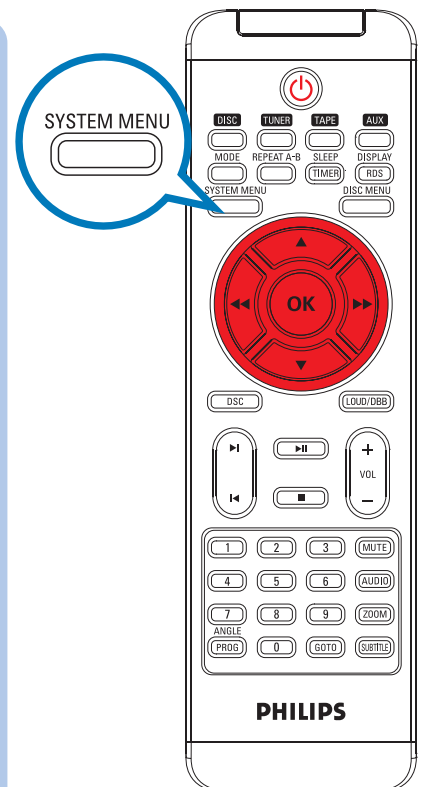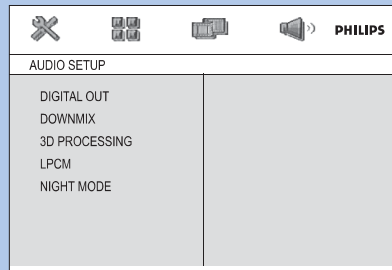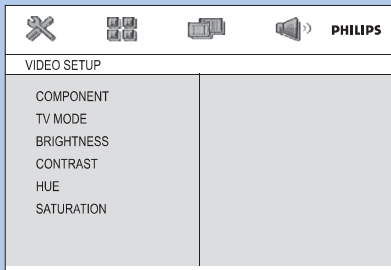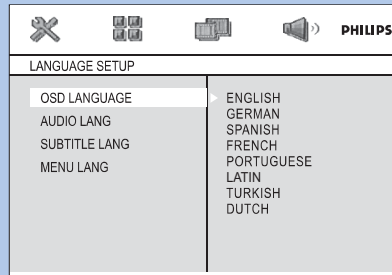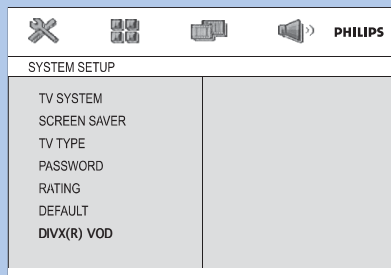

Tip


See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

Playing a disc

- 1 Press **OPEN•CLOSE ▲** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press **▶ ||**.

- 3 To stop playback, press **■**.

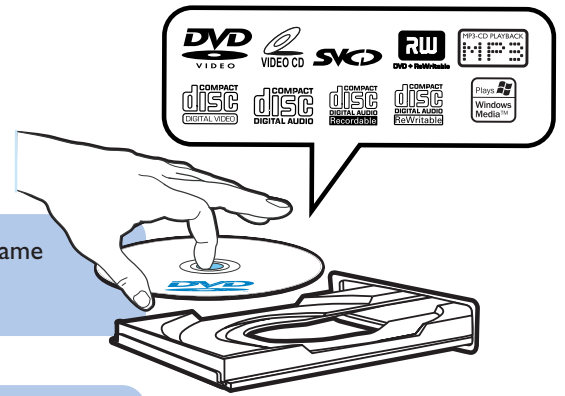

Programming and tuning to radio stations

- 1 Press **SOURCE (TUNER)** on the remote to select tuner source.

- 2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.

- 3 Press **PRESET ◀/▶** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

