

# Quick Start Guide





Step A **Connect**

Step B **Setup**





Step C **Enjoy**

## What's in the Box?

You should find these items upon opening the box.

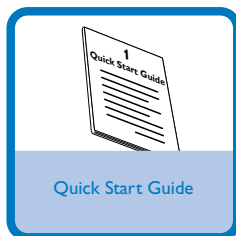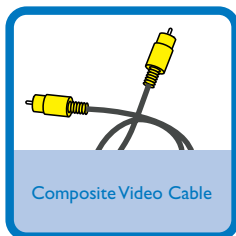

Remove the plastic protective sheet

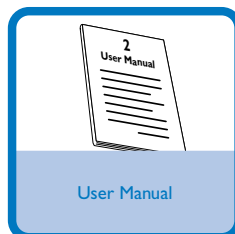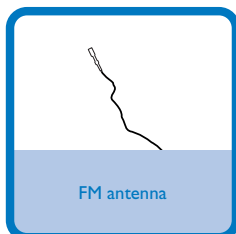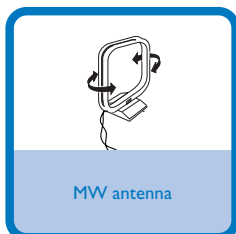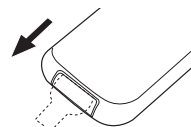



**PHILIPS**

# Step A **Connect**


## Tip

See the User Manual for other TV connection options.

- 1 Connect the speaker cables.
- 2 Connect the FM and MW antennas.
- 3 Connect the composite video cable to a TV.
- 4 Connect the power cords of the system and TV.

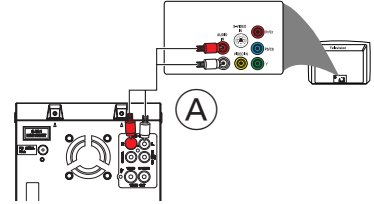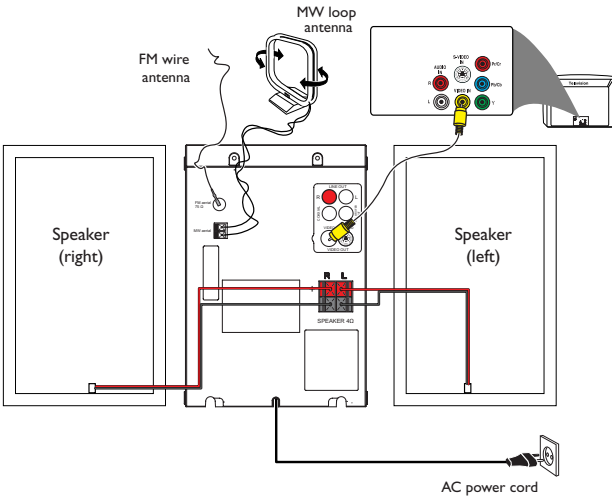

**A** To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

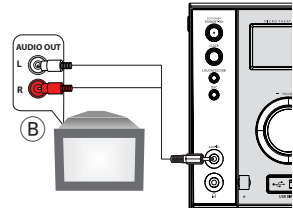


**B** To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **AUX-IN** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

# Step B **Setup**

## Setting up the TV

- 1 Press **SOURCE** (**DISC** on the remote) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

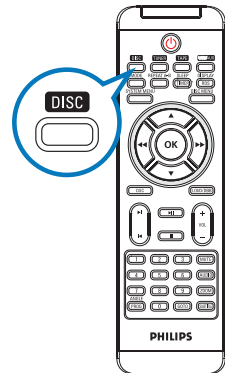

## Step B Setup

### Setting the clock

Important!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY ON** on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the system.

2


When the hour digits flash, turn the **VOLUME +/-** control on the front panel or press **VOL +/-** on the remote to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then turn the **VOLUME +/-** control on the front panel or press **VOL +/-** on the remote to set the minutes.


4

Press **CLOCK** again to confirm the time setting.

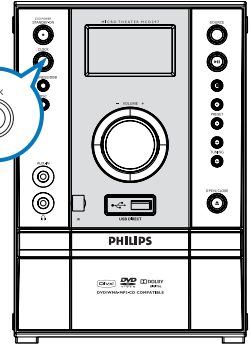






### Before using the remote control

 - 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example CD, TUNER).
- 3 Then select the desired function (for example ► II , ◀◀, ►►)

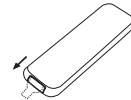

Remove the plastic protective sheet

### Setting system menu options

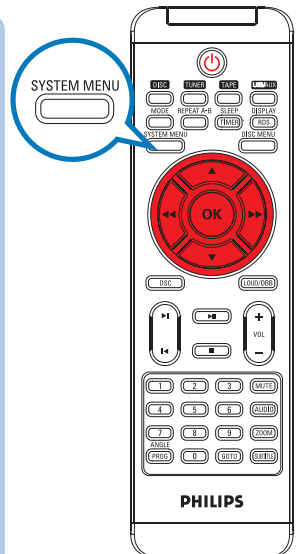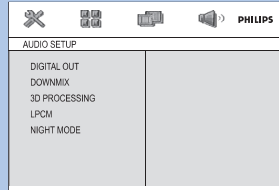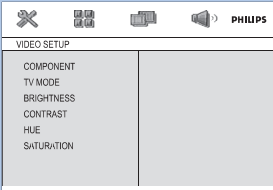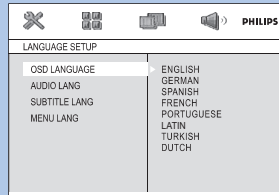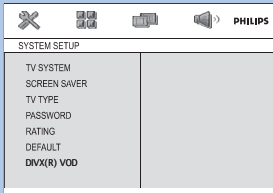

#### Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.



## Playing a disc

- 1 Press **OPEN-CLOSE**  $\blacktriangle$  to open the disc tray and load in a disc, then press the same button again to close the disc tray.  
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press **▶ ||**.

- 3 To stop playback, press **■**.

## Programming and tuning to radio stations


- 1 Press **SOURCE (TUNER)** on the remote to select tuner source.
- 2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.
- 3 Press **PRESET**  $\blacktriangleleft/\blacktriangleright$  until the desired preset station is displayed.

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the front panel of the main set.
- 2 Press **SOURCE (or USB/AUX)** on the remote control) once or more to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

