

Quick start guide










Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

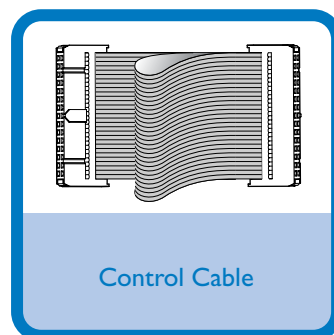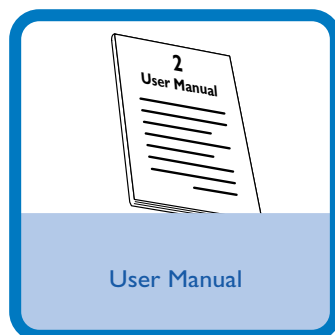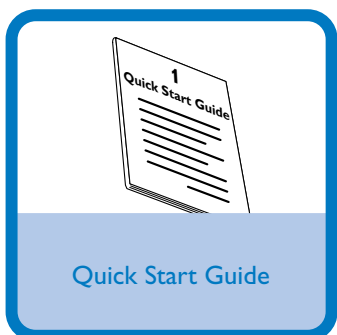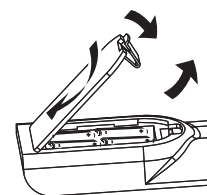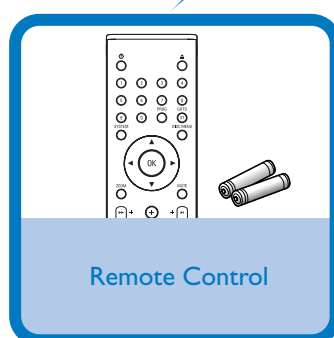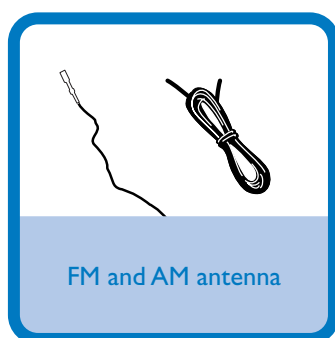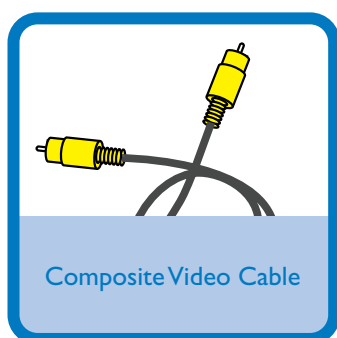


Step A *Connect*

- 1 Connect the speakers to the **SPEAKERS** (8ohm) terminals with two speaker cables. Right speaker to "R" and left speaker to "L", red wire to "+" and silver wire to "-".
- 2 Connect the supplied **AM antenna** and **FM antenna** to the respective terminals. Adjust the position of the antenna for optimal reception.
- 3 Connect the serial port marked **CONTROL CABLE** at the rear of the DVD player to the same port at the rear of the power amplifier with the supplied control cable.
- 4 Connect the **VIDEO OUTPUT** jack at the rear of the DVD player to the video input jack on the TV using the supplied video cable (yellow).


Tip


See the User Manual for other TV connection options.

- 5 Connect the power cord of the DVD system to the AC power outlet.

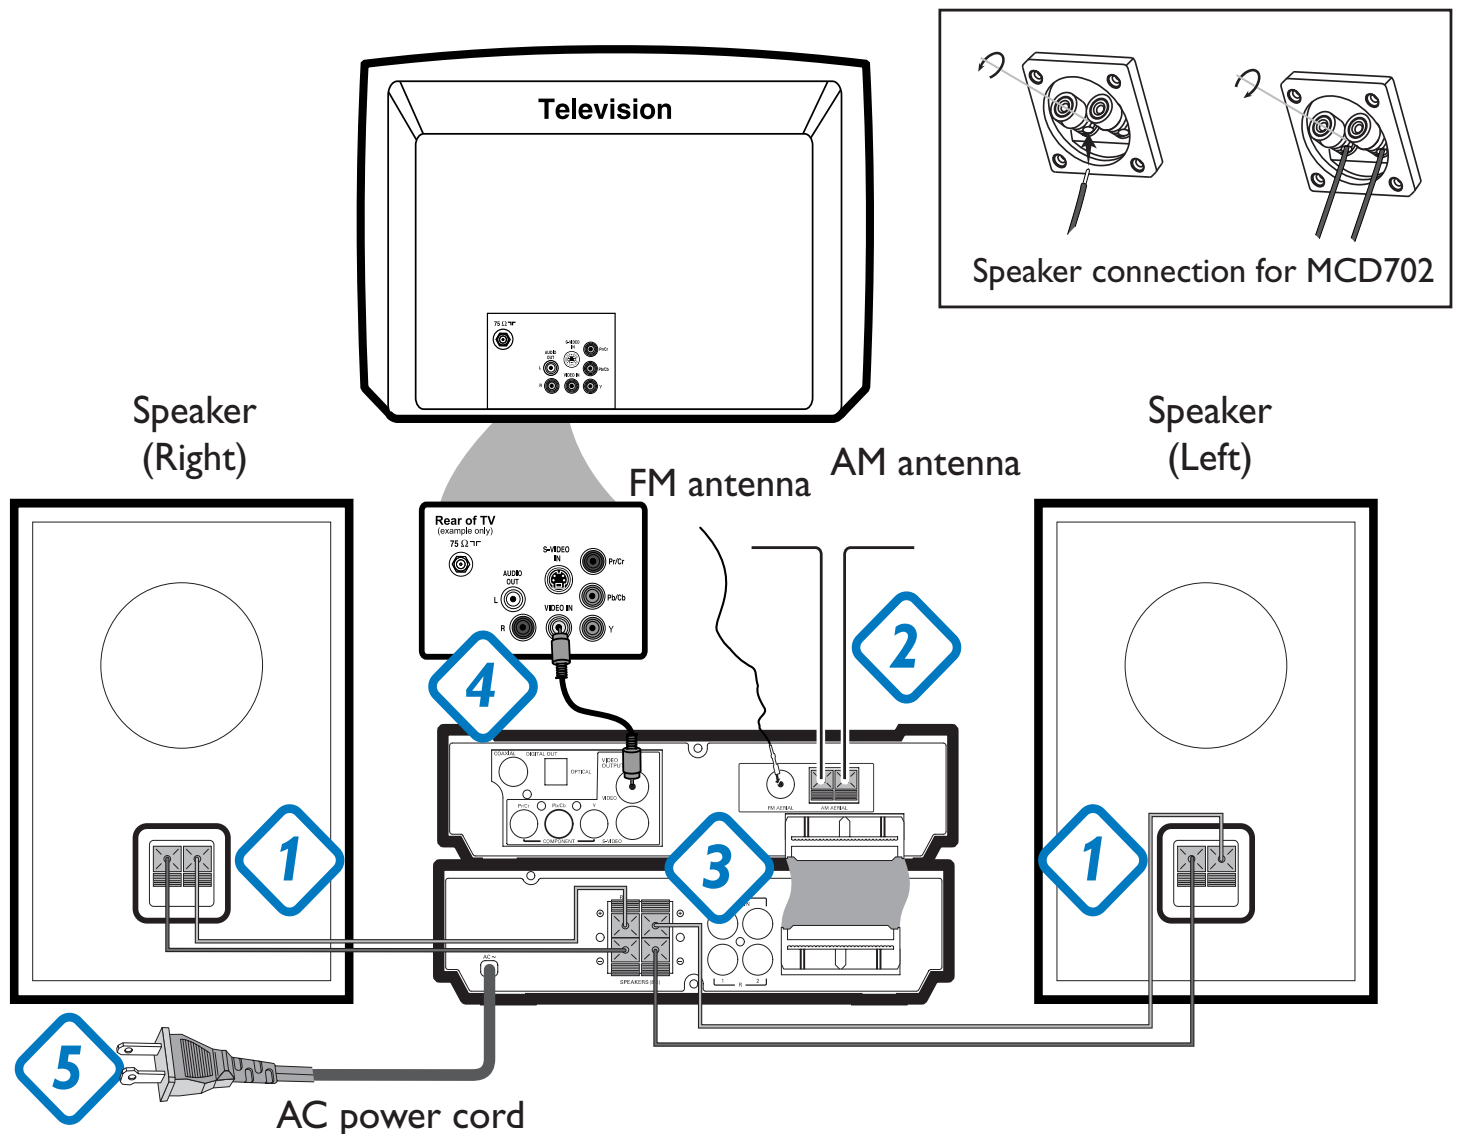

Setting up the TV

- 1 Press **STANDBY ON**  on the front panel of the DVD player or  on the remote to switch the DVD system on and then select the disc source.



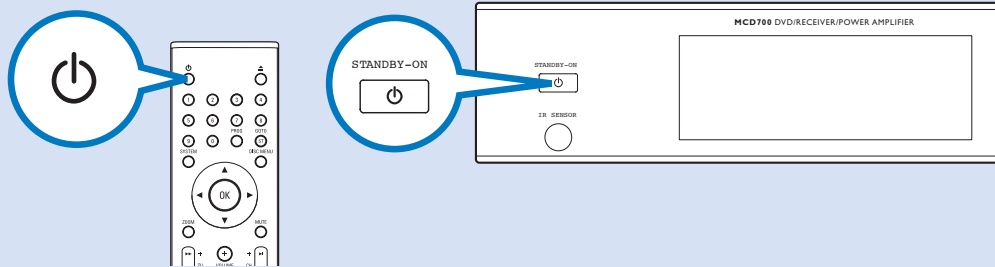


- 2 Switch on the TV set and set to the correct video-in channel until the blue Philips DVD background screen appears on the TV.

Tip
See your TV manual for more details.

Setting language preferences



- 1 Press **SYSTEM** on the remote to enter the system menu.
- 2 Press **◀▶** on the remote to enter the 'Preference Page'. Then, select the preferred audio, subtitle and disc menu languages using **◀▶▲▼** and **OK** on the remote.
- 3 Press **◀▶** on the remote to enter the 'General Setup Page' and select the preferred OSD language using **◀▶▲▼** and **OK** on the remote.

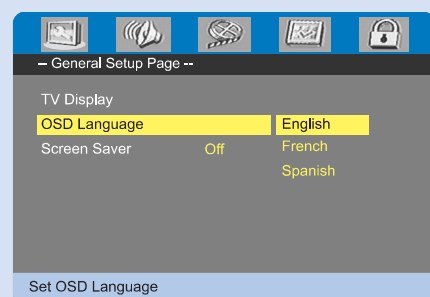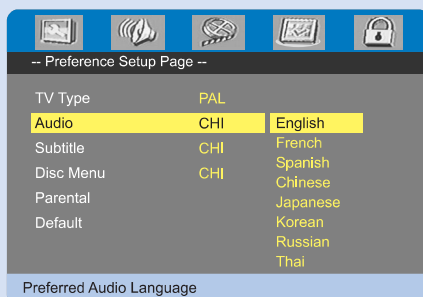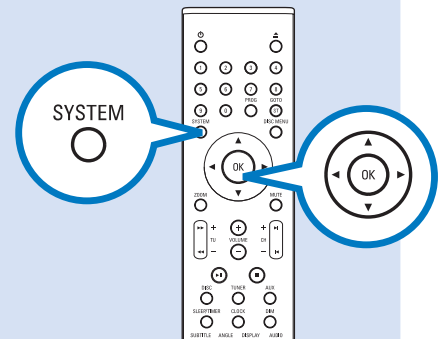

Tip
You can enter the 'Preference Page' in full stop mode only.


Loading a disc

- 1 Select the disc source, then press **OPEN•CLOSE** at the top of the DVD player or  on the remote.

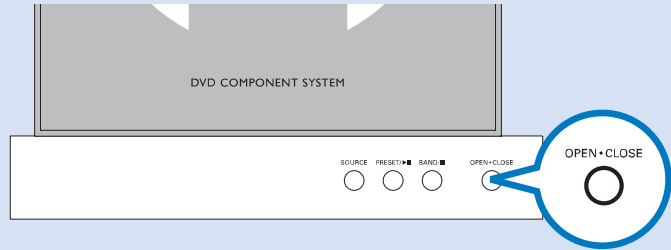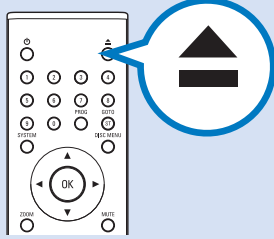



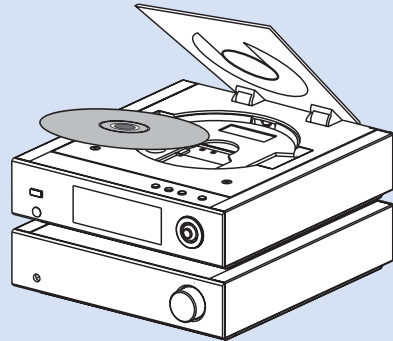

- 2 Load in a DVD disc with the label side facing up.

- 3 A disc menu pops up.




Playback

- 1 Use     and **OK** or **Numeric Keypad (0-9)** on the remote to select a playback feature or item.







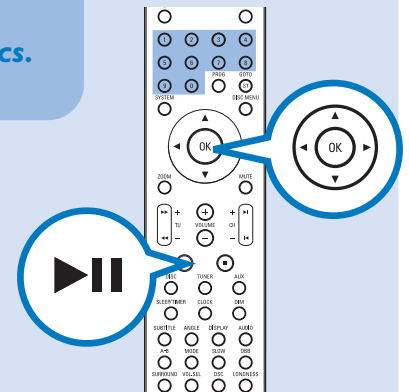

Tip

Refer to the User Manual for playback of other types of discs.

- 2 Press **PRESET/▶II** (or  on the remote) to start playback.



Types of Discs used on this DVD System

Type	Record	Playback	Edit
 DVD+RW <small>DVD + ReWritable</small>	✗	✓	✗
 DVD VIDEO	✗	✓	✗
 VIDEO CD	✗	✓	✗
 Super VCD	✗	✓	✗
 AUDIO CD	✗	✓	✗
 VIDEO CD	✗	✓	✗
 MP3-CD	✗	✓	✗
 WMA	✗	✓	✗



2005 © Koninklijke Philips Electronics N.V.
All rights reserved.

www.philips.com