

# Quick Start Guide










Step A **Connect**

Step B **Setup**

Step C **Enjoy**

## What's in the Box?

You should find these items upon opening the box.

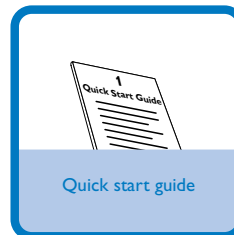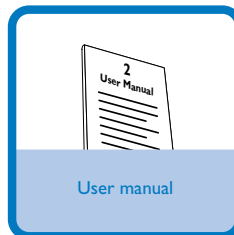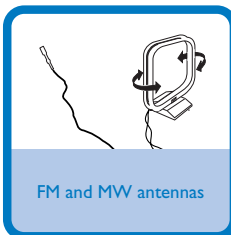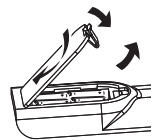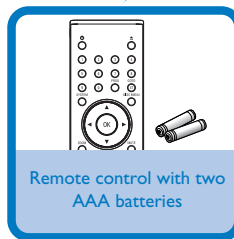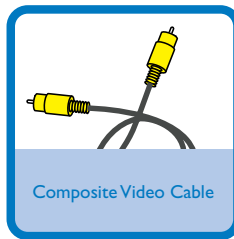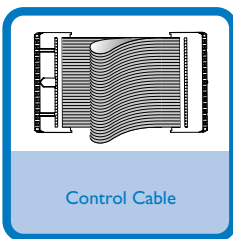

## Step A **Connect**

### Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

1

Connect the speaker and subwoofer cables.

2

Connect the MW and FM antennas.

3


Connect the control cable.

4

Connect the composite video to a TV.

5

Connect the power cords of the system and TV.

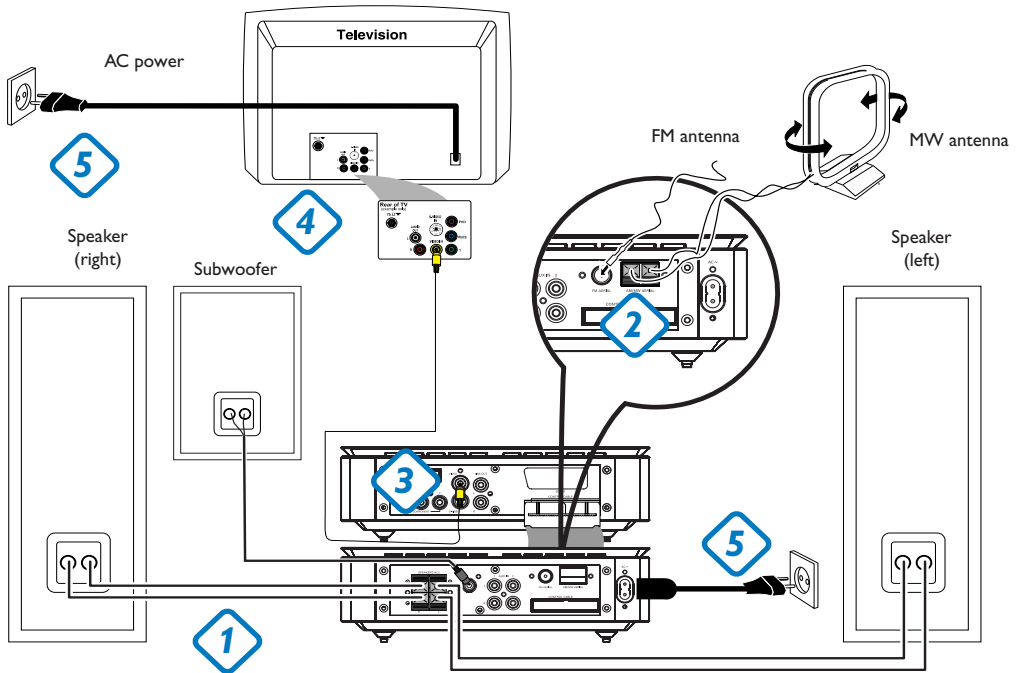

## Step B **Setup**



### Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2


Turn on the TV and set it to the correct Video In channel.

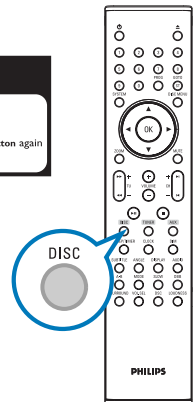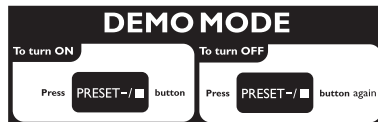

# Step B Setup

## Setting the clock

### IMPORTANT!

- To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK/RDS** on the remote.

2


When the hour digits flash, turn **VOLUME-/+** on the system or press **VOLUME+/-** on the remote to set the hours.

3

Press **CLOCK/RDS** again and the minute digits flash. Then turn **VOLUME-/+** on the system or press **VOLUME+/-** on the remote to set the minutes.

4

Press **CLOCK/RDS** again to confirm the time setting.


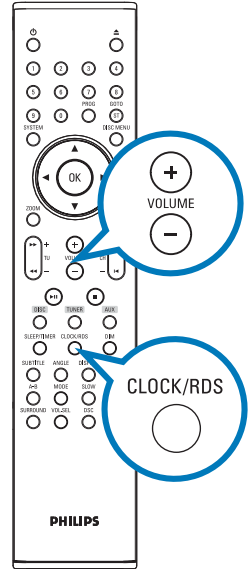


## Setting DVD menu options

### IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM** on the remote to exit the system menu and then **DISC** to exit progressive scan.

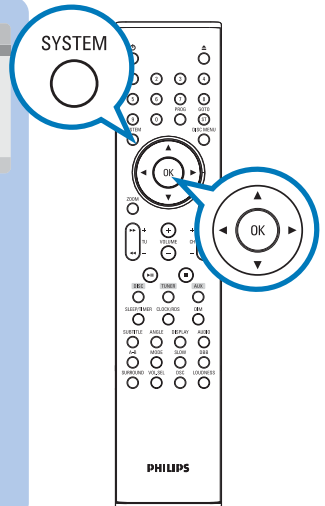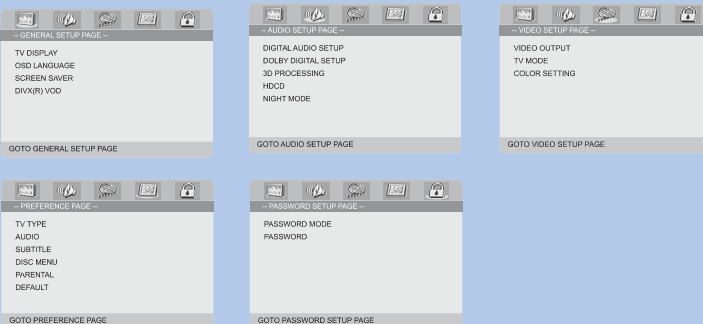

### Tip

See chapters "Getting Started" and "System Menu Options" in the User Manual for detailed descriptions.

