

# Quick Start Guide

Step A *Setup*

Step B *Enjoy*



## What's in the Box?

You should find these items upon opening the box.



User Manual



 
Quick Start Guide



Pull out the insulation plastic sheet.



Remote Control

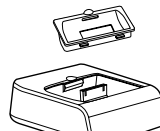

2 Docks &  
12 Dock Adapters



MW Antenna


# PHILIPS
 
## Connection

- 1 For radio reception, connect the supplied MW antenna to the **MW aerial** terminal.
- 2 Connect the speaker wires to the **SPEAKERS** terminals.
- 3 Connect the power cord of the system to the AC power outlet.


### Tip

It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

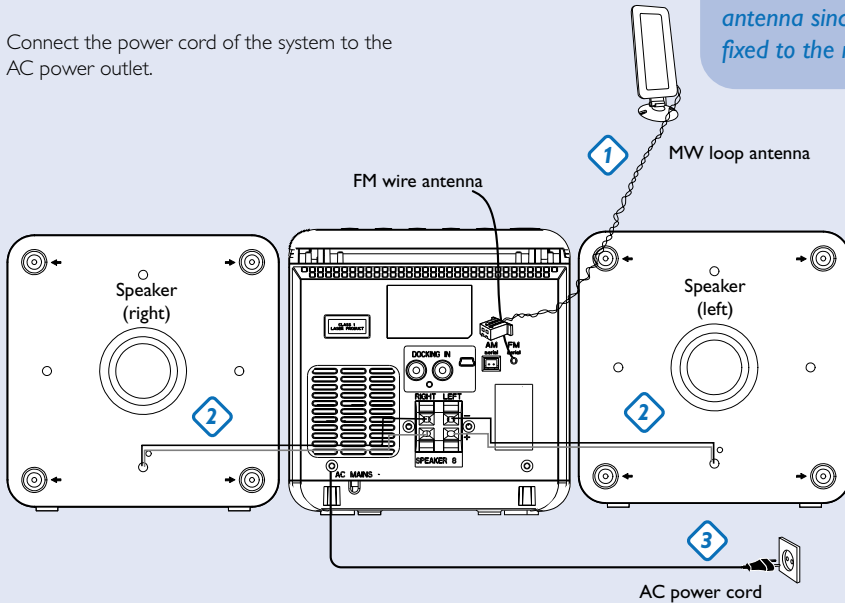

## Setting the clock

 
- 1 In standby mode, press **PROG/CLOCK** button. The clock digits for the hours flash.
- 2 Press **◀◀/▶▶** to set the hours.
- 3 Press **PROG/CLOCK** again. The clock digits for the minutes flash.
- 4 Press **◀◀/▶▶** to set the minutes.
- 5 Press **PROG/CLOCK** to confirm the time.

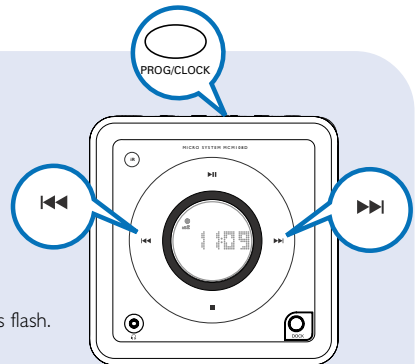

## Step B *Enjoy*


### Playing a disc

 - 1 Select **CD** source.
- 2 Press **OPEN•CLOSE** on the top of the system to open the CD door.
- 3 Insert a disc with the printed side facing up and press down on **OPEN•CLOSE** to close the CD door.
- 4 Press **▶ ||** to start playback.
- 5 Press **■** to stop playback.

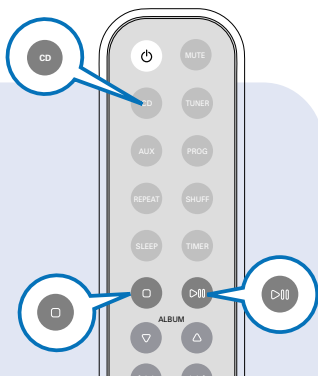

### Listening to radio

 - 1 Select **TUNER** source.
- 2 Press **BAND (TUNER)** on the remote control) once or more to select your waveband.
- 3 Turn **TUNING ●** to tune to a station.

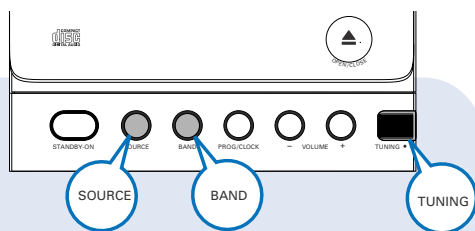

#### Tip

 
Detailed playback features and additional functions are described in the accompanied owner's manual.

#### Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
- Then select the desired function (▶||, ◀, ▶ for example).

## Playing iPod / Philips GoGear using the dock

- 1 Select the correct dock supplied, as indicated on the bottom panel of the dock, to work with either your Apple iPod or Philips GoGear.
- 2 Select the correct dock adaptor supplied, then snap the adaptor into the dock to provide a snug fit for the player:
  - For the iPod adaptors, the indication on the adaptor's back fits specific iPod player:
  - For the Philips adaptors, a number marked on the adaptor's back fits specific Philips GoGear player:
- 3 Correctly place your iPod or Philips GoGear in the dock.
- 4 Using the docking cable supplied, connect the **DOCKING OUT** jack and Mini-USB port on the dock to **DOCKING IN** jacks (L and R) and Mini-USB port on the main set, marked-red to R jack, and marked-white to L jack.
- 5 Press **SOURCE** repeatedly or on the set (or **DOCK** on the remote) to select DOCK source.
  - For Philips GoGear player; make sure that you have powered it on before selecting DOCK source.
  - The connected player will play automatically.
  - The iPod/Philips GoGear battery will be charged in either standby mode or power-on mode.

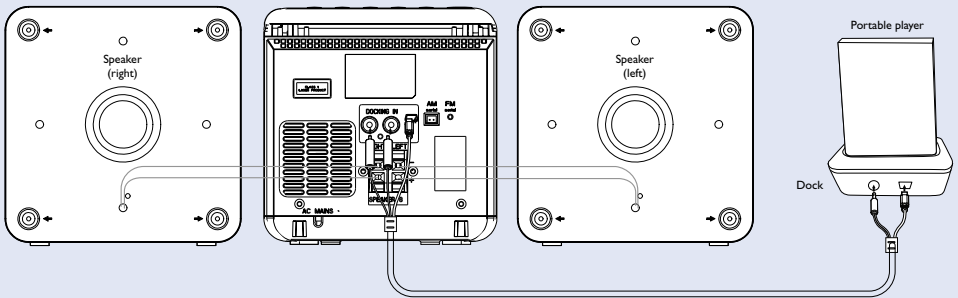

### Tip

Refer to the user manual supplied for detailed descriptions of “Compatible portable player”, “Selecting the correct dock adaptor”, “Installing the dock adaptor”, and the important notes for dock operation.

