
# Quick Start Guide

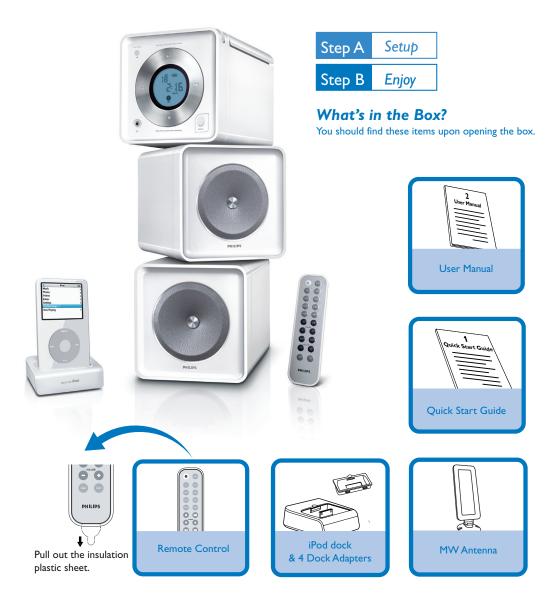

**PHILIPS** 


# Step A Setup

#### **Connection**

For radio reception, connect the supplied MW antenna to the MW aerial terminal. Tip It is unnecessary to Connect the speaker wires to the **SPEAKERS** terminals. connect the FM pigtail antenna since it is Connect the power cord of the system to the fixed to the main unit. AC power outlet. MW loop antenna (1) FM wire antenna **→**⊚ **(**)+ O Speaker O Speaker (right) (left)

## Setting the clock

- 1 In standby mode, press PROG/CLOCK button. The clock digits for the hours flash.
- Press < ✓ / ▶▶ to set the hours.
- 3 Press PROG/CLOCK again. The clock digits for the minutes flash.
- 4 Press | to set the minutes.
- 5 Press PROG/CLOCK to confirm the time.

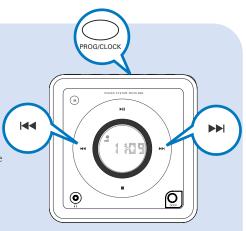


AC power cord

# Step B Enjoy


### Playing a disc

- 1 Select CD source.
- 2 Press **OPEN•CLOSE** on the top of the system to open the CD door.
- 3 Insert a disc with the printed side facing up and press down on **OPEN•CLOSE** to close the CD door.
- 4 Press ▶ to start playback.
- 5 Press to stop playback.

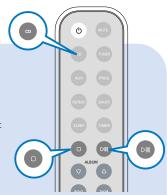

### Listening to radio

 - 1 Select TUNER source.
- 2 Press BAND (TUNER on the remote control) once or more to select your waveband.
- **3** Turn **TUNING** to tune to a station.



#### Tip

Detailed playback features and additional functions are described in the accompanied owner's manual.


#### Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
- Then select the desired function (  $\triangleright$ II, I $\triangleleft$ ,  $\triangleright$ I for example).

# Step B Enjoy

### Playing iPod using the dock

- 1 Select the correct dock adaptor supplied, then snap the adaptor into the correct dock connector to provide a snug fit for the player.
  - The indication on the adaptor's back fits specific iPod player.
- 2 Correctly place your player in the correct dock connector.
- 3 Connect the cables of the dock to **DOCKING IN** jacks on the main set correspondingly.
- 4 Press **SOURCE** repeatedly or on the set (or **DOCK** on the remote) to select DOCK source.
  - The connected player will play automatically.
  - The iPod battery will be charged in either normal standby mode or power-on mode. The charging will not be available in the Eco power standby mode.

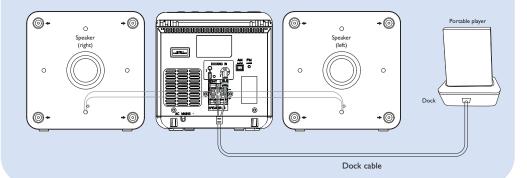

#### Tip

Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.



