

**Version: v039**

**Benefits of the Software Update:** Solved the problem that the alarm clock does not work in ECO Power mode.

**Software Update Procedure:**

**IMPORTANT:**

**DO NOT disconnect the device from the power supply during the firmware update.**

1. Click the **Download** button to download the firmware package on your computer.
2. Unzip the firmware package, you will get 2 files.
3. Copy these two files into an **empty** USB stick. **Note: DO NOT rename either of the 2 files to avoid upgrade failure.**
4. Connect the USB stick to your device.
5. Turn on your device.
6. Select **USB** as the source. The message "**READING**" will appear on the screen of the device and the upgrade will start after 4 times of beeping sound. After about 2 minutes you will hear continuous beeping sound when the upgrade is completed.
7. Disconnect the USB stick from the device.

**Software Update History:**

**N/A**