

Quick Start Guide



Step A **Install**

Step B **Prepare**

Step C **Enjoy**

What's in the Box?

 
You should find these items upon opening the box.



Stand



FM wire antenna




MW antenna



Remote control with
1 x CR2025 battery



 Power adaptor



User manual



 
Quick start guide

Step A *Install*


Mounting the stand onto the set

1

Locate the bottom of the main unit and find the slot, then slide the stand in the slot until it stops, as indicated in the figure.

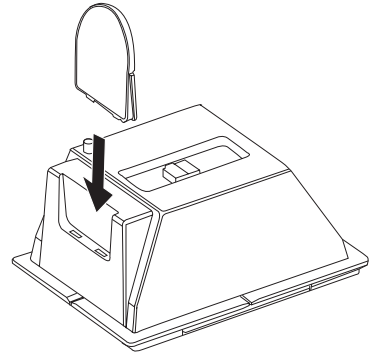

Rear connections

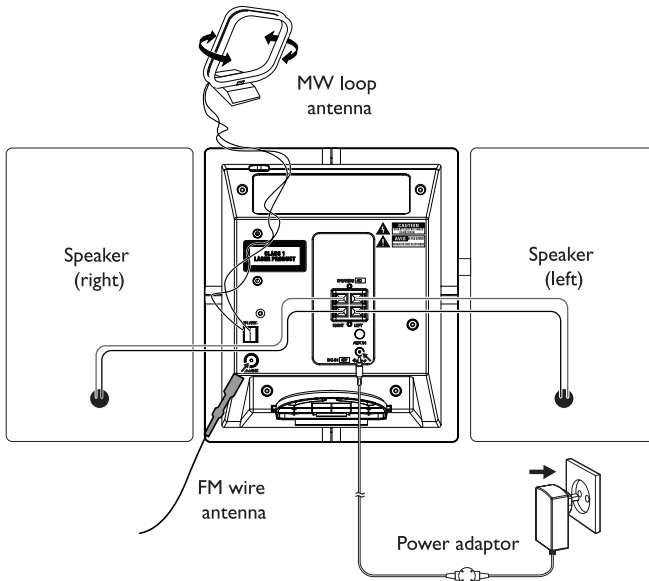 

1

Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black).

2

Extend the wire antenna and fit it to **FM ANTENNA**.

3

Insert the MW antenna to **MW ANTENNA** jacks.

4

Connect the AC power cord to the wall socket.

Tip

– To receive optimal radio reception, put the main unit and the antennas as far away as possible from the power adaptor.

Step B Setup

Setting the clock

1 Press and hold **STANDBY-ON** to switch the set to Standby mode.
→ The display shows the set time.
→ --:--:-- flashes by default if you have not set the clock.

2 In the standby mode, press and hold **DISPLAY/CLOCK**.
→ 24 HR or 12 HR appears for the initial clock setting. **To select 12-hour clock or 24-hour clock,**
1. Press **VOLUME +/-** once or more.
2. Press **DISPLAY/CLOCK** to confirm.
→ The hours digits start flashing.

3 Hold down or press **VOLUME +/-** repeatedly to set the hours.

 
4 Press **DISPLAY/CLOCK** to confirm.

5 Hold down or press **VOLUME +/-** repeatedly to set the minutes.

6 Press **DISPLAY/CLOCK** to confirm.

IMPORTANT!

– Remove the protective plastic tab before using the remote control

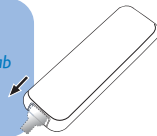

Notes for remote control:

– First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
– Then select the desired function (▶||, ◀◀, ▶▶ for example).

Step C Enjoy

Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

1 Press **SOURCE** once or more to select **CD** (or **CD** on the remote control).

2 Press **DOOR OPEN** to open the CD compartment.

3 Insert a disc with the printed side facing up. Then close the CD door.

4 Press ▶ || to start playback.


5 To stop playback, press **STOP ■**.

Tuning to radio stations

- 1 Press **SOURCE** once or more to select **TUNER** (or **TUNER** on the remote control).
- 2 Press and hold **PROGRAM** until **AUTO** appears
→ Available stations are programmed in order of waveband reception strength: FM followed by MW.
- 3 Press the **ALBUM/ PRESET** buttons once or more until the desired preset station is displayed.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the front panel of the main set.
- 2 Press **SOURCE** once or more to select **USB** (or **USB** on the remote control)
- 3 Play the USB's audio files as you do with the albums/tracks on a CD
- 4 Press **STANDBY-ON** to switch off the set

Detailed playback features and additional functions are described in the accompanied owner's manual.

