

# Quick Start Guide



 
Step A **Install**

Step B **Prepare**

Step C **Enjoy**

## What's in the Box?


You should find these items upon opening the box.

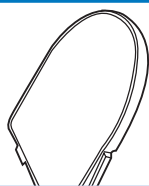


Stand



 
FM wire antenna

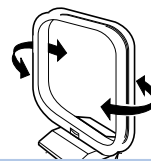


MW antenna

 

 Remote control with  
1 x CR2025 battery

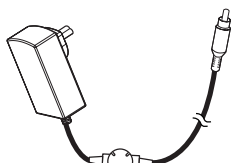

Power adaptor

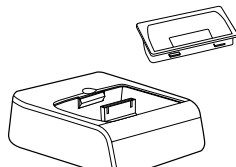 

1 dock & 8 Dock  
Adapters for iPod



User manual




Quick start guide


## Step A *Install*
 
### Mounting the stand onto the set

- 1 Locate the bottom of the main unit and find the slot, then slide the stand in the slot until it stops, as indicated in the figure.

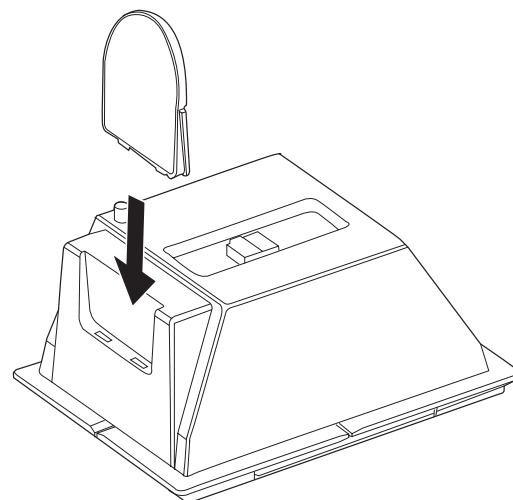

### Rear connections

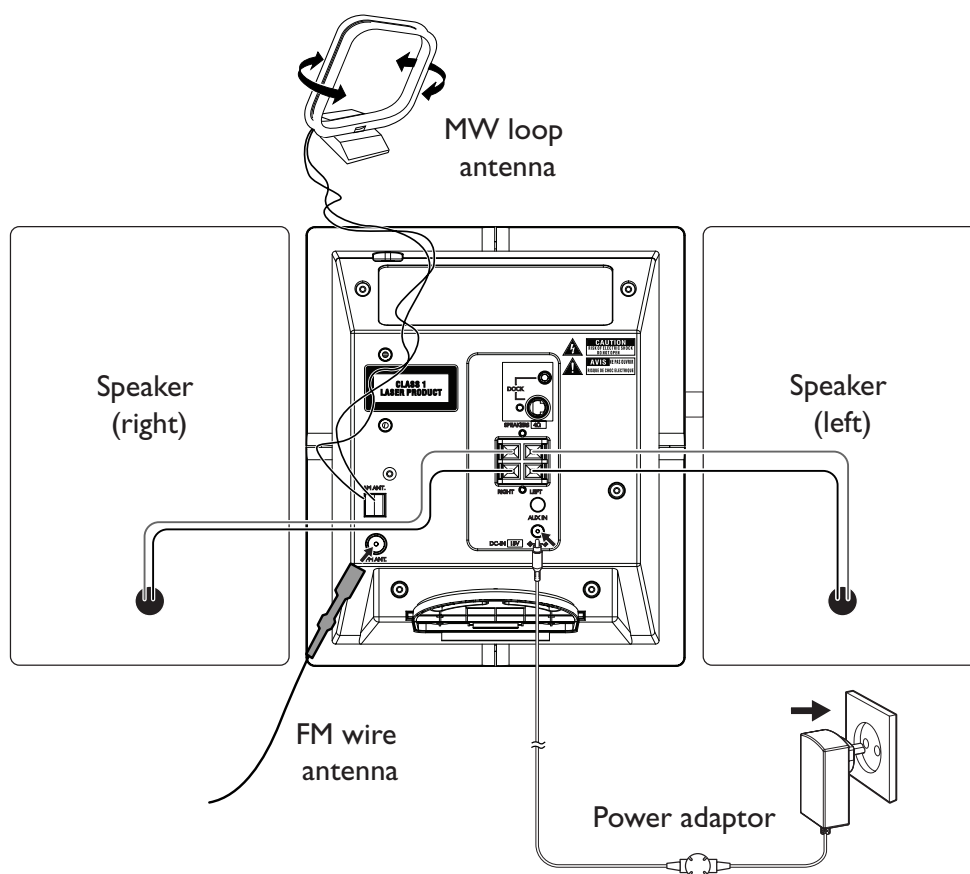 


- 1 Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black).
- 2 Extend the wire antenna and fit it to **FM ANTENNA**.
- 3 Insert the MW antenna to **MW ANTENNA** jacks.
- 4 Connect the AC power cord to the wall socket.

#### Tip

– To receive optimal radio reception, put the main unit and the antennas as far away as possible from the power adaptor.

## Step B Setup

### Setting the clock

1 Press and hold **STANDBY-ON/ ECO POWER**  to switch the set to Standby mode.  
→ The display shows the set time.  
→ -- --:-- -- flashes by default if you have not set the clock.

2 In the standby mode, press and hold **DISPLAY/CLOCK** on the remote control.  
→ 24 HR or 12 HR appears for the initial clock setting. **To select 12-hour clock or 24-hour clock,**  
1. Press **VOLUME +/-** once or more.  
2. Press **DISPLAY/CLOCK** to confirm.  
→ The hours digits start flashing.

3 Hold down or press **VOLUME +/-** repeatedly to set the hours.

4 Press **DISPLAY/CLOCK** to confirm.

5 Hold down or press **VOLUME +/-** repeatedly to set the minutes.

6 Press **DISPLAY/CLOCK** to confirm.

#### Helpful hints:

- To set the clock automatically by using a time signal which is broadcast together with the RDS signal, see the **User Manual, RDS: Setting the RDS clock.**

## Step C Enjoy

### Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

1 Press **SOURCE** once or more to select **CD** (or **CD** on the remote control).

2 Press **DOOR OPEN** to open the CD compartment.

 
3 Insert a disc with the printed side facing up. Then close the CD door.

4 Press **▶ ||** to start playback.

5 To stop playback, press **STOP ■**.

#### IMPORTANT!

- Remove the protective plastic tab before using the remote control

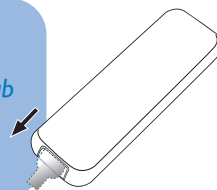

#### Notes for remote control:



- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
- Then select the desired function (▶||, |◀◀, ▶▶| for example).

## Tuning to radio stations

- 1 Press **SOURCE** once or more to select **TUNER** (or **TUNER** on the remote control).
- 2 Press and hold **PROGRAM** until *AUTO* appears  
→ Available stations are programmed in order of waveband reception strength: RDS, FM followed by MW.
- 3 Press the **ALBUM/ PRESET** buttons once or more until the desired preset station is displayed.

## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the front panel of the main set.
- 2 Press **SOURCE** once or more to select **USB** (or **USB** on the remote control)
- 3 Play the USB's audio files as you do with the albums/tracks on a CD
- 4 Press **STANDBY-ON/ ECO POWER**  to switch off the set

*Detailed playback features and additional functions are described in the accompanied owner's manual.*

## Playing iPod using the dock

1

Select the correct dock adaptor supplied, then snap the adaptor into the dock connector to provide a snug fit for the player.

- The indication on the adaptor's back fits specific iPod player.

2

Correctly place your player in the dock connector.

 
3

Connect the cables of the dock to **DOCK IN** jacks on the main set correspondingly.

4

Press **SOURCE** repeatedly or on the set (or **iPod** on the remote) to select DOCK source.

- The connected player will play automatically.
- The iPod battery will be charged in either normal standby mode or power-on mode. The charging will not be available in the Eco power standby mode.

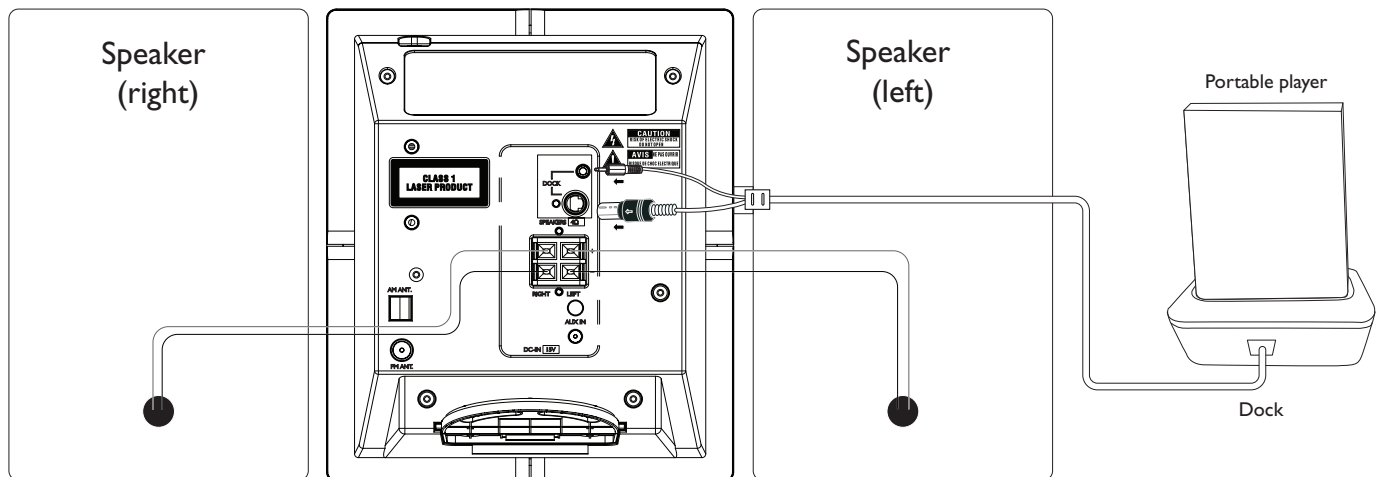

### Tip

Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.

