
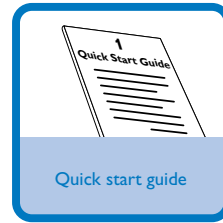
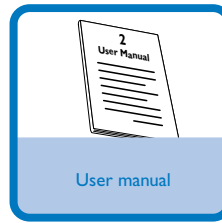
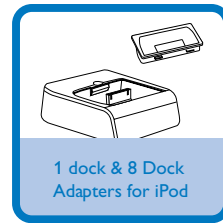
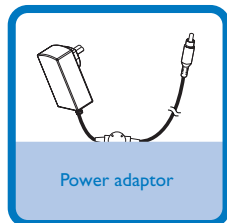
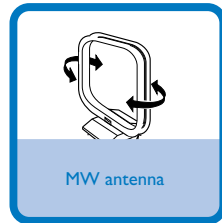
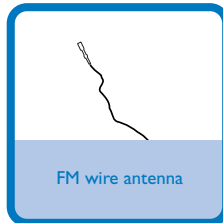


Quick Start Guide

Step A **Install**Step B **Prepare**Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.

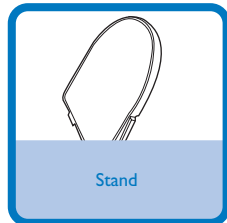


PHILIPS


Step A **Install**

Mounting the stand onto the set

- 1 Locate the bottom of the main unit and find the slot, then slide the stand in the slot until it stops, as indicated in the figure.

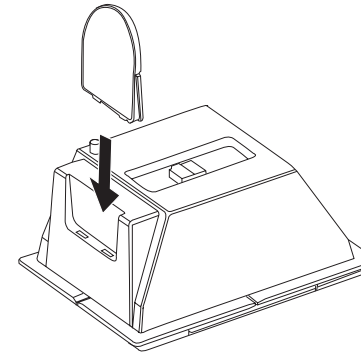

Rear connections

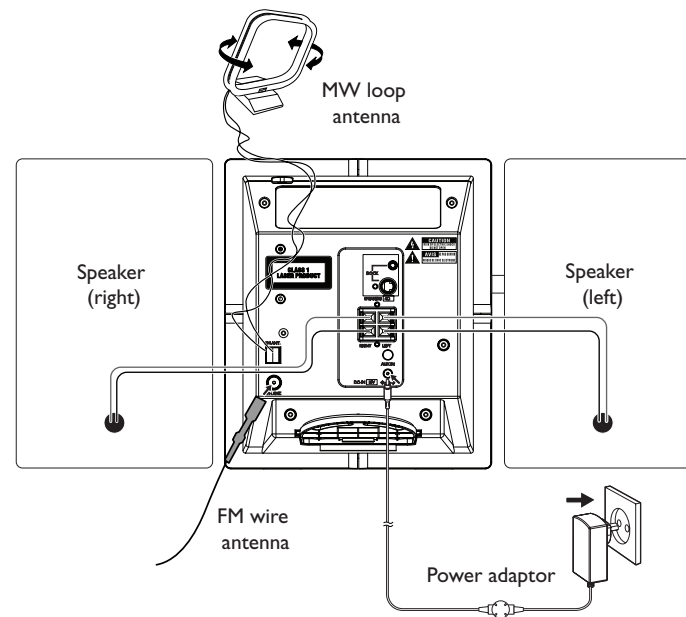

- 1 Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black).
- 2 Extend the wire antenna and fit it to **FM ANTENNA**.
- 3 Insert the MW antenna to **MW ANTENNA** jacks.
- 4 Connect the AC power cord to the wall socket.

Tip
– To receive optimal radio reception, put the main unit and the antennas as far away as possible from the power adaptor.

Step B **Setup**

Setting the clock

- 1 Press and hold **STANDBY-ON/ ECO POWER** to switch the set to Standby mode.
→ The display shows the set time.
→ -- --:-- -- flashes by default if you have not set the clock.
- 2 In the standby mode, press and hold **DISPLAY/CLOCK** on the remote control.
→ 24 HR or 12 HR appears for the initial clock setting. **To select 12-hour clock or 24-hour clock,**
1. Press **VOLUME +/-** once or more.
2. Press **DISPLAY/CLOCK** to confirm.
→ The hours digits start flashing.
- 3 Hold down or press **VOLUME +/-** repeatedly to set the hours.
- 4 Press **DISPLAY/CLOCK** to confirm.
- 5 Hold down or press **VOLUME +/-** repeatedly to set the minutes.
- 6 Press **DISPLAY/CLOCK** to confirm.

Helpful hints:

- To set the clock automatically by using a time signal which is broadcast together with the RDS signal, see the **User Manual, RDS: Setting the RDS clock.**


Step C **Enjoy**

Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

- 1 Press **SOURCE** once or more to select **CD** (or **CD** on the remote control).
- 2 Press **DOOR OPEN** to open the CD compartment.
- 3 Insert a disc with the printed side facing up. Then close the CD door.
- 4 Press **▶ ||** to start playback.
- 5 To stop playback, press **STOP**.

IMPORTANT!
– Remove the protective plastic tab before using the remote control

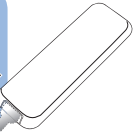

Notes for remote control:
– First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
– Then select the desired function (▶||, ◀◀, ▶▶ for example).



Step C Enjoy

Tuning to radio stations

- 1 Press **SOURCE** once or more to select **TUNER** (or **TUNER** on the remote control).
- 2 Press and hold **PROGRAM** until **AUTO** appears
→ Available stations are programmed in order of waveband reception strength: RDS, FM followed by MW.
- 3 Press the **ALBUM/ PRESET** buttons once or more until the desired preset station is displayed.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

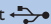
- 1 Insert the USB device's USB plug into the socket  on the front panel of the main set.
- 2 Press **SOURCE** once or more to select **USB** (or **USB** on the remote control)
- 3 Play the USB's audio files as you do with the albums/tracks on a CD
- 4 Press **STANDBY-ON/ ECO POWER**  to switch off the set

Detailed playback features and additional functions are described in the accompanied owner's manual.

Step C Enjoy

Playing iPod using the dock

- 1 Select the correct dock adaptor supplied, then snap the adaptor into the dock connector to provide a snug fit for the player.
→ The indication on the adaptor's back fits specific iPod player.
- 2 Correctly place your player in the dock connector.
- 3 Connect the cables of the dock to **DOCK IN** jacks on the main set correspondingly.
- 4 Press **SOURCE** repeatedly or on the set (or **iPod** on the remote) to select DOCK source.
→ The connected player will play automatically.
→ The iPod battery will be charged in either normal standby mode or power-on mode. The charging will not be available in the Eco power standby mode.

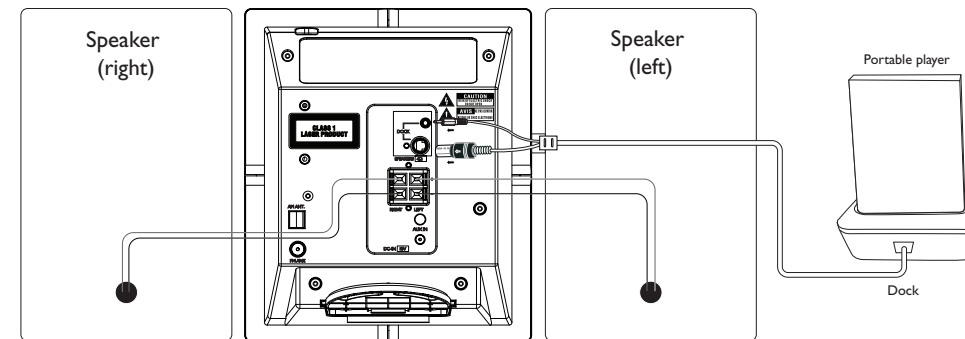

Tip
Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.



2007 © Koninklijke Philips Electronics N.V.
All rights reserved.

<http://www.philips.com>

PDCC-JH-0734