

# Quick Start Guide



 
 
Step A *Connect*

Step B *Setup*




Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

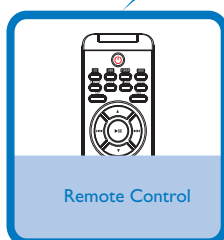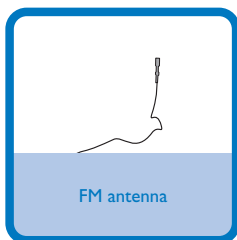

   Pull out the plastic protective sheet before use.

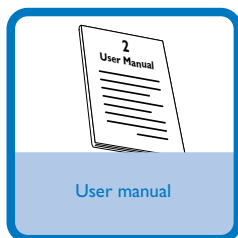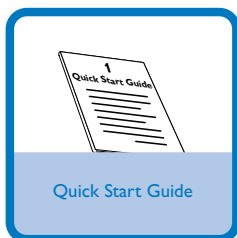

**PHILIPS**

# Step A *Connect*

1

 
Connect the speaker cables.

2

Connect the FM antenna.

## *Tip*


See the *User Manual* for how to connect other equipment to this system.

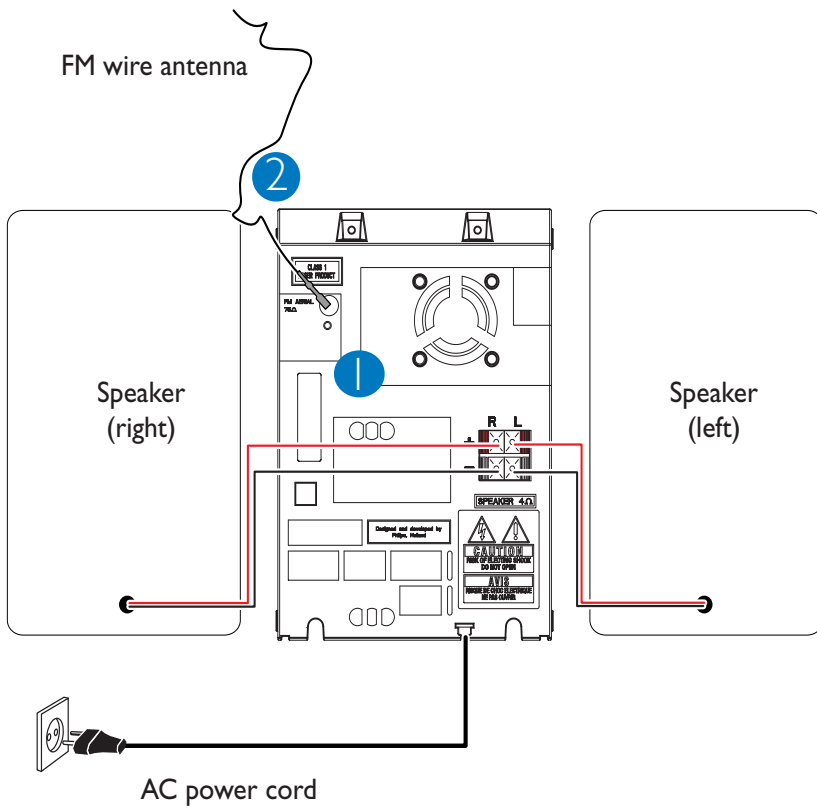


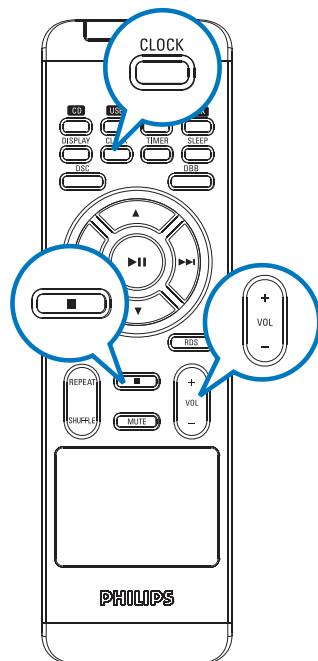 
## Step B Setup

### Setting the clock

#### IMPORTANT!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

- 1** In standby mode, press and hold **CLOCK** on the remote control.  
→ **SET CLOCK** is displayed briefly. Then, the clock digits for the hours flash.
- 2** Press  on the remote control to select clock mode.  
→ Then, the clock digits for the hours continue to flash.
- 3** Adjust **VOLUME +/-** (or press **VOL +/-** on the remote control) to set the hours.
- 4** Press **CLOCK** again.  
→ The clock digits for the minutes flash.
- 5** Adjust **VOLUME +/-** (or press **VOL +/-** on the remote control) to set the minutes.
- 6** Press **CLOCK** to confirm the time.





## Step C Enjoy

#### Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example **CD, TUNER**).
- Then select the desired function (for example **▶, ◀◀, ▶▶▶**).


### Playing a disc

- 1** Press **OPEN/CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.  
→ Make sure the label side of the disc is facing up.
- 2** Press **▶ ||** to start playback.
- 3** To stop playback, press .





 
## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

## Programming and tuning to radio stations

- 1 Press **SOURCE** on the front panel repeatedly (or **TUNER** on the remote control) to select the tuner source.
- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET**  or  until the desired preset station is displayed.

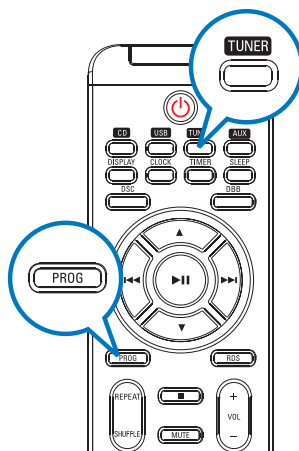

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

