

MCS240

CD Boom Box

You take pleasure in the simple things in life and delight in convenience. The sleek and portable MCS240 lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

- **CD player**
- **Compatible with CD-Recordable and CD-ReWritable**
- **FM/MW tuner for radio enjoyment**
- **Dynamic Bass Boost for deep and dramatic sound**
- **CD Shuffle/Repeat for personalized music enjoyment**
- **Multi-functional LCD display**



MCS240/78 CD Boom Box

Product specifications

Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Fast Forward/Backward, Next/Previous Track Search, Repeat Play

Tuner/Reception/Transmission

- Antenna: FM Antenna
- Tuner Bands: FM, MW

Sound

- Bass enhancement: Bass Boost
- Output Power: 2x1.0 W RMS
- Sound System: Stereo
- Speaker diameter: 3.5"
- Volume Control: rotary

Loudspeakers

- Built-in speakers: 2

Convenience

- Display Type: LCD

Power

- Battery type: LR14
- Battery voltage: 1,5 V
- Number of batteries: 6
- Power supply: 100-240VAC, 50/60Hz

Accessories

- Included accessories: AC Power Cord, User Manual

Dimensions

- Product dimensions (W x H x D):
290 x 143 x 240 mm
- Product weight: 1.62 kg

CD player

CD-R/RW Compatible

CD-Rewritable Compatible means that your audio set can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players. The laser pick-up and CD decoder circuitry of CD-RW compatible players are specially designed to read the special audio CD-RW phase-change recording layer, ensuring you can always play your home-recorded discs on your audio CD system.

FM/MW tuner

FM/MW (AM) stereo tuner

Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.