

SMARTCARD™ TV

MONCARD™ (SMARTCARD™ MONITOR CARD) INSTALLATION GUIDE

MONCARD™

WHAT IS MONCARD™?

SmartCard™ television is a product that allows the addition of SmartCards to commercial card televisions giving them increased functionality and technology for specific requirements and upgrading.

MonCard™ converts a SmartCard™ commercial television to a monitor/receiver allowing composite video with audio and S-Video with audio inputs for higher quality viewing from video cameras, VCRs, CD-i, etc. A SmartPlug™ is available for commercial use from a DCM (data control module). Also provided is a RF input and a 3.5 MM speaker jack for additional speakers.

Installation of the Card is easy, but requires the use of a Set Up Remote Control (Model Number RG4172BK) to activate the added inputs.

BEGIN

1 Start by unplugging the AC power cord from the wall socket. Remove the hex head screws holding the Monitor Card cover in place. Slide the jack panel cover off. Be careful when pulling the Antenna jack out of its plug.

2 Insert the Monitor Card (with its components facing down) into the back of the TV. Line up and guide the 32 pin connector into place. Note there are guide pins to help line up the Card properly. Using the corners of the Monitor Card (not the jacks), press it firmly into place.

3 Attach the NEW Monitor Card cover supplied with the SmartCard™ to the rear of the TV. Line up the jacks with the holes in the monitor card cover. Press the antenna jack firmly into its plug and replace the hex head screws to secure the cover to the rear of the TV.

Note: Use a Set Up Remote Control (Model Number RG4172BK) when activating the inputs on the Monitor Card after installation is complete.

STOP


SMART HELP



Remember, unplug the TV to avoid electrical shock and damage to the TV.

Be sure to align the 32 pin connector before pressing into place. Never force the Monitor Card into the connector. If it will not go in smoothly, realign the guide pins.

Do not use the Monitor Card's jacks to push the card into place. Use the corners of the card itself.

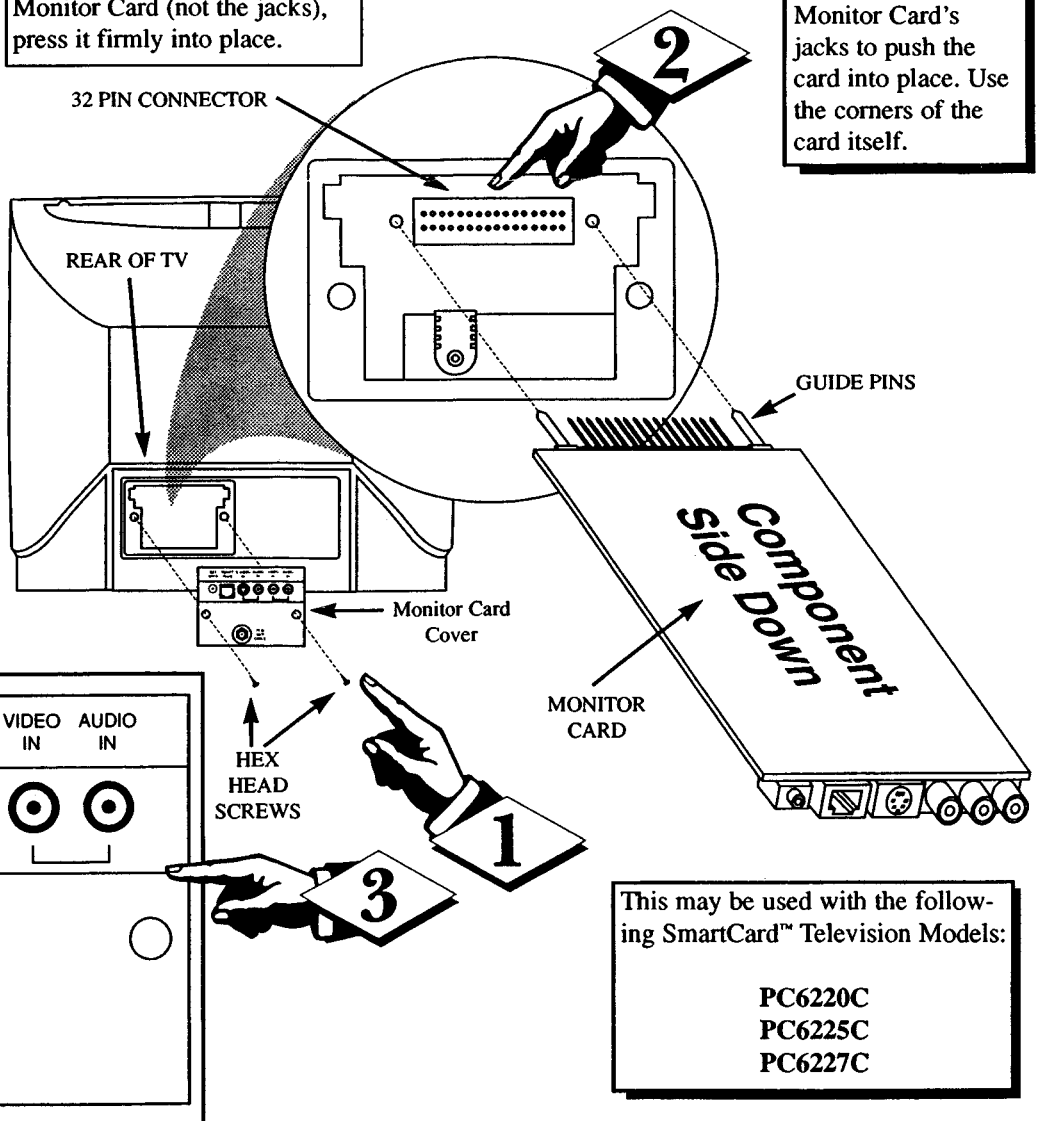

This may be used with the following SmartCard™ Television Models:

PC6220C
PC6225C
PC6227C