## Register your product and get support at www.philips.com/welcome

MT3120




### User manual






- Use only the power supply listed in the extended user documentation.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if internal, rechargeable battery is replaced by an incorrect type.
- Dispose of used, internal batteries according to the instructions. (Refer to the extended user documentation online)
- This is a handsfree product with high speaker volume. Make sure the product is not too close to your ear.




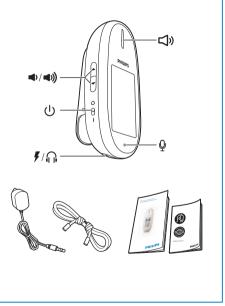



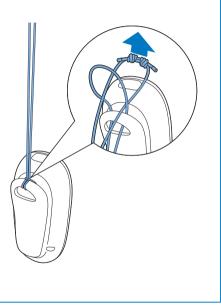




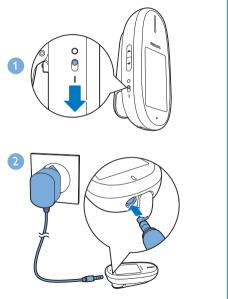

4


### Set country, language, date and time.

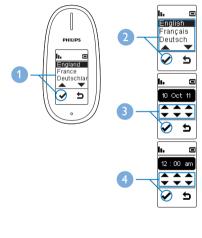

# 5 •))

#### **Register your phone**

 Put the base of your original cordless phone in registration mode to connect to the handsfree phone (as described in your original phone's user manual).
Typically locate the •) on the base, and press and hold it for approximately 10 seconds to enter registration mode.
If the PIN code of your original phone base is not recognized automatically, enter it on your handsfree phone's screen.

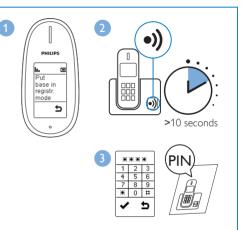

6

 
Wear / place your clip phone





Make a call








#### Answer a call





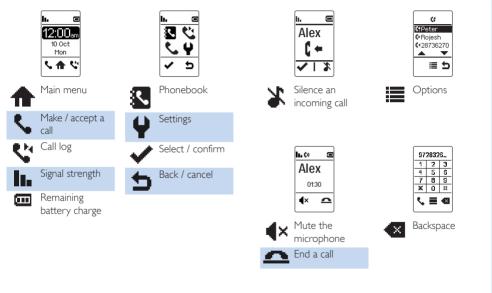

How to connect the handsfree phone to my other phones?

I cancelled registration during initial setup, how to register my phone?

Registration fails continuously.

Caller ID does not display

- Base memory is full. Delete un-used handsets (see bases user manual) and try again.
- Wrong pass code. Check code in bases user manual.
- Service may not be activated. Check with your provider.
- The caller may have blocked caller ID.
- Base may not support caller ID.







# €€0979

Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. All rights reserved. © 2012 Koninklijke Philips Electronics N.V.



QSG\_MT3120 52\_EN\_V1.0 WK12181