


**First connect ...  
... then play**  
(see next page)

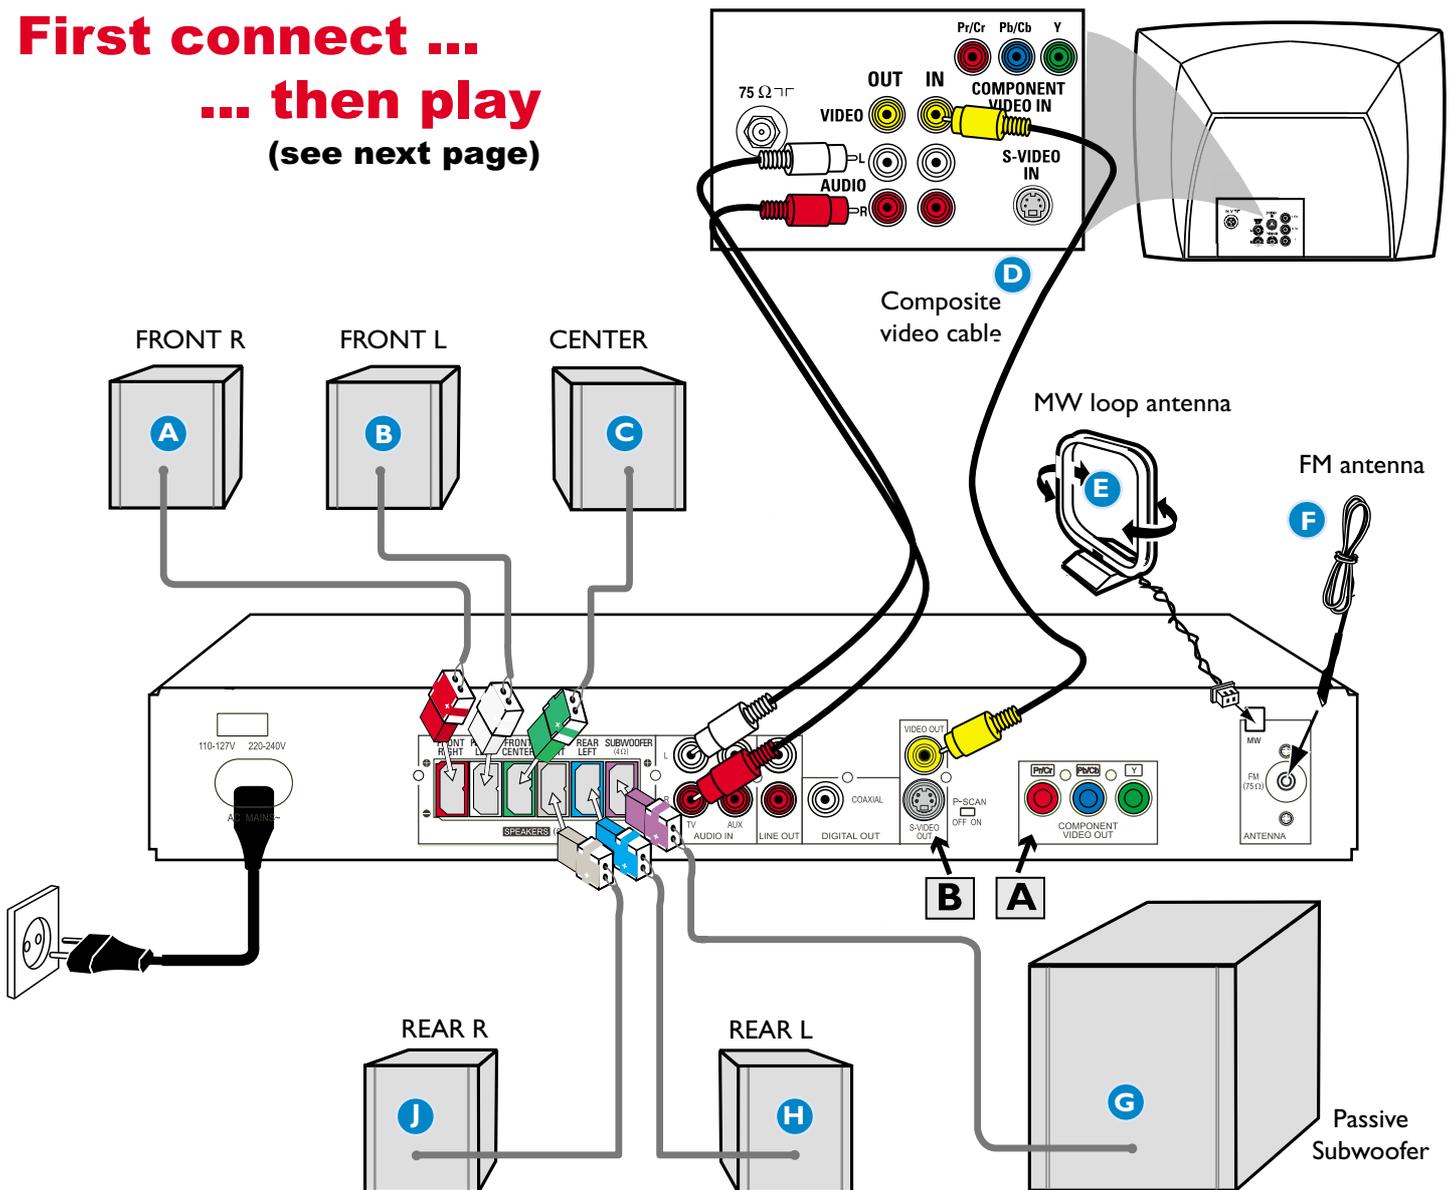

### Helpful Hints

To obtain a better picture quality effect, you can choose to connect an extra video connection if your TV has the same input connector: **A** or **B**.


	Use this video cable (not supplied)	If your TV has this video input jack(s)
<b>A</b>		COMPONENT VIDEO IN
<b>B</b>		S-VIDEO IN

**75 Ω ANTENNA IN** If your TV has only a single Antenna In jack, you will need an accessory RF modulator. The RF modulator converts the video from the DVD system so it can play through the TV's Antenna connector. Refer to your owner's manual for proper connection (refer to page 9 in the owner's manual).


**P-SCAN** Do not switch the P-SCAN to 'ON' position, unless you have connected the DVD system to a Progressive Scan TV using the Component (Y Pb/Cb Pr/Cr) video jacks.

**When listening to TV programmes**, press TV button on the remote to set the DVD system to TV mode in order for the sound to be heard.


**For connecting to a VCR**, see page 11 in the owner's manual for more details.

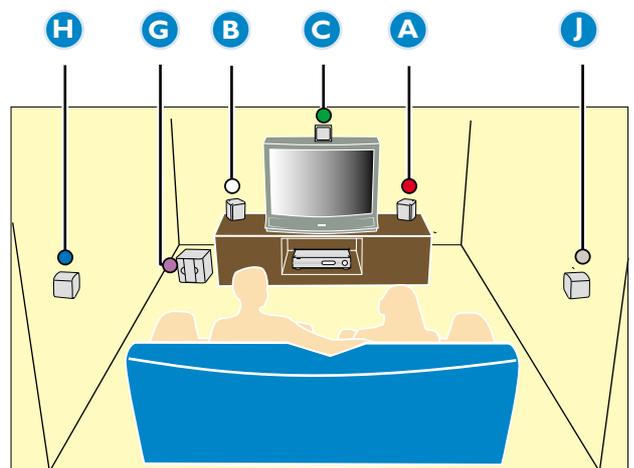

## Playing a disc

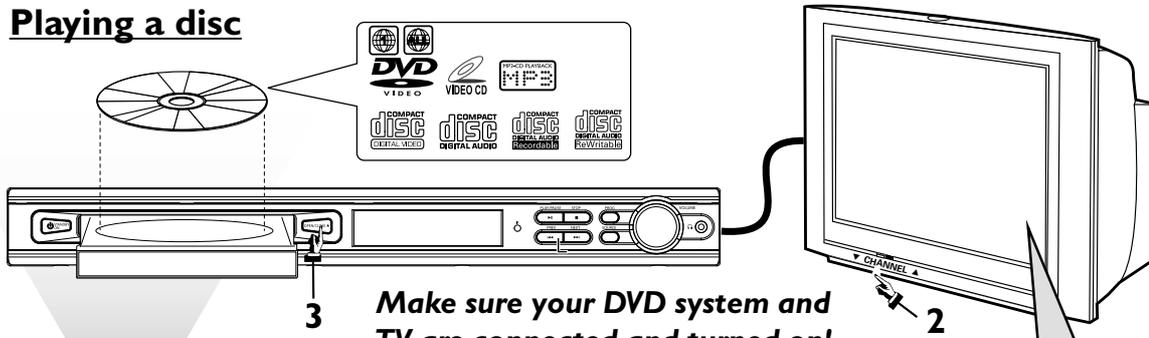

**Make sure your DVD system and TV are connected and turned on!**

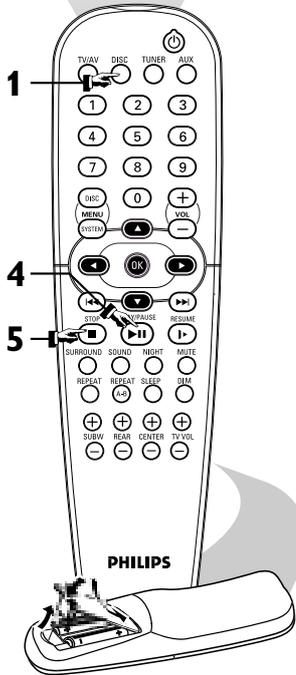


- 1 Press DISC on the remote control.**  
You can also press the SOURCE button on the front panel until "DISC" appears on the display panel.
- 2 Turn on the TV and select the correct Video In mode.**  
You should see the blue DVD background screen on the TV (if no disc in the DVD system).
- 3 Press OPEN/CLOSE ▲ on the front of the DVD system and load a disc, then press OPEN/CLOSE ▲ again to close the disc tray.**  
Make sure the disc label is facing up. For double-sided discs, load the side you want to play face up.
- 4 Press ► II to start playback.**  
If a disc menu appears, use ▲▼◀▶ buttons on the remote to make the necessary selection, then press OK to confirm. Or, use the numeric keypad on the remote to select features. Follow the instructions given in the disc menu.
- 5 To stop playback, press STOP ■.**

## No picture?

**Check the AV (Audio/Video) mode on your TV.**

- \* Usually this channel is between the lowest and highest channels and may be called FRONT, AV IN, or VIDEO.
- \* Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
- \* Or, your TV remote control may have a button or switch that chooses different video modes.
- \* Do not use channel 3 or 4 on the TV unless you are using an RF modulator.
- \* See your TV manual for more details.

## Using the DVD setup menu

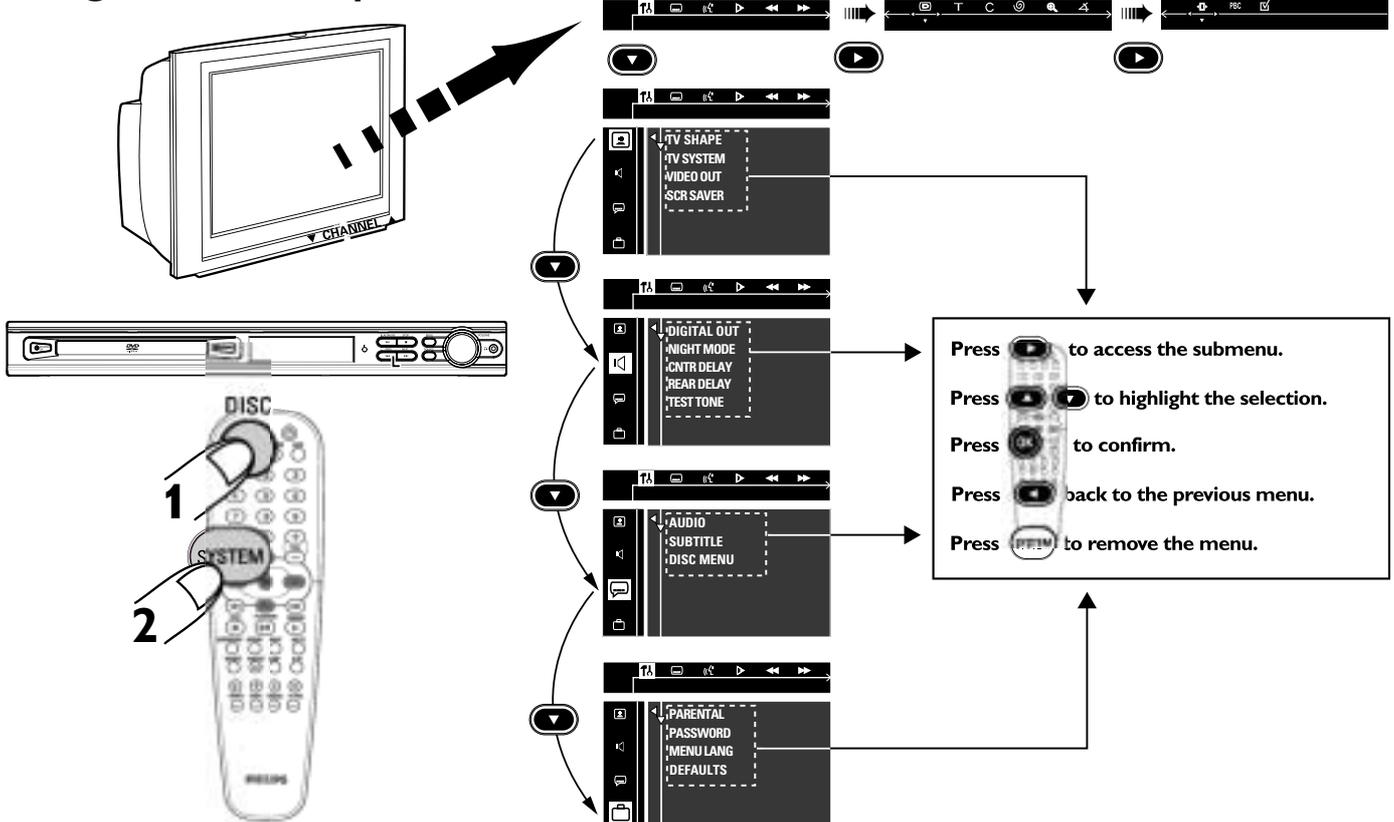

Detailed playback features and additional functions are described in the accompanying owner's manual.