

mz-7

Mini Hi-Fi System

DESIGN



PHILIPS

Let's make things better.

Important notes for users in the U.K.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or \perp) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Italia

DICHIARAZIONE DI CONFORMITA'

Si dichiara che l'apparecchio MZ7 Philips risponde alle prescrizioni dell'art. 2 comma 1 del D.M. 28 Agosto 1995 n. 548.

Fatto a Eindhoven , il 15/06/1999

Philips Consumer Electronics
Philips, Glaslaan 2
5616 JB Eindhoven, The Netherlands

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkopleet. Den innebygde nettdelen er derfor ikke frakopleet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.



English	5
Français	27
Español	49
Deutsch	71
Nederlands	93
Italiano	115
Svenska	137
Dansk	159
Suomi	181
Português	203
Ελληνικά	225

- English
- Français
- Español
- Deutsch
- Nederlands
- Italiano
- Svenska
- Dansk
- Suomi
- Português
- Ελληνικά

General Information	5
Safety Information	5
Preparation	6 - 7
Controls	8 - 10
Operating The System	10 - 12
CD	13 - 15
Tuner	15 - 17
Tape	18 - 19
CDR/AUX	19
Recording	20 - 21
Clock	22
Timer	22 - 23
Sleep	23
Specifications	24
Maintenance	25
Troubleshooting	25 - 26

General Information

- **The typeplate (which contains the serial number) is located at the rear of the system.**
- **Recording is permissible if copyright or other rights of third parties are not infringed.**
- **This product complies with the radio interference requirements of the European Community.**

Environmental Information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Accessories (Supplied)

- Remote control
- Batteries (two AA size) for remote control
- AM loop antenna
- FM wire antenna
- AC power cord

Safety Information


- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer. The typeplate is located at the rear of your system.
- When the system is switched on, do not move it around.
- Place the system on a solid base (e.g. a cabinet).
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system.
- The system incorporates a built-in safety feature that prevents over heating.
- Do not expose the system to excessive moisture, rain, sand or heat sources.
- Under no circumstances should you repair the system yourself, as this will invalidate the warranty!
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the CD unit inside the system. Should this occur, the CD player will not operate normally. Leave the power on for about one hour with no disc in the system until normal playback is possible.

- Electrostatic discharge may cause unexpected problems. See whether these problems disappear if you unplug the AC power cord and plug it in again after a few seconds.
- **To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**

PREPARATION

English

Rear Connections

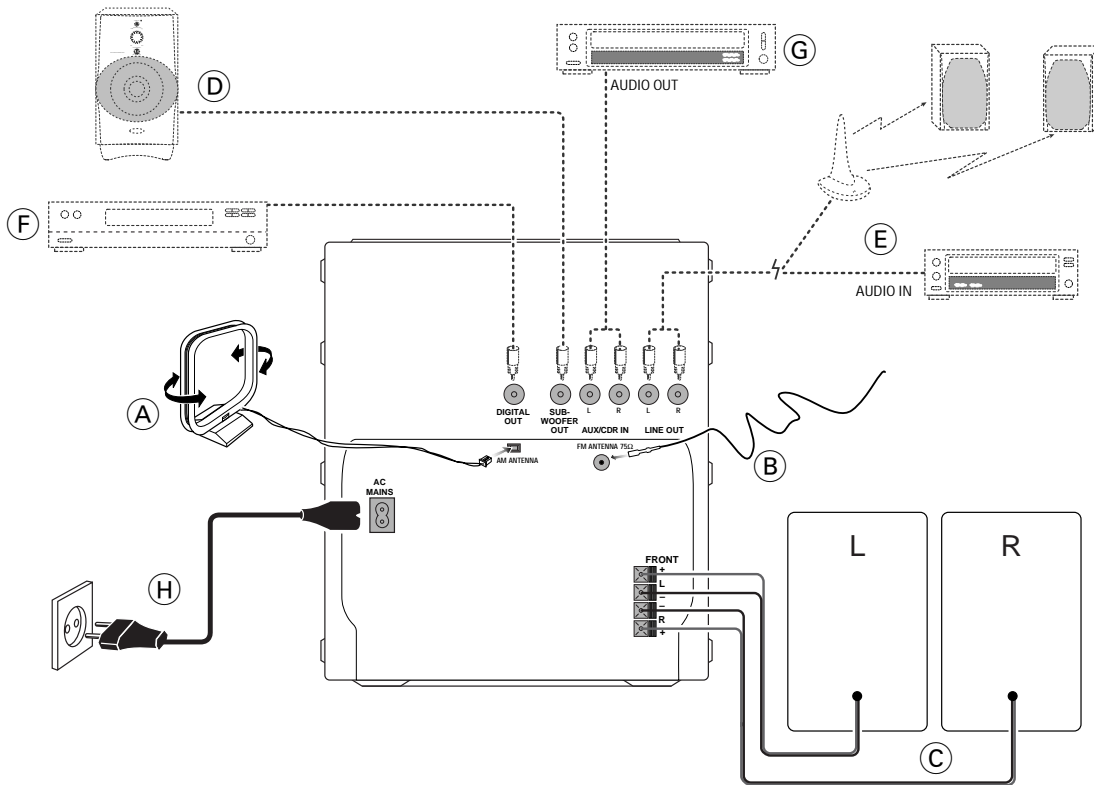

(A) AM Loop Antenna Connection

Connect the supplied loop antenna to the AM ANTENNA terminal. Place the AM loop antenna far away from the system and adjust its position for the best reception.

(B) FM Wire Antenna Connection


Connect the supplied FM wire antenna to the FM ANTENNA 75 Ω terminal. Adjust the position of the FM antenna for the best reception.

Outdoor Antenna

For better FM stereo reception connect an outdoor FM antenna to the FM ANTENNA 75 Ω terminal using a 75 Ω coaxial wire.

(C) Speakers Connection

- Connect the right speaker to Front terminal R, with the coloured wire to + and the black wire to - .
- Connect the left speaker to Front terminal L, with the coloured wire to + and the black wire to - .
- Clip the stripped portion of the speaker wire as shown.

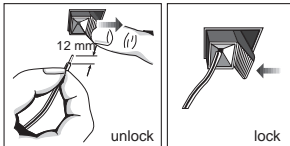

(D) Subwoofer Out Connection

Connect the optional active subwoofer to the SUBWOOFER OUT terminal. The subwoofer reproduces just the low bass effect (e.g. explosions, the rumble of spaceships, etc.). Be sure to follow the instructions supplied with the subwoofer.

(E) Line Out Connection (wireless ready)

You can connect the audio left and right LINE OUT terminals to a optional CD Recorder ANALOGUE IN terminals. This allows you to record in an analogue format.

You can also install additional optional front active speakers away from the system (e.g. in another room) to reduce the inconvenience of running long speaker wires across rooms. You can place as many remote speakers as you like provided they operate at the same radio frequency.

Connect the wireless radio frequency transmitter to the LINE OUT terminals. Place the active speakers at your preferred location. Be sure to follow the instructions supplied with the active speakers.

Note:

- Availability of a wireless transmitter and its peripherals is subjected to the approval of local authorities. Please check with your local safety or approving authority.

(F) Digital Out Connection

You can record the digital sound from the CD, through this output, on any audio equipment with digital input (e.g. CD Recorder, Digital Audio Tape (DAT) deck, Digital to Analog Converter and Digital Signal Processor).

Connect one end of the cinch cable (not supplied) to the DIGITAL OUT socket and the other end to the audio equipment with digital input. When connecting the cinch cable, make sure it is fully inserted.

(G) Connecting other equipment to your system


You can connect the audio left and right OUT terminals of a TV, VCR, Laser Disc player, DVD player or CD-Recorder to the AUX/CDR IN terminals at the rear of the system.

(H) AC Power Supply

After all other connections have been made, connect the AC power cord to the system and to the wall outlet.



Inserting batteries into the Remote Control

- Insert the batteries (Type R06 or AA) into the remote control as shown in the battery compartment.

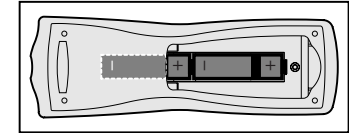

- To avoid damage from possible battery leakage, remove dead batteries or batteries that will not be used for a long time. For replacement, use type R06 or AA batteries.

CONTROLS

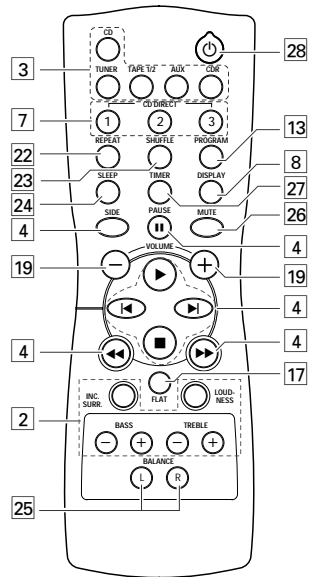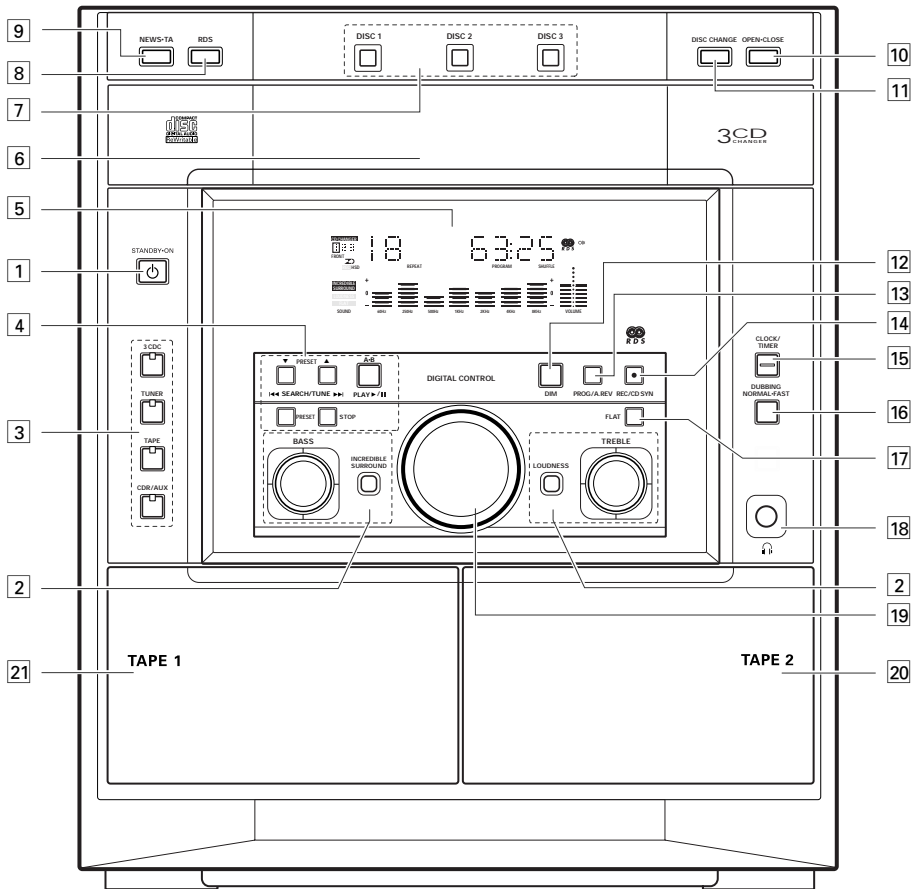

Controls on the system and remote control

1 STANDBY•ON

– to switch the system on or to standby mode.

– to use for EASY SET.

2 DIGITAL CONTROL – to select the desired digital sound effect :

INCREDIBLE SURROUND

– to switch on or off the surround sound effect.

BASS + / –

– to adjust the Bass level.

TREBLE + / –

– to adjust the Treble level.

LOUDNESS

– to switch on or off the loudness sound effect in low volume level.

3 SOURCE – to select the following:
3 CDC

– to select CD mode. When CD playback is stopped, press to select the disc tray 1, 2 or 3.

TUNER

– to select Tuner mode. When in Tuner mode, press to select the waveband: FM, MW or LW.

TAPE

– to select Tape mode. When tape playback is stopped, press to select either tape deck 1 or 2.

CDR / AUX

– to select sound from an external source (e.g. TV, VCR, Laser Disc player, DVD player or CD Recorder). When in Aux mode, press to select either AUX/DVD or CDRW.

4 MODE SELECTION

SEARCH / TUNE ◀◀ ▶▶
(PRESET ▼ ▲)

for CD to search backward/
forward.
..... to skip to the beginning of the current, previous, or next track (*press the button for less than 0.5 seconds*).

for TUNER (*if PRESET mode is OFF*)
to tune to a lower or higher radio frequency.
..... (*if PRESET mode is ON*)
to select a preset station in memory.

for TAPE to rewind or fast forward a tape.

PLAY ▶ / ■ (A•B)

for CD to start or interrupt playback.

for TAPE to start playback.
..... SIDE : when playing in Tape 2 mode, to change side.

PRESET

to switch on or off the PRESET mode.

STOP ■

for CD to stop CD playback or to clear a program.

for TUNER to stop programming.

for TAPE to stop playback or recording.

DEMO (*on the system only*) to start or stop demonstration mode.

5 DISPLAY SCREEN

– to view the current setting of the system.

6 CD CAROUSEL TRAY

7 DISC 1 / DISC 2 / DISC 3
– to select a CD tray for playback.

8 RDS

– to select RDS data in the following order: station name, program type and radio text.

9 NEWS•TA

– to hear News or Traffic Announcement data automatically.

10 OPEN•CLOSE

– to open or close the CD carousel.

11 DISC CHANGE

– to change CD(s).

12 DIM

– to select 4 different DIM mode on the display screen, DIM 1, DIM 2, DIM 3 or DIM OFF.

– to reset the tape counter in tape mode only (*press the button for more than 2 seconds*).

13 PROG / A. REV (PROGRAM / AUTO REVERSE)

for CD to program CD tracks.
for TUNER to program preset radio stations.

for TAPE to select the desired play modes (◀ / ▶ / ◀▶) on tape deck 2 only.

14 REC / CD SYN (RECORD / CD SYNCHRO)

– to start recording or to synchronise the CD recording on tape deck 2.

15 CLOCK/TIMER

– to view the clock, set the clock or set the timer.

16 DUBBING NORMAL•FAST

– to dub a tape in normal or fast speed.

17 FLAT

– to switch on or off the digital sound control setting.

18 

– to connect headphones.

19 VOLUME

– to adjust the volume.

20 TAPE DECK 2

21 TAPE DECK 1


22 REPEAT

– to repeat a CD track, a disc, or all the available discs.

23 SHUFFLE

– to play all the available discs and their tracks in random order.


CONTROLS

- 24 SLEEP**
- to switch the system to standby mode at a selected time period.
- 25 BALANCE L/R**
- to balance the sound level of the Front Left and Right speakers.
- 26 MUTE**
- to switch off the sound temporarily.
- 27 TIMER**
- to switch on or off timer.
- 28** 
- to switch the system to standby mode.

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (e.g. CD, TUNER, TAPE 1/2 or AUX).
- Then select the desired function (▶, ◀, ▶, etc.).

OPERATING THE SYSTEM

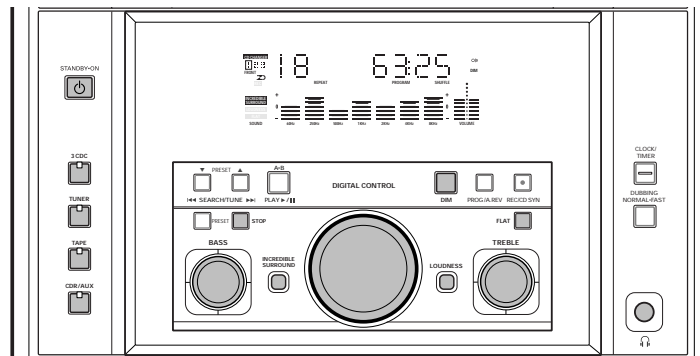

Important:
Before you operate the system, complete the preparation procedures.

Demonstration mode

The system has a demonstration mode that shows the various features offered by the system. **When the system is switched on for the first time, the demonstration mode will start automatically.**

Notes:

- During the demonstration, if you press any source (or standby-on) button, the system will switch to the respective mode (or standby).
- When the system is switched to standby mode, the demonstration will resume 5 seconds later.

To stop the demonstration mode

- Press and hold **STOP** (on the system only) for **5 seconds** when the system is in demonstration mode.
 - The demonstration will stop.
 - "DEMO OFF" is displayed.
 - The system will switch to standby mode.

Note:

- Even though the AC power cord is removed from and reconnected to the wall socket, the demonstration will remain off until it is switched on again.

To start the demonstration mode

- Press and hold **STOP** (on the system only) for **5 seconds** when the system is in standby mode.
 - The demonstration will begin.

Easy Set

EASY SET allows you to store all available radio stations and RDS stations automatically.

- 1 Press and hold **STANDBY•ON** (on the system only) for **5 seconds**, when the system is in standby or demonstration mode.
 - "EASY SET" will be displayed, and followed by "TUNER" and then "AUTO".
 - EASY SET will start searching for all RDS radio stations with sufficient signal strength and then followed by radio stations on FM, MW and LW band respectively. Weak RDS radio stations may be stored in later presets.
 - All available RDS and radio stations with sufficient signal strength will be stored. Up to 40 presets may be stored.
- 2 The system will proceed to set the RDS time automatically with the stored RDS preset station.
 - If no RDS station is available in the first preset station, the program will exit automatically.
 - After a radio station is found, "EASY SET" will be displayed and followed by "TIME"
 - When searching RDS time;
 - "SEARCH RDS TIME" will be displayed.

- When RDS time is read, "RDS TIME" will be displayed. The current time will be displayed for 2 seconds and stored automatically.

Notes:


- EASY SET will start with the RDS station, if there are still presets available, it will continue to store the FM, MW and LW bands respectively.
- When EASY SET is used, all previously stored radio stations will be replaced.
- The last preset radio station or the first available RDS station will appear on the display when EASY SET is completed.
- If RDS station does not transmit RDS time within 90 seconds, the program will exit automatically and the display will show "NO RDS TIME".

Switching the system ON

- Press **STANDBY•ON** (on the system only), **3 CDC**, **TUNER**, **TAPE** or **CDR/AUX**.

You can also switch on the system by pressing any one of the CD DIRECT PLAY buttons.

Switching the system to standby mode

- Press **STANDBY•ON** again or  on the remote control.
 - The system will switch to standby mode.

Selecting the Source

- Press the respective source selection button: **3 CDC**, **TUNER**, **TAPE** or **CDR/AUX**.
 - The display indicates the selected source.

Note:

- For an external source, make sure you have connected the audio left and right OUT terminals of the external equipment (TV, VCR, Laser Disc player, DVD player or CD Recorder) to the AUX/CDR IN terminals.

Dim Mode


This feature allows you to select 4 different modes for display brightness.

- Press **DIM** to select the desired screen display brightness: DIM 1, DIM 2, DIM 3 or DIM OFF.
 - The DIM display lights up.
 - "DIM 1", "DIM 2", "DIM 3" or "DIM OFF" will be displayed depending on the mode selected.

Volume Adjustment

Adjust VOLUME to increase or decrease the sound level.

For Personal Listening

Connect the headphones plug to the  socket at the front of the system. The speakers will be muted.

MUTE (on remote control only)

This feature allows you to temporarily switch off the sound without switching off the system when you require a moment of silence.

- Press **MUTE** on the remote control to switch off the sound.
 - "MUTE" will be displayed.
- Press **MUTE** again on the remote control or increase the VOLUME level to switch on the sound.

BALANCE L/R (on remote control only)

Adjust the sound balance of the left and right speakers.

- Press **BALANCE L/R** on the remote control to adjust the sound of the front Left or Right speaker respectively.
 - The display will show "LEFT X", "BALANCED" or "RIGHT X".

Note:

- "X" denotes the sound level.

OPERATING THE SYSTEM

Digital Control

The Digital Control feature enables you to adjust the system to suit your type of music.

INCREDIBLE SURROUND

Normal stereo sound is determined by the distance between the front speakers. When Incredible Surround is switched on, it magnifies the virtual distance between the front speakers for an incredibly wide, enveloping, stereo effect.

- Press **INCREDIBLE SURROUND** to switch on.
 - The **INCREDIBLE SURROUND** display lights up.
 - "INCREDIBLE SURROUND ON" will be displayed.

To switch off Incredible Surround

- Press **INCREDIBLE SURROUND** again.
 - The **INCREDIBLE SURROUND** display is switched off.
 - "INCREDIBLE SURROUND OFF" will be displayed.

BASS/TREBLE

There are 7 different BASS/TREBLE levels available for selection.

- Rotate the **BASS** or **TREBLE** to select the desired bass or treble level respectively.
 - The BASS/TREBLE level will increase or decrease between level **+3** and **-3**.
 - If BASS is selected, the display will show either "BASS +X" or "-X".
 - If TREBLE is selected, the display will show either "TREBLE +X" or "-X".

Note:

- "X" denotes the sound level.

LOUDNESS

Special sound effect that provides some kind of bass, treble accentuation effect specially for low volume level. It can be switched on additionally to all sound settings.

- Press **LOUDNESS** to switch on.
 - The **LOUDNESS** display lights up.
 - "LOUDNESS ON" will be displayed.


To switch off Loudness sound effect

- Press **LOUDNESS** again.
 - The **LOUDNESS** display is switched off.
 - "LOUDNESS OFF" will be displayed.

Flat

This feature allows you to temporarily switch off all the DIGITAL CONTROL setting (e.g. Bass, Treble, Incredible Surround, etc.).

- Press **FLAT** to switch off the digital control setting.
 - The **FLAT** display lights up.
 - "FLAT ON" will be displayed.
- Press **FLAT** again to restore the previous setting.
 - The **FLAT** display is switched off.
 - "FLAT OFF" will be displayed.

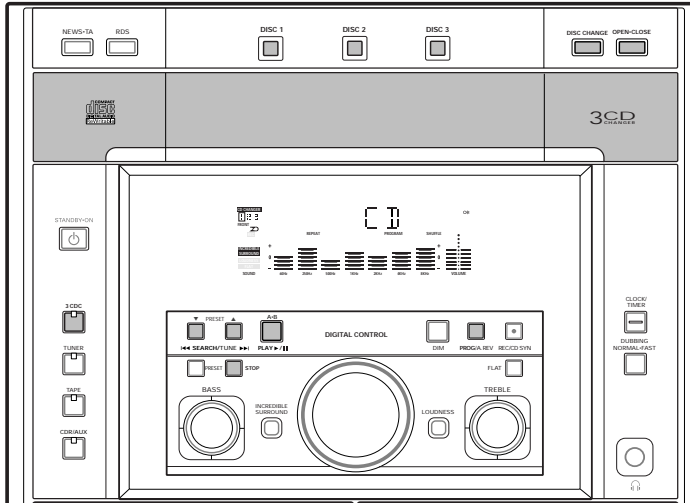

Warning!

- 1) This system is designed for conventional CDs. Do not use any accessories such as disc stabilizer rings or CD treatment sheets, etc., which may damage the CD mechanism.
- 2) Do not load more than one disc into each tray.
- 3) When the CD changer is loaded with CDs, do not turn over or shake the system. This may jam the changer.

You may load three discs in the CD changer for continuous playback without interruption.

Disc for playback

This system can playback all audio CD, finalized audio CD-Recordable and finalized audio CD-Rewritable format discs.



Loading the CD Changer

- 1 Press **3 CDC** to select CD mode.
- 2 Press **OPEN•CLOSE**.
→ The CD carousel slides out.
- 3 Load a CD with the printed side up in the right tray.
 - You can load another disc in the left tray.
 - To load the third disc, press the **DISC CHANGE** button.
→ The CD carousel will rotate until the empty tray is ready for loading.
- 4 Press **OPEN•CLOSE** to close the CD carousel.
→ The total number of tracks and the playing time of the last selected disc appear on the display.

Note:

- To ensure good system performance, wait until the CD changer completely reads the disc(s) before proceeding.

CD Direct Play

You can play a CD directly by pressing the **DISC 1**, **DISC 2** or **DISC 3** button. The CD player will stop at the end of playback of the selected disc.

- A lit button indicates that a disc is loaded in the disc tray.

Playing a CD

- 1 Press **PLAY ▶** to start playback.
 - The disc tray, track number and elapsed playing time of the current track appear on the display.
- To interrupt playback, press **II**.
→ The playing time flashes.
- To resume playback, press **PLAY ▶** again.
- 2 To stop playback, press **STOP**.

Note:

- All the available discs will play once, then stop.

Disc Change

You can change the outer two discs while the third inner disc is stopped or is playing.

- 1 Press **DISC CHANGE**.
→ The CD carousel slides out.
- 2 Replace the discs in the left and right disc trays.
 - If you press **DISC CHANGE** again during playback, the CD will stop playing.
→ The CD carousel will rotate until the inner tray is rotated out and is ready for loading.
- 3 Press **OPEN•CLOSE** to close the CD compartment.

Selecting a desired track

Selecting a desired track when playback is stopped

- 1 Press **◀◀** or **▶▶** (or **◀ / ▶** on the remote control) until the desired track appears on the display.
- 2 Press **PLAY ▶** to start playback.
 - The selected track number and elapsed playing time appear on the display.

Selecting a desired track during playback

- Press **◀◀** or **▶▶** (less than 0.5 seconds) until the desired track appears on the display.
 - The selected track number and elapsed playing time appear on the display.
- If you press **◀◀** (less than 0.5 seconds) it will skip to the beginning of the current track and play the track again.

Searching for a particular passage during playback

- Press and hold **SEARCH ◀◀** or **▶▶** (or **◀ / ▶** on the remote control) until the desired passage is located.
 - The volume will be reduced.
- Play returns to normal when **SEARCH ◀◀** or **▶▶** is released.

Programming Tracks

Programming tracks of a loaded CD is possible when playback is stopped. The display will indicate the total tracks stored in the program. Up to 40 tracks can be stored in the memory in any order. When 40 tracks are stored and you attempt to store another track, the display will show "FULL".

- 1 Load the desired discs in the disc trays.
- 2 Press **PROGRAM** to start programming.
 - The **PROGRAM** flag starts flashing.
 - It will cancel any previously selected repeat mode.
- 3 Press the **3 CDC** button to select the disc.
- 4 Press **◀◀** or **▶▶** (or **◀ / ▶** on the remote control) to select the desired track.
- 5 Press **PROGRAM** to store the track.
 - Repeat steps **3** to **5** to store other discs and tracks.
- 6 Press **STOP** once to end programming.
 - The total number of tracks programmed and total playing time appear on the display.

Notes:

- If the total playing time is more than "99:59" or if one of the programmed tracks has a number greater than 30, then "-- : - -" appears on the display instead of the total playing time.

- During programming, if no button is pressed within 20 seconds, the system will exit program mode automatically.

Reviewing the program

Reviewing of the program is possible only when playback is stopped.

- Press **◀◀** or **▶▶** repeatedly to review the programmed tracks.
- Press **STOP** to exit review mode.

Playing the program

- 1 Press **PLAY ▶** to start program playback.
 - "PLAY PROGRAM" appears on the display.
 - The track number and elapsed playing time of the current track will appear on the display.
- If you press **REPEAT** during program playback, the current track or all programmed tracks will be played repeatedly.
 - "TRACK" or "PROGRAM" will be displayed.
 - The **REPEAT** and **PROGRAM** flags will be displayed.
- 2 Press **STOP** to stop program playback.

Notes:

- If you press any of the CD **DIRECT PLAY** buttons, the system will play the selected disc or track and the stored program will be ignored temporarily. The **PROGRAM** flag also will disappear temporarily from the display. It will reappear when playback of the selected disc ends.
- **REPEAT DISC** mode will be cancelled when program playback begins.

Erasing the program (when playback is stopped)

- Press **STOP**.
 - "PROGRAM CLEARED" will be displayed.

Note:

- The program will be erased when the system is disconnected from the power supply or when the CD carousel is opened. If the CD carousel is opened, the tracks belonging to the outer two trays will be erased and the display will show "TRACKS CLEARED".

Shuffle *(only on remote control)*

In shuffle mode, the system plays all the available discs and their tracks in random order. Shuffle may be used also when tracks are programmed.

To shuffle all the discs and tracks

- 1 Press **SHUFFLE**.
 - "SHUFFLE" will be displayed.
 - The **SHUFFLE** flag, the disc and the track selected at random appear on the display.
- The discs and the tracks will be played in random order until you press **STOP**.
- If you press **REPEAT** during shuffling, the current track or all available discs will be played repeatedly.
 - "TRACK" or "ALL" will be displayed.
 - The **REPEAT** and **SHUFFLE** flags will be displayed.
- 2 Press **SHUFFLE** again to resume normal playback.
 - The **SHUFFLE** flag disappears from the display.

Note:

- **REPEAT DISC** mode will be cancelled when shuffle is selected.


Repeat *(only on remote control)*

You can play the current track, a disc or all available discs repeatedly.

- 1 Press **REPEAT** on the remote control to select the various repeat modes.
 - "TRACK", "DISC", "ALL" or "OFF" will be displayed.
 - The **REPEAT** flag appears on the display.
- The selected track, selected disc or all available discs will now be played repeatedly until you press **STOP**.
- 2 Press **REPEAT** until the "OFF" mode is displayed to resume normal playback.
 - The **REPEAT** flag disappears from the display.

Notes:

- **REPEAT DISC** mode is not available during program play or shuffling mode.
- You can also repeat shuffling a program.
 - "REPEAT TRACK" or "REPEAT PROGRAM" will be displayed.
- The **REPEAT**, **PROGRAM** and **SHUFFLE** flags appear on the display.

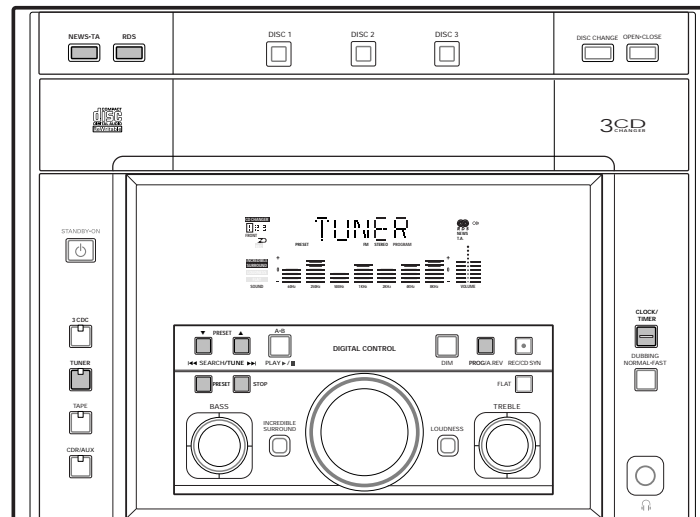**Note:**

- For 'EASY SET' feature, please refer to page 11.

Tuning to radio stations

- 1 Press **TUNER** to select TUNER mode.
 - "TUNER" will be displayed.
 - A few seconds later, the current radio frequency will be displayed.
- 2 Press **TUNER** again to select the desired waveband : FM, MW or LW.
- 3 Press **TUNE** \lll or \ggg (or \lll / \ggg on the remote control) for more than one second, then release.

→ The display will show "SEARCH" until a radio station with sufficient signal strength is found.

- Repeat this procedure until the desired station is reached.
- To tune to a weak radio station, briefly press **TUNE** \lll or \ggg repeatedly until the display shows the desired frequency and/or when the best reception has been obtained.

Note:

- Before activate TUNING function on the system, make sure that the **PRESET** mode is switched off .

Storing Preset Stations

You can store up to 40 radio stations in the memory. When a preset radio station is selected, the preset number appears next to the frequency on the display.

Automatic programming

- 1 Press **TUNER**.
- 2 Press **PROGRAM** for more than one second.
 - The **PROGRAM** flag starts flashing and "AUTO" will be displayed.
 - The system will search for every available station in the FM waveband first, then search by the MW and LW wavebands.
 - All available radio stations will be stored automatically. The frequency and preset number will be displayed briefly.
 - The system will stop searching when all the available radio stations are stored or when the memory for 40 preset radio stations is used.
 - The system will remain tuned to the last stored preset radio station.

Notes:

- You can cancel the automatic programming by pressing **PROGRAM** or **STOP** (on the system only).

- If you want to reserve a section of preset numbers, for example preset numbers 1 to 9, select preset 10 before starting automatic programming: only the preset numbers 10 to 40 will be programmed.

Manual programming

- 1 Press **TUNER**.
 - 2 Press **TUNER** again to select the desired waveband : FM, MW or LW.
 - 3 Press **PROGRAM** for less than one second.
 - The **PROGRAM** flag starts flashing.
 - The next available preset number will be displayed for selection.
 - 4 Press **TUNE** |◀◀ or ▶▶| (or ◀◀/▶▶ on the remote control) to tune to the desired frequency.
 - If you wish to store the radio station to another preset number, first select PRESET mode, then press **PRESET** ▼ or ▲ to select the desired preset number.
 - The **PRESET** flag will be displayed.
 - 5 Press **PROGRAM** again.
 - The **PROGRAM** flag disappears and the radio station will be stored.
- Repeat the **steps 3 to 5** to store other preset radio stations.

Notes:

- When 40 radio stations are stored and you attempt to store another radio station, the display will show "FULL". If you want to change an existing preset number, repeat steps 3 – 5.
- You can cancel manual programming by pressing **STOP** (on the system only).
- During programming, if no button is pressed within 20 seconds, the system will exit program mode automatically.
- When in programming mode, the **PRESET** mode will automatically be activated.

Tuning to Preset Radio Stations

- 1 Press **PRESET** to switch on the PRESET mode.
 - The **PRESET** flag will be displayed.
- 2 Press **PRESET** ▼ or ▲ (or ◀ / ▶ on the remote control) to select the desired preset number.
 - The preset number, radio frequency, and waveband appear on the display.

Receiving RDS Radio Station



RDS (Radio Data System) is a broadcasting service that allows FM stations to send additional information along with the regular FM radio signal. This additional information can contain:

- **STATION NAME:** The radio station name is displayed.
- **PROGRAM TYPE:** The following program types exist and can be received by your tuner: News, Affairs, Info, Sport, Educate, Drama, Culture, Science, Varied, Pop M, Rock M, M.O.R. (middle of the road music), Light M, Classics, Other M, No type.
- **RADIO TEXT (RT):** text messages appear in the display.

When you have tuned to a RDS station, the RDS logo (RDS) and the radio station name will appear on the display:

- The display normally shows the radio station name if available. By repeatedly pressing **RDS** button you can change the type of display information:

→ The display shows in turn:
 STATION NAME →
 PROGRAM TYPE → RADIO
 TEXT → STATION NAME ...

Note:

- When you press the RDS button and the display shows "NO RDS", it indicates that either the tuned station is not transmitting RDS signal or it is a non RDS station.

RDS Clock

Some RDS station may be transmitting a real clock time at an interval of every minute.

Setting the time with RDS clock

- 1 Press **CLOCK/TIMER**.
→ "-- : --" or current time appears on the display.
- 2 Press **CLOCK/TIMER** once more to enter clock setting mode.
→ "00:00" or current time starts flashing.
- 3 Press **RDS**.
→ The message "SEARCH RDS TIME" will be displayed.
→ If the station does not transmit RDS clock, "NO RDS TIME" will be displayed.
→ When the RDS clock is read, "RDS TIME" will be displayed. The current clock time is displayed for 2 seconds and will be stored automatically.
→ If within 90 seconds, the RDS time is not detected, "NO RDS TIME" will be displayed.

NEWS•TA (Traffic Announcement) *(only available in Radio Station with RDS)*

You can activate NEWS or TA function in Standby, Demonstration or any source mode except Tuner mode. Once the News Program Type (for NEWS function) or Traffic Announcement data (for TA function) is detected in any of the selected RDS stations, it will switch to TUNER mode automatically.

NEWS•TA key toggles in the following sequence :

NEWS → TA → OFF → NEWS

To start NEWS or TA function

- 1 Press **NEWS•TA** to select NEWS function.
→ The **NEWS** flag and "NEWS" will be displayed.
 - If you want to select TA function, press **NEWS•TA** again.
→ The **TA** flag and "TA" will be displayed.
- 2 When NEWS or TA is selected;
 - It will scan RDS stations stored in the first 5 preset and wait for the News Program Type / Traffic Announcement data to be available in any of these RDS stations. During the search :
→ The current source activity will remain uninterrupted.

- If no RDS station is found in the first 5 presets, the NEWS•TA function will be switched off. The display will show "NO RDS NEWS" or "NO RDS TA" and **NEWS** or **TA** flag will disappear from the display.
- When NEWS•TA transmission is detected, the system will switch to Tuner mode.
→ The **NEWS** or **TA** flag starts flashing.


To cancel NEWS or TA function

- Press **NEWS•TA** until the **NEWS** or **TA** flag disappears and "TA OFF" is displayed.

Notes:


- If you are listening to a non RDS TUNER radio station and should you decide to hear NEWS or TA, first select other source (e.g. 3CDC, TAPE or CDR/AUX), then press **NEWS•TA**.
- Before using the NEWS or TA feature, ensure that the first 5 presets are RDS stations.
- The NEWS•TA works only once for each activation.
- During News bulletin or Traffic Announcement, you can press any available source or Tuner function keys to cancel NEWS•TA function and execute the relevant source mode.

- If set is switched to Tuner source, the NEWS•TA function will be cancelled, "NEWS OFF" or "TA OFF" will be displayed immediately after the "TUNER" message.

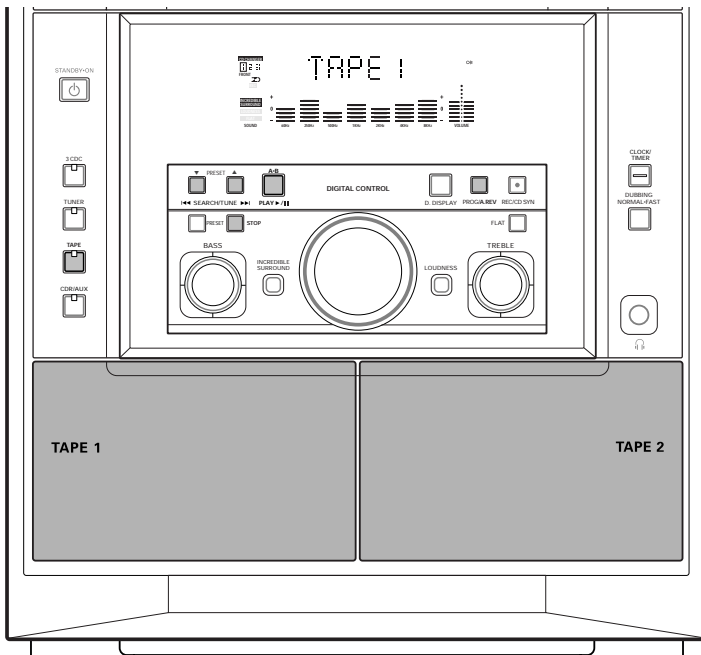

Loading a tape

- Press on the tape deck to open the tape deck door.
- Load the tape with the open side downward and the full spool to the left.
- Close the tape deck door.

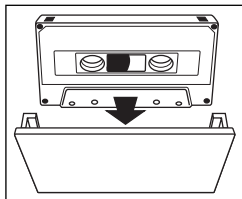

Tape Playback

- 1 Press **TAPE** to select TAPE mode.
→ "TAPE 1" or "TAPE 2" will be displayed.
- Press **TAPE** again to select either tape deck 1 or tape deck 2.
- 2 Load the tape into the desired tape deck.
- 3 Press **PLAY** ▶ to start playback.

3a (For Tape Deck 2 only)

Press **A•B (SIDE)** to switch playback

between side A and B.
→ The **BACK** or **FRONT** flag appears on the display, depending on the side selected.

3b (For Tape Deck 2 only)

Press **A. REV** to select the different type of playback mode (see *auto reverse playback*).

4 Press **STOP** to end playback.

Note:
– To change side before playback begins, use the **SIDE** button on the remote control.

Auto Reverse Playback (only on tape deck 2)

- Press **A. REV** to select the different playback modes.
 - ▶ to record or playback on one side of the tape. The tape stops at the end of one side.
 - ◀▶ to record or playback on both sides of the tape. The tape then stops.
 - ◀▶ to playback continuously on both sides of the tape up to a maximum of 10 times per side unless you press **STOP**.

Rewind/Fast Forward

When playback is stopped

- 1 You can rewind or fast forward the tape by pressing **◀◀** or **▶▶** (or **◀◀/▶▶** on the remote control) respectively.
→ "TA 1 XXX" or "TA 2 XXX" will be displayed depending on which button is pressed.
→ The tape will stop automatically at the end of the rewinding or fast forwarding.
- 2 Press **STOP** to stop rewinding or fast forwarding.

TAPE


During playback

- Press and hold **⏮** or **⏭** (or **⏮** / **⏭** on the remote control) until the desired passage is located.
 - During searching, the sound is reduced to a low volume.
 - When you release **⏮** or **⏭**, the tape continues playing.

Notes:

- "000" denotes the tape counter number. It will automatically set to zero after detecting end of tape or changing tape play direction on TAPE 2. To reset the tape counter number to zero during playback, press the DIM button for more than 2 seconds.
- During rewinding or fast forwarding of a tape, it is also possible to select another source (e.g. 3 CDC, TUNER or CDR/AUX).
- Before use, check and tighten slack tape with a pencil. Slack tape may get jammed or may burst in the mechanism.
- C-120 tape is extremely thin and is easily deformed or damaged. It is not recommended for use in this system.
- Store the tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV, or speaker).

CDR/AUX

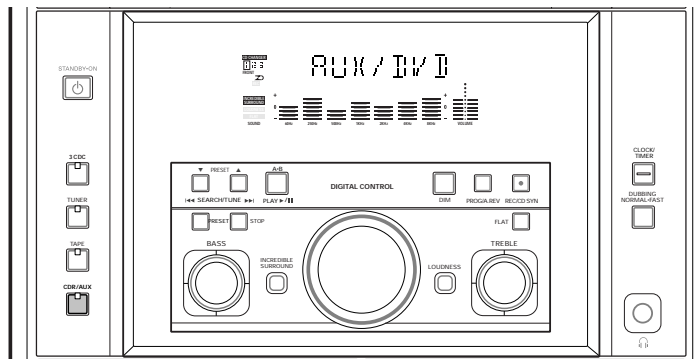


Selecting External Equipment

If you have connected the audio out terminals of the external equipment (TV, VCR, Laser Disc player, DVD player, or CD Recorder) to the AUX/CDR IN terminals, you can hear the enhanced sound from the system.

- Press **CDR/AUX** to select AUX-DVD mode.
 - "AUX/DVD" will be displayed.
- Press **CDR/AUX** again to select the CDRW mode.
 - "CDRW" will be displayed.

Notes:

- There are two external modes:
 - i. the normal AUX/DVD mode.
 - ii. the CDRW mode; where the LINE OUT of this mini system is muted. You will not be able to record or listen to the sound from the LINE OUT.
- You are advised not to listen to and record from the same source simultaneously.
- All the sound control features (e.g. Incredible Surround, Bass/Treble, etc.) are available for selection.

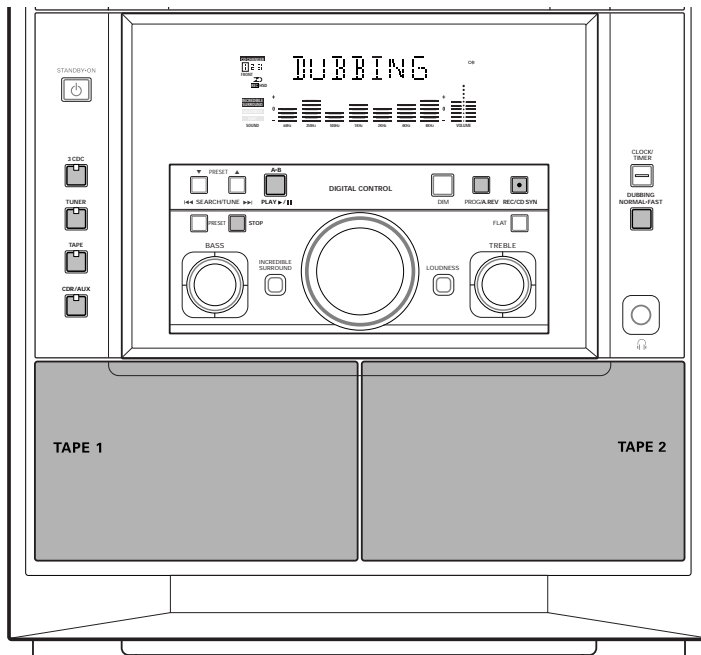

Notes:

 

- For recording, use only tape of IEC type I (normal tape) or IEC type II (CrO₂).
- The tape is secured at both ends with leader tape. At the beginning and end of tape, nothing will be recorded for 6 to 7 seconds.
- The recording level is set automatically, regardless of the position of Volume, Incredible Surround or Bass/Treble.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.
- If "CHECK TAPE" is displayed, the protection tab has been broken. Put a piece of clear adhesive tape over the opening. Do not cover the CrO₂ tape detection hole when covering the tab opening.

Recording from other sources

(only on tape deck 2)

- 1 Press **TAPE** to select tape deck 2.
- 2 Load a blank tape into tape deck 2 with the open side downward.
- 3 Press **SIDE** on remote control to select the recording side.
 - The **BACK** or **FRONT** flag will be displayed, depending on the side selected.
- 4 Press **3 CDC**, **TUNER** or **CDR/AUX**.
 - Start playback of the selected source.
- 5 Press **REC** to start recording.
 - The **REC** flag starts flashing.
- 6 Press **STOP** to stop recording.

Notes:

- Only  or  mode is available during recording.
- During recording, it is not possible to listen to another source.

Dubbing tapes (from tape deck 1 to tape deck 2)

- 1 Press **TAPE** to select tape deck 2.
- 2 Load the prerecorded tape into tape deck 1 and a blank tape into tape deck 2.
 - Make sure the tape in tape deck 1 has its full spool to the left.
- 3 (For Tape Deck 2 only)
Press **SIDE** on the remote control to select the recording side.
- 4 Press **DUBBING NORMAL+FAST once** for normal speed dubbing or **twice** (within 2 seconds) for high speed dubbing.
 - "NORMAL" (normal speed) or "FAST" (high speed) will be displayed, followed by "DUBBING".
 - The **hsd** flag appears on the display during high speed dubbing.
- Dubbing will start immediately.
 - The **REC** flag starts flashing.
- 5 Press **STOP** to stop dubbing.

Notes:

- Only **↔** mode is available during dubbing.
- At the end of side A, flip the tapes to side B and repeat the procedure.
- Dubbing of tapes is only possible from tape deck 1 to tape deck 2.
- To ensure good dubbing, use tapes of the same length.

- During high speed dubbing in Tape mode, the sound is reduced to a low volume.
- You can listen to another source while dubbing.

CD Synchro Start Recording

During CD synchro start recording,

- Do not fast forward/rewind your tape in tape deck 1.
 - Do not listen to another source.
- 1 Press **TAPE** to select tape deck 2.
 - Load a blank tape into tape deck 2 with the open side downward.
 - 2 Press **SIDE** on remote control to select the recording side.
 - 3 Press **A. REV** to select the playback mode (**↔** or **↔**).
 - 4 Press **3 CDC**.
 - You can program the tracks in the order you want them to be recorded (see Programming Tracks). If you do not, the tracks are recorded according to the order on the selected disc.
 - 5 Press **CD SYN** to start recording.
 - The **REC** flag starts flashing.
 - 6 Press **STOP** to stop recording CD playback.

One Touch Recording

- For One Touch Recording, as soon as you press **REC**, the current source (3 CDC, TUNER or CDR/AUX) will be recorded on tape deck 2

- 1 Load a blank tape in tape deck 2.
- 2 Press **REC** to start recording.
 - The **REC** flag starts flashing.
- 3 Press **STOP** to stop recording.


Note:

- When you press **RECORD** while in **TAPE** mode, "SELECT SOURCE" will be displayed. One Touch Recording is not possible in **TAPE** mode.

Digital Recording via Digital Out

For CD digital recording, please refer to the Instructions Manual of the CD Recorder, digital audio equipment, etc.

CLOCK

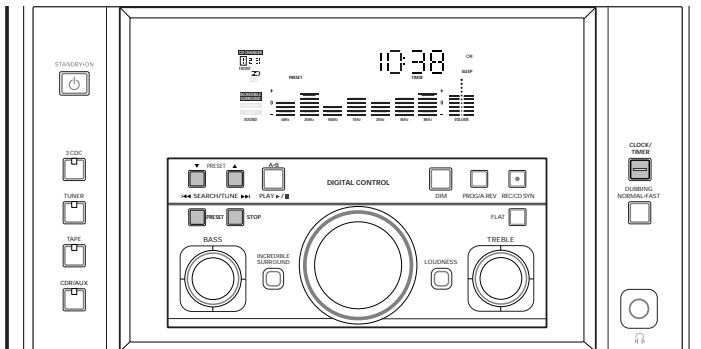

Viewing the Clock

You can view the clock (if it is set) while the system is in standby mode or any source mode. It will be displayed for about 7 seconds.

- Press **CLOCK/TIMER** briefly (*on the system only*).
 - "10:38" (the current time) will be displayed.
 - "----" will be displayed if the clock is not set.

Setting the Clock

The clock is set in 24-hour mode, e.g. "00:00" or "23:59". Before setting the clock, you must be in the View Clock mode.

- 1 Press **CLOCK/TIMER** to select clock mode.
 - "00:00" or the current time starts flashing.
 - 2 Press **◀◀** or **▶▶** to set the hour (*PRESET mode OFF*).
 - 3 Press **◀◀** or **▶▶** to set the minute (*PRESET mode ON*).
 - 4 Press **CLOCK/TIMER** again to store the setting.
 - The clock starts.
- To exit without storing the setting, press **STOP** on the system.

Notes:

- During clock setting, if no button is pressed within 90 seconds, the system will exit clock setting mode automatically.
- When a power interruption occurs, the clock setting is erased.
- To set the time with RDS clock, see "Receiving RDS Radio Station" under *TUNER* section.

TIMER

Setting the Timer

- The system can switch on to CD, TUNER, or TAPE 2 mode automatically at a preset time. It can serve as an alarm to wake you up.
- Before setting the timer, make sure the clock is set correctly.
- The timer will always be switched on once it is set.
- **The volume of the timer will start to increase from the minimum level until the volume level before the set is switched to standby mode.**

- 1 Press and hold **CLOCK/TIMER** for more than 2 seconds to select timer mode.
 - "00:00" or the last set timer starts flashing. The **TIMER** flag flashes.
 - The last selected source is lit while other available sources are flashing.
- 2 Press **3 CDC**, **TUNER** or **TAPE** to select the desired source.
 - Before selecting CD or TAPE, make sure a CD or tape is loaded in the CD tray or tape deck 2.
- 3 Press **◀◀** or **▶▶** to set the hour for the timer to start (*PRESET mode OFF*).
- 4 Press **◀◀** or **▶▶** to set the minute for the timer to start (*PRESET mode ON*).
- 5 Press **CLOCK/TIMER** to store the start time.
 - The timer is now set.
 - The **TIMER** flag remains on the display.

TIMER

- To exit without storing the setting, press **STOP**.
- At the preset time, the timer will be activated.
 - The selected source will be played.

Notes:

- During timer setting, if no button is pressed within 90 seconds, the system will exit timer setting mode automatically.
- If the source selected is **TUNER**, the last tuned frequency will be switched on.
- If the source selected is **CD**, playback will begin with the first track of the last selected disc. If the **CD** trays are empty, the **TUNER** will be selected instead.
- If the source selected is **TAPE**, and if the preset time is reached during high speed dubbing, the **TUNER** will be selected instead.
- If the recording is active, the timer will be cancelled.

To switch off the TIMER

- 1 Press **CLOCK/TIMER** for more than 2 seconds (or **TIMER** on the remote control).
- 2 Press **STOP** on the system to cancel the timer.
 - The timer is now switched off.
 - The display will show "OFF" and the **TIMER** flag disappears.

To start the TIMER again (for the same preset time and source)

- 1 Press **CLOCK/TIMER** for more than 2 seconds (or **TIMER** on the remote control).
- 2 Press **CLOCK/TIMER** again to store the start time.
 - The timer is now switched on.
 - The **TIMER** flag appears on the display.

SLEEP

Sleep (only on remote control)

This feature allows you to select a length of time after which the system will switch to the standby mode automatically.

- Press **SLEEP** on the remote control repeatedly to select a period of time.
 - The selections are as follows (time in minutes):
60 → 45 → 30 → 15 → OFF → 60 ...
 - "SLEEP XX" or "OFF" will be displayed. "XX" is the time in minutes.
- When you reach the desired length of time, stop pressing the **SLEEP** button.
 - After this amount of time passes, the system will switch to the standby mode.

To switch off the sleep timer

- Press **SLEEP** repeatedly until "OFF" is displayed, or press the **STANDBY•ON** button.

SPECIFICATIONS

Specifications

AMPLIFIER

Output power	2 x 100 W MPO / 2 x 50 W RMS ⁽¹⁾
Signal-to-noise ratio	≥ 75 dBA (IEC)
Frequency response	40 – 20,000 Hz, ± 3 dB
Input sensitivity	
AUX/CDR In	500 mV
Output	
Speakers	≥ 6 Ω
Headphones	32 Ω – 1000 Ω
Subwoofer Out	1.5 V ±2dB, > 22,000 Ω
Line Out	500 mV ±2dB, > 22,000 Ω
Digital Out	IEC 958, 44.1 kHz

(1) (6 Ω, 1 kHz, 10% THD)

CD PLAYER

Number of programmable tracks	40
Frequency response	40 – 20,000 Hz
Signal-to-noise ratio	≥ 76 dBA
Channel separation	≥ 79 dB (1 kHz)
Total harmonic distortion	< 0.02% (1 kHz)

TUNER

FM wave range	87.5 – 108 MHz
MW wave range	531 – 1602 kHz
LW wave range	153 – 279 kHz
Number of presets	40
Antenna	
FM	75 Ω wire
AM	Loop antenna

TAPE DECK

Frequency response	
Chrome tape (type II)	60 – 15,000 Hz (5 dB)
Normal tape (type I)	60 – 15,000 Hz (5 dB)
Signal-to-noise ratio	
Chrome tape (type II)	≥ 50 dBA
Normal tape (type I)	≥ 47 dBA
Wow and flutter	≤ 0.4% DIN

SPEAKERS

System	shielded 3-way; 1 G-bass port
Impedance	6 Ω
Woofer	1 x 6.5"
Tweeter	1 x 2.5"
Polydome Tweeter	1 x 1"
Dimensions (w x h x d)	260 x 325 x 310 (mm)
Weight	4.89 kg each

GENERAL INFORMATION

Material/finish	Polystyrene/Metal
AC Power	220 – 230 V / 50 Hz
Power Consumption	
Active	70 W
Standby	< 15 W
Dimensions (w x h x d)	265 x 310 x 363 mm
Weight (without speakers)	7.2 kg

Subject to modification

MAINTENANCE

Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray intended for analog records.



Cleaning the CD lens

- After prolonged use, dirt or dust may accumulate at the CD lens. To ensure good playback quality, clean the CD lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads, the capstan(s), and pressure roller(s) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.

- You can also clean the heads by playing a cleaning tape once.

Demagnetizing the heads

- Use a demagnetizing tape available at your dealer.

TROUBLESHOOTING

Warning! Under no circumstances you should try to repair the set yourself as this will invalidate the guarantee. Do not open the set as there is a risk of electric shock.

- If a fault occurs, check the points listed below before taking the system for repair.
- Should any problems persist after you have made these checks, consult your nearest dealer or service center.

CD Player Operation

"NO DISC" is displayed.

- The disc is inserted upside down.
→ *Place CD with printed side up.*
- Moisture condensation at the lens.
→ *Wait until lens has adjusted to normal room temperature.*
- There is no disc in the CD tray.
→ *Insert a CD.*
- The CD is dirty, badly scratched or warped.
→ *Clean or replace the CD.*
- The CD lens is dirty or dusty.
→ *See section under Maintenance.*

"DISC NOT FINALIZED" is displayed.

- The CD-RW or CD-R disc is not properly recorded for the use of a standard CD player.
→ *Read the instruction booklet of your CD-Rewritable or CD-Recorder on how to finalize a recording.*
- The CD is badly scratched or dirty.
→ *Replace or clean CD.*

Radio Reception

Poor radio reception.

- The signal is too weak.
→ *Adjust the antenna.*
- *Connect an external antenna for better reception.*
- The TV or VCR is too close to the stereo system.
→ *Separate the stereo system from the TV or VCR.*

"NO RDS TEXT" is displayed.

- RDS text message is not available.
→ *Select another RDS station.*

TROUBLESHOOTING

Tape Deck Operation

"RECORDING ACTIVE" is displayed.

- A recording is in progress.
- Stop the recording or wait until it is finished.

"CHANGE TO TAPE" is displayed.

- Tape dubbing is only possible in tape mode.
- Switch to tape mode by pressing TAPE.

Recording or playback cannot be made or there is a decrease in audio level.

- Dirty tape heads, capstans or pressure rollers.
- See section on tape deck maintenance.
- Magnetic build-up in the record/playback head.
- Use demagnetizing tape.

General

System does not react when any button is pressed.

- Electrostatic discharge.
- Press STANDBY • ON to switch the system off. Remove the AC power plug from the wall outlet, then reconnect the power plug and switch on the system again.

No or poor sound.

- Volume is not turned up.
- Adjust VOLUME.
- The headphones are connected.
- Disconnect the headphones.
- Speakers are not connected or are connected wrongly.
- Check that the speakers are connected correctly.
- Make sure the stripped speaker wire is clamped.

Reversed left and right sound.

- Speakers are connected wrongly.
- Check the speaker connections and location.

Lack of bass sound or apparently imprecise physical location of musical instruments.

- Speakers are connected wrongly.
- Check the speaker connection for proper phasing, coloured/black wires to coloured/black terminals.

Remote control has no effect on the system.

- Wrong source is selected.
- Select the source (CD, TUNER, etc.) before pressing the function button, (▶, ◀, ▶, etc.).
- The distance to the system is too large.
- Reduce the distance.
- Batteries are inserted incorrectly.
- Insert the batteries with their polarities (+/- signs) as indicated.
- Batteries are exhausted.
- Replace the batteries.

Timer not working.

- Clock is not set.
- Set the clock.
- Timer is not switched on.
- Press CLOCK/TIMER to switch on the timer.
- Recording is in progress.
- Stop dubbing/recording.

Clock setting is erased.

- There was a power failure.
- Reset the clock.

System displays features automatically; buttons flash continuously.

- Demonstration mode is switched on.
- Press and hold STOP (on the system only) for 5 seconds to switch off the demonstration.

A howling sound at external source.

- You hear feedback when you are listening and recording from the same source simultaneously.
- Press CDR/AUX to select CDRW mode.