



NT1140



© 2018 Koninklijke Philips N.V.
All rights reserved
保留所有权利
4222.002.8127.2 (13/2/2018)
> 75% 循环再造纸

 >75% recycled paper
>75% papier recyclé

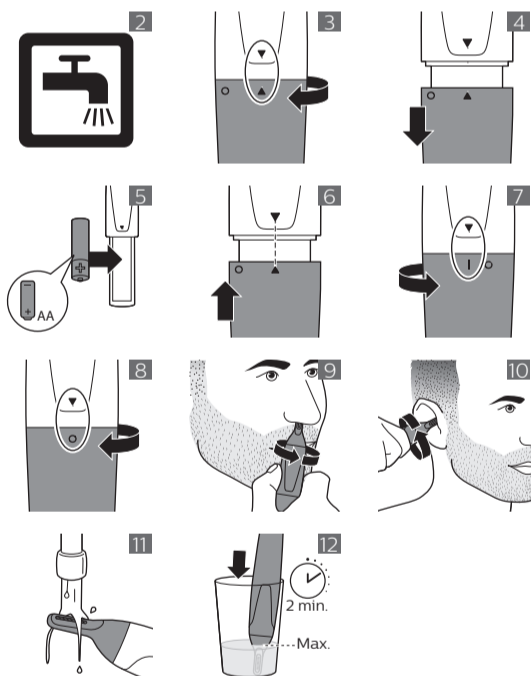

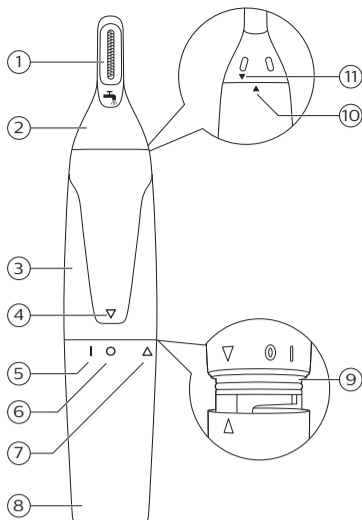

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Cutting element
- 2 Trimming head
- 3 Handle
- 4 Setting indicator
- 5 'On' indication
- 6 'Off' indication
- 7 'Open' indication
- 8 Battery compartment cover
- 9 Sealing ring
- 10 Locking indication
- 11 'Unlocked' indication

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Warning

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Caution

- Never immerse the appliance in water. Do not use the appliance in the bath or shower.
- Never use water hotter than 60°C to rinse the appliance.
- Only use this appliance for its intended purpose as shown in the user manual.
- Use and store the appliance at a temperature between 15°C and 35°C.
- For hygienic reasons, the appliance should only be used by one person.
- Do not expose the appliance to direct sunlight.
- Only operate the appliance on 1.5V AA alkaline batteries.
- Do not mix different types of batteries or new and used batteries.
- Do not recharge non-rechargeable batteries.
- Insert batteries with the + and - poles pointing in the right direction.
- Do not short-circuit the supply terminals of batteries.
- Remove batteries from the appliance if you are not going to use it for some time.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This appliance can be safely cleaned under the tap (Fig. 2).

Preparing for use

Placing the battery

- 1 To remove the battery compartment cover, turn it clockwise until the setting indicator points to the 'unlocked' indication (^) (Fig. 3).
- 2 Pull the battery compartment cover off the handle (Fig. 4).
- 3 Put the battery in the battery compartment (Fig. 5).
Make sure the + and - poles of the battery point in the right direction.

Note: The appliance operates on one R6 AA 1.5-volt battery. Preferably use Philips alkaline

batteries. A new AA alkaline battery has an operating time of up to 2 hours.

- Slide the battery compartment cover back onto the handle (Fig. 6).
- Turn the battery compartment cover anticlockwise until the setting indicator points to the 'locked' indication (0).

Using the appliance

You can use the appliance for the following purposes:

- Trim your nose hair with the trimming head.
- Trim your ear hair with the trimming head.

Switching the appliance on and off

- To switch on the appliance, turn the battery compartment cover to the 'on' indication (I) (Fig. 7).
- To switch off the appliance, turn the battery compartment cover to the 'off' indication (0) (Fig. 8).

Trimming nose hair

Make sure your nostrils are clean.

- Switch on the appliance.
- Carefully insert the trimming head into one of your nostrils.

Do not insert the trimming head more than 0.5 cm into your nostrils.

- Slowly move the trimming head around to remove all unwanted hairs in your nostrils (Fig. 9).
- Switch off the appliance.
- Clean the appliance after each use (see 'Cleaning').

Trimming ear hair

Make sure your outer ear channels are clean and free from wax.

- Switch on the appliance.
- Slowly move the trimming head along the rim of the ear to remove hairs that stick out beyond the rim.
- Carefully insert the trimming head into the outer ear channel.

Do not insert the trimming head more than 0.5 cm into your ear channel, as this could damage the eardrum.

- Slowly turn the trimming head around to remove all unwanted hairs from your outer ear channel (Fig. 10).
- Switch off the appliance.
- Clean the appliance after each use (see 'Cleaning').

Cleaning

Clean the appliance immediately after use and when hair or dirt has accumulated on the cutting elements.

Do not immerse the motor unit in water or any other liquid, or rinse it under the tap.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Do not tap on the cutting elements.

Do not use any sharp objects to clean the cutting elements.

- Make sure the appliance is switched off.
- Rinse the cutting element of the trimming head with hot water (Fig. 11).
- Switch on the appliance and rinse the cutting element once more to remove any remaining hairs. Then switch off the appliance again.

If rinsing the trimming head under the tap is not sufficient, immerse the cutting element in a glass with warm water for a few minutes (Fig. 12). Then switch on the appliance and rinse it under the tap.

- Let all parts dry completely before you use the appliance again.

Replacement

Replace damaged parts immediately. Always replace them with original Philips parts.

Ordering accessories

To buy accessories or spare parts, visit

www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains disposable batteries which shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical and electronic products and batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see chapter 'Preparing for use'.

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the

information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance pulls at the hairs.	You move the appliance too fast.	Slowly move the trimming head around to remove all unwanted hairs in your nostrils.
	Hairs or dirt obstruct the cutting element.	Clean the cutting element after each use.
	The disposable battery is empty.	Insert a new battery.
The appliance does not work.	The disposable battery is empty or has been inserted incorrectly.	Replace the battery or insert it correctly.
	The cutting element of the nose/ear/eyebrow trimming head is blocked, for instance because some nasal mucus has dried inside the cutting element.	Clean the cutting element thoroughly, immerse it in a bowl with warm water for a few minutes. Then switch on the appliance and rinse it under a hot tap (see 'Cleaning').

简体中文

介绍

感谢您的惠顾，欢迎光临飞利浦！为了让您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

基本说明 (图 1)

- 1 修剪部件
- 2 修剪刀头
- 3 手柄
- 4 设置指示灯
- 5 “开”指示
- 6 “关”指示
- 7 “打开”指示
- 8 电池仓盖
- 9 密封圈
- 10 锁定指示
- 11 “解锁”指示

重要安全信息

使用本产品及其附件之前，请仔细阅读本重要信息，并妥善保管以供日后参考。随附的附件可能因产品而异。

警告

- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无人监督的情况下对本产品进行清洁和保养。
- 使用前，请务必检查产品。请勿使用损坏的产品，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。

警告

- 切勿将产品浸入水中。请勿在洗澡或淋浴时使用本产品。
- 切勿使用温度高于 60°C 的热水冲洗本产品。
- 只能将本产品用于用户手册中所示的原定用途。
- 必须在 15 摄氏度至 35 摄氏度之间的温度下使用和存放本产品。
- 出于卫生的目的，本产品只能供一个人使用。
- 切勿将产品直接曝晒于阳光下。
- 仅使用 1.5 伏 AA 碱性电池运行本产品。
- 请勿混用不同类型的电池或新旧电池。
- 请不要给不可充电电池充电。
- 插入电池，确保 + 和 - 极方向正确。
- 请勿使电池的输入端短路。
- 如果在一段时期内不会使用本产品，请从产品中取出电池。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

概述

- 该产品可放心在水龙头下 (图 2) 清洗。
- 符号注释：适合用在打开的水龙头下进行清洗 (图 2)。

使用准备

安装电池

- 1 要卸下电池仓盖，请将其顺时针旋转，直至设置指示符号指向“开”指示 (^) (图 3)。
- 2 将电池仓盖抽离手柄 (图 4)。
- 3 将电池放入电池仓 (图 5) 中。确保电池的 + 和 - 极方向正确。

注意：本产品使用一节 R6 AA 1.5 伏电池。最好使用飞利浦碱性电池。一节新的 AA 碱性电池最多可工作 2 个小时。

- 4 将电池仓盖滑回手柄 (图 6)。
- 5 逆时针旋转电池盒盖，直至设置指示符号指向“关”指示 (0)。

使用本产品

您可将本产品用于以下目的：

- 使用修剪刀头修剪您的鼻毛。
- 使用修剪刀头修剪您的耳毛。

打开或关闭产品

- 要打开本产品，请将电池仓盖转至“开”指示 (I) (图 7)。
- 要关闭本产品，请将电池仓盖转至“关”指示 (O) (图 8)。

修剪鼻毛

确保鼻腔是清洁的。

- 1 启动产品。
- 2 将修剪刀头小心地插入一个鼻孔。

修剪刀头插入鼻孔的深度不得超过 0.5 厘米。

- 3 在四周缓慢地移动修剪刀头，以剃掉鼻孔 (图 9) 中所有多余的毛发。
- 4 关闭产品。
- 5 每次使用 (请参见 '清洁') 后都要清洁产品。

修剪耳毛

确保耳朵外耳道清洁，没有耳垢。

- 1 启动产品。
- 2 缓缓地沿着耳缘移动修剪刀头，以剃掉凸出耳缘的毛发。
- 3 将修剪刀头小心地插入外耳道。

修剪刀头插入耳道的深度不能超过 0.5 厘米，否则可能损伤鼓膜。

- 4 缓缓地转动修剪刀头，以剃掉外耳道 (图 10) 中所有多余的毛发。
- 5 关闭产品。
- 6 每次使用 (请参见 '清洁') 后都要清洁产品。

清洁

使用之后，以及在修剪部件上积聚毛发或污垢的时候，请立即清洁本产品。

不要将马达组件浸入水中或任何其他液体中，也不要来自来水龙头下冲洗。

切勿使用钢丝球、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁本产品。

切勿触碰修剪部件。

不可使用任何尖利的物体来清洁修剪部件。

- 1 确保产品电源已关闭。
- 2 用热水 (图 11) 冲洗修剪刀头的修剪部件。
- 3 打开产品，再次冲洗修剪部件，以清除任何剩余的毛发。然后再次关闭产品。

如果在水龙头下冲洗修剪刀头无法充分清洁，请将其浸入盛有温水的玻璃杯中几分钟 (图 12)。然后启动产品，并在水龙头下冲洗。

- 4 再次使用产品之前，让所有部分完全干燥。

更换

立即更换损坏的部件。更换时，切记使用原装飞利浦部件。

订购配件

要购买附件或备件，请访问

www.shop.philips.com/service 或联系您的飞利浦经销商。您还可以联系所在国家/地区的飞利浦客户服务中心（请参阅全球保修卡了解详细联系信息）。

回收

- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。
- 此产品包含一次性电池：请勿将充电电池与一般生活垃圾一起弃置。
- 遵循您所在国家/地区有关分类回收电子电气产品和电池的规定。正确弃置产品有助于避免对环境 and 人类健康造成不良后果。

卸下一次性电池

如要卸下一次性电池，请参阅“使用准备”一章。

部件名称	产品中有害物质的名称及含量					
	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Internal metal parts 内部金属件	X	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。
O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

保修和支持

如需信息或支持，请访问 www.philips.com/support 或阅读国际保修卡。

保修条款

修剪部件不在国际保修条款的涵盖范围之内，因为修剪部件属于易磨损物品。


故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问

www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
产品拉拔毛发。	产品移动过快。	在四周缓慢地移动修剪刀头，以剃掉鼻孔中所有多余的毛发。
	毛发或污垢堵塞了修剪部件。	每次使用后都要清洁修剪部件。
	一次性电池的电量已耗尽。	插入新电池。
产品不能工作。	一次性电池的电量已耗尽或安装不正确。	更换电池或正确安装。
	鼻毛/耳毛/眉毛修剪刀头的修剪部件被阻塞，例如因为修剪部件内部沾有一些干鼻涕。	彻底清洁修剪部件，请将其浸入盛有温水的碗中几分钟。然后启动产品，并在热水龙头 (请参见 '清洁') 下冲洗。

PHILIPS

产品：飞利浦多功能（鼻耳眉）毛发修剪器
型号：NT1140
额定电压：1.5 V 
额定输入功率：1 W
生产日期：请见产品本体
产地：中国广东广州

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.9-2008制造

保留备用

发行日期: 27/04/2017