

Portable DVD player

PET737

Register your product and get support at
www.philips.com/welcome

User manual

Εγχειρίδιο χρήσεως

Руководство пользователя

Návod na používanie

Felhasználói kézikönyv



PHILIPS

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkopleet. Den innebygde netdelen er derfor ikke frakopleet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

SLOVAK REPUBLIC

Prístroj sa nesmie používať v mokrom a vlhkom prostredí! Chráňte pred striekajúcou a kvapkajúcou vodou!

MAGYARORSZÁG

MinŐségtanúsítás

A garanciajegyen feltűntetett forgalombahozó vállalat a 2/1984. (III.10.) BkM-IpM egyűttes rendelet értelmében tanúsítja, hogy ezen készülék megfelel a mŐszaki adatokban megadott értékeknek.

Figyelem! A meghibásodott készüléket – beleértve a hálózati csatlakozót is – csak szakember (szerviz) javíthatja. Ne tegye ki a készüléket esŐnek vagy nedvesség hatásának!

Garancia

A forgalombahozó vállalat a termékre 12 hónap garanciát vállal.

Névleges feszűltség100-240 V

Elemes mŐködéshezCR2025 x 1

Névleges frekvencia50/60 Hz

Teljesítmény

névleges9 W

Őrintésvédelmi osztály II.

Tömeg.....0.82 kg

Befoglaló méretek

szélesség120 mm

magasság158 mm

méllység39.5 mm

English- 4

Ἑλληνικά 22

Русский 40

Slovensky 58

Magyar- 75

English

Ἑλληνικά

Русский

Slovensky

Magyar

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Main unit controls (see figure 1)

- ① **DVD/TV**Switch between DVD and TV modes.
- ② **MENU**.....Display the MENU page.
- ③ **■**.....Stop playback
- ④ **◀◀ / ▶▶**.....Skip to the previous/next chapter, track or title.
- ⑤ **▲, ▼, ◀, ▶**Navigate in a menu.
(◀ / ▶) search backward/forward in a disc at different speeds.
(▲ / ▼) select a preset TV channel.
- ▶||**Start or interrupt playback.
Confirm a selection.
- ⑥ **OPEN**.....Open the disc door to insert or remove disc.

Left of player (see figure 2)

- ⑦ **DC 9V**Power supply socket.
- ⑧ **📻**.....Headphone jack.
- ⑨ **AV OUT**Audio/Video output jack.
- ⑩ **VOL +/-**Volume control.
- ⑪ **OFF** **ON**Switch the power on/off.

 
Right of player (see figure 3)

- ⑫ **TV ANTENNA (75Ω)** TV antenna socket.


Right of player (see figure 4)

- ⑬ **IR/CHR/PWR**Remote sensor/charge/power indicator.


1

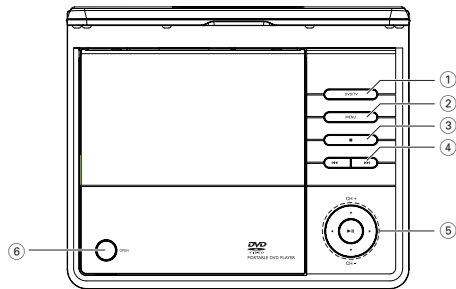


2

 

3

 

4

 


FUNCTIONAL OVERVIEW

Remote controls

- ① **DVD SETUP**(In DVD mode) Enter or exit the system menu.
- ② **▲, ▼, ◀, ▶**Navigate in a menu.
.....(◀ / ▶) search backward/forward in a disc at different speeds.
.....(▲ / ▼) select a preset TV channel.
.....Confirm a selection.
- OK**Confirm a selection.
- ③ **DISPLAY**Display information on TFT during playback.
- ④ **◀◀ / ▶▶**Skip to the previous/next chapter, track or title.
- ⑤ **ZOOM**Enlarge or reduce a picture or active image on the TFT.
- ⑥ **0-9**Numeric Keypad
- ⑦ **A-B**Repeat playback of a specific section on a disc.
- ⑧ **REPEAT**Repeat a chapter/track/title.
- ⑨ **ANGLE**Select DVD camera angle
- ⑩ **SUBTITLE**Select a subtitle language.
- ⑪ **AUDIO**Select an audio language when playing a DVD disc or select an audio mode (Stereo, Mono-Left or Mono-Right) when playing a VCD/CD disc.
- ⑫ **■**Stop playback
- ⑬ **▶▶**Start or interrupt playback.
- ⑭ **MENU**Enter or exit the disc contents menu.
.....(In TV mode) Enter or exit the TV menu.
- ⑮ **SOURCE**Switch between DVD and SD modes.

CAUTION

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

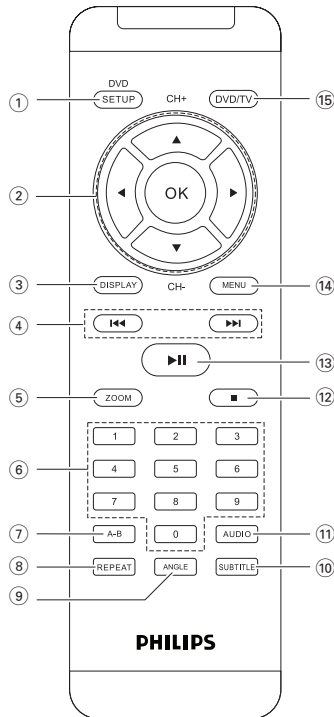

INTRODUCTION

Your portable DVD player

Your portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, and stereo or multichannel sound (depending on the disc and on your playback set-up).

The unique features of DVD-Video, such as selection of soundtrack and subtitle languages, and of different camera angles (again depending on the disc), are all included.

What's more, parental lock lets you decide which discs your children will be able to see. You will find your player remarkably easy to use with the On-Screen Display and player display in combination with the remote control.

Unpacking

First check and identify the contents of your package, as listed below:

- Portable DVD player
- Remote Control
- Car adaptor (12V)
- Audio / Video cable
- User Manual
- Warranty
- AC power adaptor, DSA-9W-09 F (DVE), AY4132 (PHILIPS) or AY4193 (PHILIPS)

Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- If the player cannot read CDs/DVDs correctly, try using a commonly available cleaning CD/DVD to clean the lens before taking the player to be repaired. Other cleaning methods may destroy the lens.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a CD/DVD. Leave the player in a warm environment until the moisture evaporates.

INTRODUCTION

About Built-in Rechargeable Battery

Precautions related to battery recharge

- 1 Once the battery is fully discharged, immediately recharge it (regardless of whether you plan to use the battery or not) in order to maximize the battery life. When the power is low, the battery icon will be shown on the upper-right corner of the TFT for warning.
- 2 To charge the battery, please directly connect this DVD player to AC mains and the charge indicator will turn on.

Using and maintaining your rechargeable batteries

- 1 Please make sure you always use only the AC adapter included with the player to recharge your batteries.
- 2 Recharge efficiency will degrade when the environmental temperature drops below 50 °F (10 °C) or exceed 95 °F (35 °C).
- 3 The lasting time of the fully charged battery when a headphone is connected to the DVD player is approximately 2 hours.

Playable disc formats

In addition to DVD-Video disc, you will also be able to play all Video CDs and audio CDs (including CD-R, CD-RW, DVD±R and DVD±RW).

DVD-Video

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Titles, and each Title may have one or more Chapters. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.



CD with JPEG files

You can also view JPEG still photos on this player.



Video CD

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Tracks, and tracks may have one or more indexes, as indicated on the disc case. To make access easy and convenient, your player lets you move between tracks and between indexes.

**Audio CD / MP3 CD**

Audio CDs / MP3-CD contain music tracks only. You can play them in the conventional way through a stereo system using the keys on the remote control and/or main unit, or via the TV using the On Screen Display (OSD).

**Power Sources**

This unit operates on a supplied AC adaptor and car adaptor.

- Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.
- Do not touch the AC adaptor with wet hands to prevent electric shock.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Unplug the AC adaptor from the outlet when the unit is not used for long periods of time.
- Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes. Any service should be done by qualified service personnel.
- Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.
- Important (for models with by-packed headphones): Schneider guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original provided by Philips.
- Traffic safety: do not use while driving or cycling as you may cause an accident
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof: do not allow your player to be submersed in water. Water entering the player may cause major damage.

GENERAL INFORMATION

- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles)
- Do not touch the lens!
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

Hearing Safety

Listen at a moderate volume:

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.



To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

GENERAL INFORMATION

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones:

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

GENERAL INFORMATION

Handling discs

- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.
- To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth.



On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET. Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

Copyright information

 
All other brand and product names are trademarks of their respective companies or organizations. Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties.

PREPARATIONS

Power supply

Using the AC / DC adaptor

Turn off the player before connecting the supplied adaptor to it and the main power supply (as shown). The player must be turned off when the battery charges.



TIP

- The plug is a disconnect device and shall remain readily operable.
- To avoid damage to the player, switch off before plugging or unplugging the AC adaptor.

Using the car adapter

Connect the supplied car adapter to the set and the car cigarette lighter outlet.



TIP

- To avoid damage to the player, switch off before plugging or unplugging the car adaptor.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Make sure the temperature is below 35°C when the DVD player is connected to DC 16.0V in a car.

Powering your remote control

- 1 Open the battery compartment. Remove the protective plastic tab (first time users only).
- 2 Insert 1 x lithium 3V battery, type CR2025, then close the compartment.



CAUTION


- Batteries contain chemical substances, so they should be disposed of properly.

 
PREPARATIONS

- *Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.*
- *Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.*
- *Remove the battery if the remote control is not to be used for a long time.*

Connections

Connecting headphones

Connect the headphones into the  jack of your set.




Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT

 Connect the desired device to this terminal directly (no setting needed in the DVD mode).

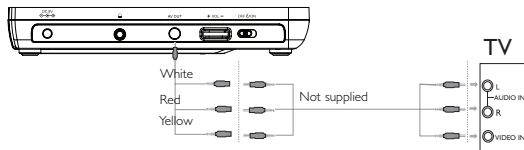

GENERAL EXPLANATION

About this manual

This manual gives the basic instructions for operating this DVD player. Some DVD discs however are produced in a way that requires specific operation or allows only limited operation during playback. In these cases the player may not respond to all operating commands. When this occurs, please refer to the instructions in the disc inlay. When a "⊘" appears on the screen, the operation is not permitted by the player or the disc.

Remote control operation

- Unless otherwise stated, all operations can be carried out with the remote control. Always point the remote control directly at the player, making sure there are no obstructions in the path of the infrared beam.
- When there are corresponding keys on the main unit, they can also be used.

Menu navigation

- Your player has an intuitive menu navigation system to guide you through various settings and operations.
- Use the function keys to activate / disable relevant operations.
- Use **▲**, **▼**, **◀**, **▶** to browse through menus.
- Press the **▶||** key to confirm your selection.

BASIC FUNCTIONS

Switching on for OSD language setup

English is the default language of your player's on screen display. You may choose to use English, French, Spanish or German for your player's on screen display.

Region	OSD Language Options
Asia Pacific	English, French, Spanish, German

- 1 Slide the **POWER** switch to **ON** to switch on the player.
- 2 Press **SETUP** for the setup menu.
- 3 Select **Language** and press **▼**.
- 4 Scroll and select **On Screen Display** and press **▶** to select from OSD language options.
- 5 Select your preferred language and press **OK**.



Loading discs and switching on

- 1 Press **OPEN** to open the disc door.
- 2 Insert your chosen disc, label side up (also when a double sided DVD disc is inserted). Make sure it is sitting properly in the correct recess.
- 3 Gently push to close the door.
- 4 Slide the **POWER** switch to **ON** to switch on the player.



TIP

A normal mechanical noise is heard during playback.

BASIC FUNCTIONS

Playing a DVD disc

After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded. The disc may invite you to select an item from a menu. Use the **▲**, **▼**, **◀**, **▶** keys to highlight your selection, and press **OK**.

Note: Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

Playing an audio or video CD disc

- After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded as well as information about the disc's contents.
- While playing VCD with MTV/Karaoke, press **number keys(0-9)** to select the track and press **▶II** to play the track. Press **MENU** to go back to menu of the selection.

BASIC FUNCTIONS

Playing an MP3 CD

The following playback features are available for MP3 CDs. Please refer to the corresponding sections for more information.

Volume control, skipping tracks, searching, repeat, shuffle, etc.

Use the ▲, ▼ keys to highlight your selected music folder. Press ►|| to play.

Playing a JPEG disc

Use the ▲, ▼ keys to highlight your selected picture.

Press ►||. The player will then automatically enter the slide show mode.

During playback, you can:

- Use ◀▶ to rotate the picture.
- Use ▲ to flip left/right.
- Use ▼ to flip up/down.
- Press **MENU** to go back to folder screen.
- Press ■ to go to group preview.
- Press **ZOOM** repeatedly to display the picture with different scales.
- Use ▲, ▼, ◀, ▶ to view the zoomed picture (for picture zoomed in only).

GENERAL FEATURES

Moving to another title / track / chapter

When a disc has more than one title or track, you can move to another title/track/chapter as follows:


- Press ►▶ briefly during play to select the next title/ track / chapter.
- Press ◀◀ briefly during play to step back to the previous title/track/chapter.
- To go directly to any title, track or chapter, enter the corresponding number using the numerical keys (0-9).



Search

During playback, press ▶ repeatedly for the following forward search options:
Press ◀ repeatedly for the following backward search options:

◀	▶
2 X backwards	2 X forward
4 X backwards	4 X forward
8 X backwards	8 X forward
16 X backwards	16 X forward
32 X backwards	32 X forward
normal speed	normal speed

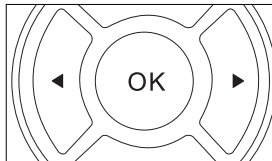 


Press ►|| to resume normal playback.

GENERAL FEATURES

Changing the audio output (for VCD)

Press **AUDIO** repeatedly for the following audio options.

x 1	Mono left	x 2	Mono right
x 3	Stereo		

 


TIP

This key is used to select audio languages during DVD playback.

ZOOM

The Zoom function allows you to enlarge the video image and to pan through the enlarged image. Press **ZOOM** repeatedly to select the following zooming options.

Zoom x 1	2X	Zoom x 2	4X
Zoom x 3	normal		

 

TIP

During JPEG operation, the sequence is 100%, 125%, 150%, 200%, 50%, 75% and normal.

REPEAT

Press **REPEAT** repeatedly for the following repeat options:

	DVD actions	MP3 actions	CD actions
x 1	repeats chapter	repeats one	repeats track
x 2	repeats title	repeats folder	repeats all
x 3	repeats all	cancel repeat	cancel repeat
x 4	cancel repeat		

GENERAL FEATURES



TIP

The repeat function is also available for JPEG. The actions may vary for different media being played.

Repeat A - B

 
To repeat or loop a sequence in a title:

- Press **A - B** at your chosen starting point;
 - ☞ **A** appears on the screen.
- Press **A - B** again at your chosen end point;
 - ☞ **AB** appears on the display, and the repeat sequence begins.
- To exit the sequence, press **A - B**.



Volume Control

- Use the rotary switch on the left side of the unit to increase or decrease playback volume.



GENERAL FEATURES

DISPLAY

Press **DISPLAY** on the remote repeatedly for the following display options:

	DVD	CD/VCD
x 1	Title elapsed	Single elapsed
x 2	Title remained	Single remained
x 3	Chapter elapsed	Total elapsed
x 4	Chapter remained	Total remained
x 5	Display off	Display off

SPECIAL DVD FEATURES

Checking the contents of DVD-Video discs: **MENU**.

For titles and chapters, selection menus may be included on the disc. The DVD's menu feature allows you to make selections from these menus. Press the appropriate numerical key; or use the ▲, ▼, ◀, ▶ keys to highlight your selection, and press **OK**.

Disc menu

Press **MENU**. The menu may list, for example, camera angles, spoken language and subtitle options, and chapters for the title.



Changing the language

Press **AUDIO**. If the current disc has different language options, this now appears on the screen.

Press **AUDIO** repeatedly until you have reached your desired language option.



Subtitle

Press **SUBTITLE**. If the current disc has different subtitles options, this now appears on the screen.

Press **SUBTITLE** repeatedly until you have reached your desired subtitles option.

 


TIP

The above two features depend on whether your disc contains any language or subtitle options.

Playing a title

- 1 Press **MENU** to enter the disc title menu.
- 2 Use **◀, ▶, ▲, ▼** or **numeric keys (0-9)** to select a play option.
- 3 Press **OK** to confirm.

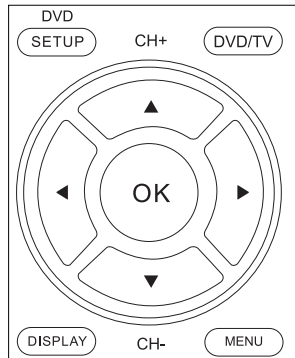

To maximize your playback experience, use **SETUP** to fine tune your settings. Use the **▲, ▼, ◀, ▶** keys to highlight your selection, and press **OK**.

- 1 Press **DVD SETUP**. A list of features is shown.
- 2 Use the **▲, ▼** keys to highlight your selection.

When the cursor highlights these settings, press **OK** to:

Language	select language options
Screen	select screen options
Photo	select photo options
Custom	select custom options
Exit	exit the system menu

- 3 Press **◀** to abort current settings or go back to previous menu level.
- 4 Press **DVD SETUP** to exit.

Language

When the cursor highlights these settings, press **OK** to:

On Screen Display	select on-screen display language
Menu	select disc menu language options
Audio	select disc audio language options
Subtitle	select disc subtitle language options

Press **◀** to abort current settings or go back to previous menu level.

Screen

When the cursor highlights these settings, press **OK** to:

SETUP OPERATIONS

Display Type	select display ratio
Brightness	select brightness level
Contrast	select contrast level
Press ◀	to abort current settings or go back to previous menu level

Photo

When the cursor highlights these settings, press **OK** to:

Slide Show Frequency	set the time between two photos
Slide Show Effect	select 17 slide show modes
Display Format	switch between Normal and Widescreen
Photo Display	switch between Slide Show and Browse

Press ◀ to abort current settings or go back to previous menu level

Custom

When the cursor highlights these settings, press **OK** to:

Parental Control	select parental options
DivX® VOD	get DivX ID for VOD
Password	change existing password (3308 by default)
Angle Mark	select angle mark display options
Default	restore factory settings

Press ◀ to abort current settings or go back to previous menu level.

 
Notes: Parental options are only selectable when password mode is deactivated. Before using the ▲, ▼ keys to select your desired angle mark, ensure the disc has been recorded with angle mark and you have enabled the angle mark option in the system menu.

ANALOG TV

Before installation, please make sure that you are in an area with sufficient TV signal coverage. As the TV signal is weaker in an indoor environment, please always connect to a TV wall socket for the best reception quality when using it at home or indoor.

Antenna connection

Before you start to search for TV channels, connect the DVD player to the antenna as shown.

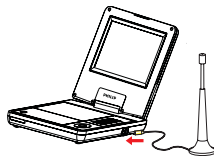

- For best reception, please connect PET737 to the home antenna.
- Auxiliary antenna is used when there is excellent signal coverage. There is magnet at the bottom of the auxiliary antenna. Fix it onto a metallic surface.

Setup your TV

- 1 In TV mode, press **MENU**.
→ The TV menu is displayed.

TV MENU	
TV SYSTEM	PAL I
AUTO SEARCH	
SEARCH	
FINE TUNE	
CHANNEL NO	001
SKIP	OFF
STORE	OK

- 2 Press ◀, ▶ to switch to **PAL I**.

Auto search

TV MENU	
TV SYSTEM	PAL I
AUTO SEARCH	
SEARCH	
FINE TUNE	
CHANNEL NO	001
SKIP	OFF
STORE	OK

- 1 In the TV menu, when **AUTO SEARCH** is highlighted, press **OK** on the remote (▶|| on the set).

→ "AUTO SEARCH" is displayed.

AUTO SEARCH	001
	VHFL
<input type="checkbox"/>	<input type="checkbox"/>
PRESS MENU TO EXIT	

→ All available TV channels will be auto searched and stored.

- 2 To stop searching, press **MENU**.

Fine Tune

TV MENU	
TV SYSTEM	PAL I
AUTO SEARCH	
SEARCH	
FINE TUNE	
CHANNEL NO	001
SKIP	OFF
STORE	OK

- 1 In the TV menu, select **FINE TUNE**.
- 2 Press ◀, ▶ repeatedly to fine tune the TV picture until a clear picture is reached.

FINE TUNE	VHFL
<input type="checkbox"/>	<input type="checkbox"/>
PRESS MENU TO EXIT	

→ The detailed changes of the TV picture can be found.

ANALOG TV

Skip

By using this feature, you can skip some TV channels (The TV channel cannot be watched), or skipped TV channel number can be restored for being selectable.

TV MENU	
TV SYSTEM	PAL I
AUTO SEARCH	
SEARCH	
FINE TUNE	
CHANNEL NO	001
SKIP	OFF
STORE	OK

- 1 In the TV menu, select **SKIP**.
- 2 Press **◀▶** repeatedly to select **ON**.
 - "Skip" function is turned on.
 - "Skip" function will be turned off if "OFF" is selected.

To restore "skip" to be selectable

- 1 In the TV mode, use **Numeric Keypad (0-9)** on the remote control to input the skipped channel number you want to restore.
- 2 In the TV menu, select **SKIP**,
- 3 Press **◀▶** once or more until **OFF** is displayed.
 - "Skip" function is turned off, and the skipped TV channel is restored to be selectable.

Searching and storing a TV channel in a preset number

TV MENU	
TV SYSTEM	PAL I
AUTO SEARCH	
SEARCH	
FINE TUNE	
CHANNEL NO	001
SKIP	OFF
STORE	OK

- In the TV menu, select **AUTO SEARCH**, and then press **OK** on the remote (**▶II** on the set).


SEARCH	VHFL
<input type="text"/>	
PRESS MENU TO EXIT	

- Search will be stopped when a TV channel is tuned in.
- TV menu appears.

You can repeat the above operation until you find your desired TV channel.


To store a preset channel number

 - 1 In the TV menu, when **CHANNEL NO** is highlighted, use ◀▶ to preset a channel number.

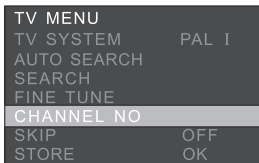

- 2 To store the channel number, select **STORE**, then press **OK** on the remote (▶|| on the set) to confirm.

 → "OK" appears, and the preset number is stored.

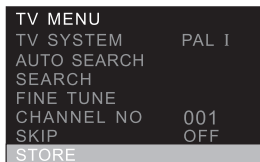

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked.

WARNING

Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee.

If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre.

Symptom**Remedy****No power**

- Check if both plugs of the mains cord are properly connected.
- Check if there is power at the AC outlet by plugging in another appliance.
- Check if the built-in battery is drained.
- Check if car adaptor is connected appropriately.

Distorted picture

- Check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge.
- Sometimes a small amount of picture distortion may appear. This is not a malfunction.

Completely distorted picture / no colour in the TV screen

- The PAL setting may be in the wrong status. Match your TV's setting with the player's setting.

No sound

- Check audio connections. If using a HiFi amplifier, try another sound source.

TROUBLESHOOTING

Symptom	Remedy
Disc can't be played	<ul style="list-style-type: none"> – Ensure the disc label is upwards. – Clean the disc. – Check if the disc is defective by trying another disc.
The player does not respond to the remote control	<ul style="list-style-type: none"> – Aim the remote control directly at the sensor on the front of the player. Avoid all obstacles that may interfere with the signal path. Inspect or replace the batteries.
Distorted or B/W picture with DVD	<ul style="list-style-type: none"> – Use only discs formatted according to the TV-set used (PAL).
Player does not respond to all operating commands during playback	<ul style="list-style-type: none"> – Operations are not permitted by the disc. – Refer to the instructions in the disc inlay.
Player feels warm	<ul style="list-style-type: none"> – When the player is in use for a long period of time, the surface will be heated. This is normal.
Display goes dimmer when AC is unplugged	<ul style="list-style-type: none"> – The unit is saving power to ensure longer playtime with battery. It is normal. Adjust the brightness using the rotary brightness control.

This set complies with the radio interference requirements of the European Union.

TECHNICAL DATA

Dimensions	210 x 158 x 39.5 mm
Weight	0.82 kg
Power supply	INPUT: 100-240V 50/60Hz 0.3A OUTPUT: DC 9V 1A
Power Consumption	9W
Operating temperature range	0 - 45°C
Laser wavelength	650nm
Video system	PAL
Frequency response	20Hz ~ 20KHz ± 1dB
Signal/noise ratio	≥ 80dB
Audio distortion + noise	≤ -80(1KHz)
Channel separation	≥ 80dB
Dynamic range	≥ 80dB
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance:	10KΩ
Video out Output level:	1Vp - p ± 20%
Load impedance:	75Ω

PHILIPS reserves the right to make design and specification changes for product improvement without prior notice.

Modifications not authorized by the manufacturer may void users authority to operate this device.

All rights reserved.

DISPOSAL OF YOUR OLD PRODUCT

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

 


When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Meet Philips at the Internet
<http://www.philips.com>



PET737



Printed in China

PDCC-XP-0841