


# Quick start guide


## 1 Charge

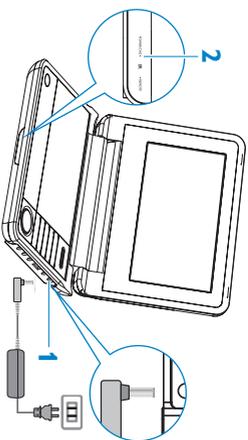


- 1 Connect the supplied adapter to the set and the AC outlet.
- 2 **RED** light turns on.
- 3 The **RED** light comes on.
- 4 The battery pack will be fully charged in approximately 4 hours. When the **RED** light goes out, it means that the battery pack is fully charged.

**TIP** Your battery will continue to charge while the player is in use. However, the **RED** light will not be lit and it will take approximately 8 hours to fully charge the battery pack.

## 2 Enjoy

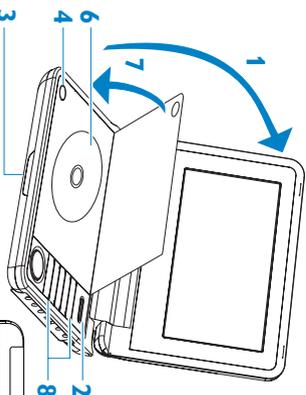


- 1 Open the lid.
- 2 Switch **ON** the set.
- 3 The **GREEN** light turns on.
- 4 Open the DVD door by pressing the **OPEN**.
- 5 Remove protective card (if any).
- 6 Load the DVD disc.
- 7 Close the DVD door and the set will automatically start to playback.
- 8 Use control keys on the set or remote control.

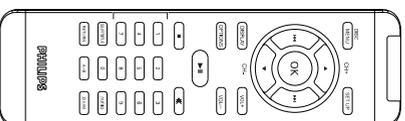

▲ **OPEN HERE**

## 3 Analog TV

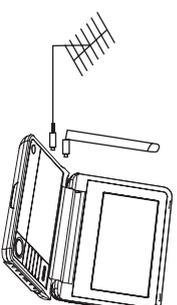

### Antenna connection

Before you start to search for TV channels, connect the DVD player to the antenna as shown.

### Setup you TV

- 1 Press **OPTIONS** and select **SOURCES > TV**.
- 2 In TV mode, press **SETUP**, the TV Setup menu will be displayed to show the following available functions:

tv setup menu	setup exit
tv mode	china
auto search	russsia
ch. manage	usa
fine tuning	hongkong
	india
setup exit	setup exit

- 3 Use **▲** / **▼** key to select **AUTO SEARCH**, then press **OK**. The system will remind you to select area first.
- 4 Use **▲** / **▼** key to select your country.

When area is set, the system will start auto search.

After search is completed, the first channel found will be displayed.

### Enjoy TV

Press **CH-/CH+** to change channels.