

PET741_37 Firmware Upgrade

We have developed a firmware upgrade to improve your product.

Related models: PET741/37

Benefits of this upgrade:

1. **Improve Upgrade UI.**
2. **Improve Playability.**


Note: Before you proceed to upgrade, please be reminded that you need to do configuration again each time after firmware upgrade!

How do I check the current firmware version?

Step1: Check your current version

First check your current firmware version to see if you need to upgrade:

1. Turn on the set without disc or other device.
2. Press “Setup” key on device entre into “Version” Menu
3. Navigate to “Version” then Press <Enter> key on device.
4. The firmware version and detailed configurations will be displayed on the screen.
5. If your existing firmware version is earlier than this version in the table below (configurations VS software version Tables), please proceed to **Step 2**, Otherwise, you do not need to upgrade.

Setup Menu – Version		PHILIPS
Model	PET741/37	
Version	20100101	
Ver	PET741A_37_V2.76	
 Browse OK Select SETUP Exit		

Configuration code



Configuration VS Software version Tables.

Configuration details	SW version
PET741A	V2.76
PET741B	V3.37
PET741C	V4.03
PET741D	V5.05
PET741F	V7.02
PET741G	V8.02
PET741H	V9.04
PET741I	V10.04

How do I upgrade the firmware?

Step2: Download firmware upgrade

Click the link to download the new firmware package on your computer. The package is compressed into a single ZIP archive.

 
Step3: Transferring firmware on to CD-ROM

1. **Extract** the firmware upgrade files from the ZIP archive:
2. Rewrite the extracted files in CD.

Note: ZIP file will not be readable on the set


Step4: Upgrading the firmware of your DVD player

1. Power up the Portable DVD and insert the CD.
2. The Portable DVD will search for the upgrade files. Once the files have been recognized the player will show a confirmation screen requesting to start the upgrade:

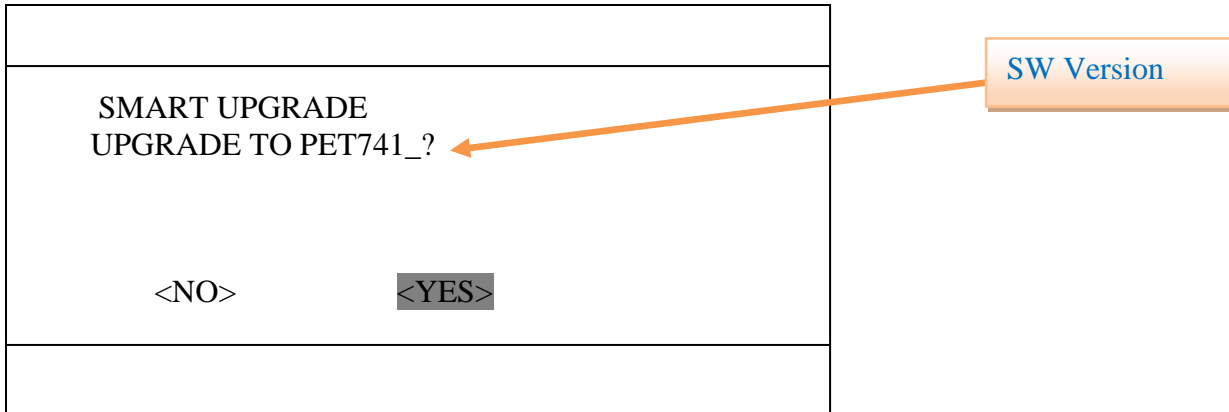

3. Press **<ENTER>** Key on device and start to upgrade.

 Note: Do not press any buttons or interrupt the mains supply during the upgrading process, otherwise the player may become defective.
4. During the upgrading process, the screen will display the message:

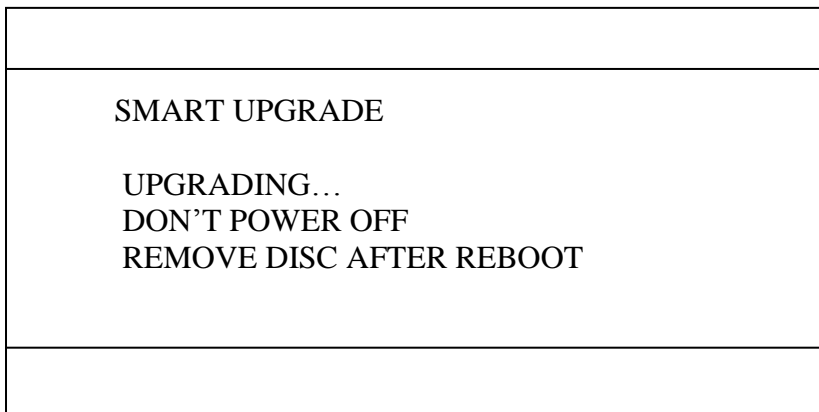

Note: During upgrading the set, do not power off

5. When the upgrading is completed, the Portable DVD will automatically restart.

Step5: Confirm successful upgrade

1. After the set automatically restart, Press **<SETUP>** on the unit, navigate to “General” → “Factory settings” → “Restore” and press **<OK>** on the unit.

After then repeat **Step 1** to verify if the new firmware is correctly upgraded.
2. If you do not see the latest firmware is being upgraded, **repeat Step4** and **Step5**

Firmware Upgrade History

V2.76

1. Improve Upgrade UI.

2.Improve Playability.

V3.37

1. Improve Upgrade UI.

2. Improve Playability.

V4.03

1. Improve Upgrade UI.

2. Improve Playability.

V5.05

1. Improve Upgrade UI.

2. Improve Playability.

V7.02

1. Improve Upgrade UI.

2. Improve Playability.

V8.02

1. Improve Upgrade UI.

2. Improve Playability.

V9.04

1. Improve Upgrade UI.

2. Improve Playability.

V10.04

1. Improve Upgrade UI.

2. Improve Playability.