

Register your product and get support at
www.philips.com/welcome

PET745



EN	User manual	3	FR	Mode d'emploi	83
DA	Brugervejledning	23	IT	Manuale utente	105
DE	Benutzerhandbuch	43	NL	Gebruiksaanwijzing	125
ES	Manual del usuario	63	SV	Användarhandbok	145

PHILIPS

Contents

1	Important	4
	Important safety instructions	4
	Notice	6

2	Your portable DVD player	7
	Introduction	7
	What's in the box	8
	Overview of the main unit	8
	Overview of remote control	11

3	Get started	13
	Charge the battery	13
	Install remote control battery	14
	Connect additional equipment	14

4	Play	15
	Turn on	15
	Select OSD language	15
	Play discs	15
	Play options	16

5	Watch TV	16
	First time settings	16
	Manual search	17
	Set time	17
	View program information	18
	Use the electronic program guide	19
	Rearrange the channel list	19
	Manage channels	19

6	Adjust settings	20
----------	------------------------	----

7	Product information	21
----------	----------------------------	----

8	Troubleshooting	21
----------	------------------------	----

1 Important

Important safety instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Apparatus shall not be exposed to dripping or splashing.
- ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑯ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.





Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

This product complies with the radio interference requirements of the European Community.



This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Always bring your product to a professional to remove the built-in battery.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.



This apparatus includes this label:



Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up).

You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can restrict the play of discs that are not suitable for children.

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):



 
DVD-Video



Video CD



Audio CD



MP3 CD



DivX


Discs with JPEG files

What's in the box


Check and identify the contents of your package:

- Portable DVD player
- Remote control
- AC power adaptor
- Car adaptor
- AV cable
- Antenna
- User manual
- Quick Start Guide


Overview of the main unit

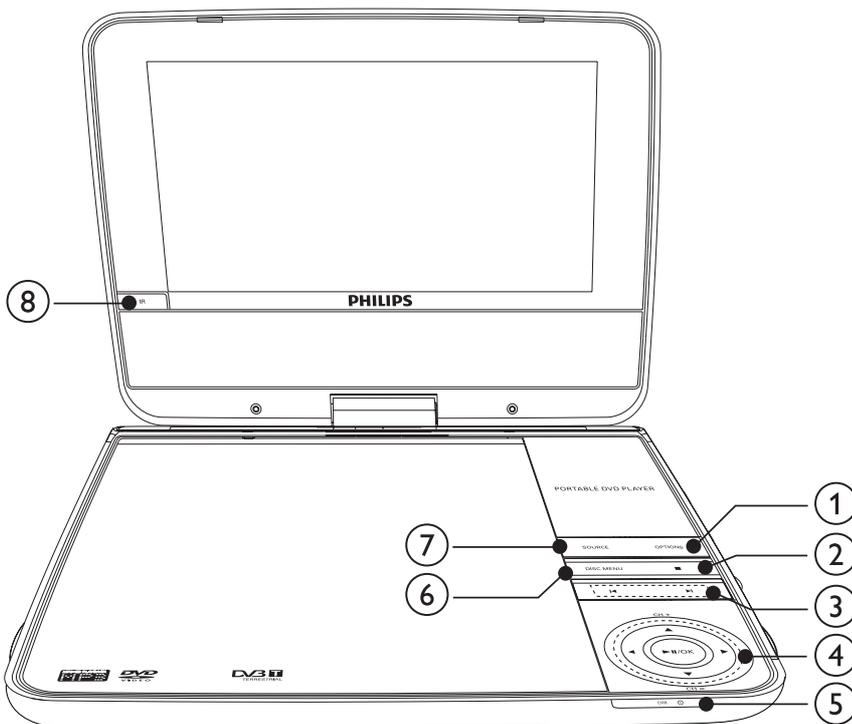

- ① **OPTIONS**
 - Accesses options relating to the current activity or selection.
- ② **■**
 - Stops disc play.
- ③ **◀/▶**
 - Skips to the previous or next title, chapter, or track.
- ④ **▲, ▼, ◀, ▶**
 - Navigates through the menus.
- ▲, ▼**
 - Switches to the next or previous channel.
- ◀, ▶**
 - Searches backward/forward at different speeds.
- ▶||/OK**
 - Confirms an entry or selection.
 - Starts, pauses or resumes disc play.
- ⑤ **CHR/Ⓛ**
 - Charging indicator/Power indicator.
- ⑥ **DISC MENU**
 - For DVD, accesses or exits disc menu.
 - For VCD, turns on or off PBC (Playback Control) mode.
 - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.
- ⑦ **SOURCE**
 - Switches between DVD and DTTV.
- ⑧ **IR**
 - Remote control sensor

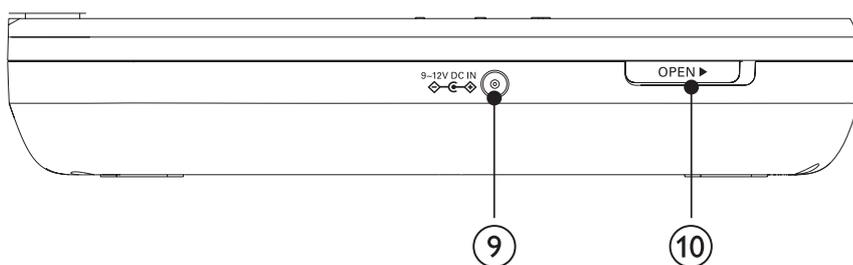


- ⑨ **DC IN**
 - Power supply socket
- ⑩ **OPEN▶**
 - Opens the disc compartment.

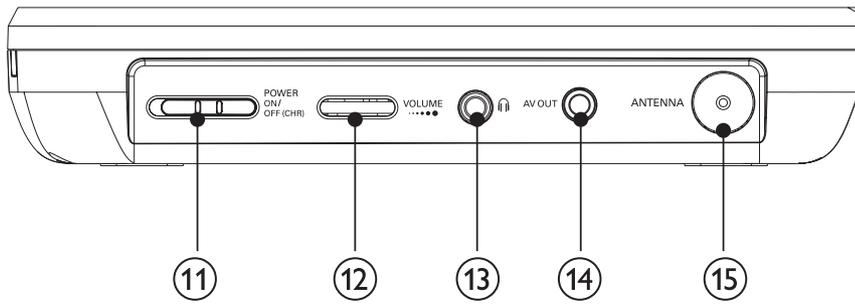

- ① **POWER ON/OFF**
 - Turns on/off DVD player.
- ② **VOLUME.....**
 - Increases or decreases volume.
- ③ 
 - Headphone jack.
- ④ **AV OUT**
 - Audio/video output jack.
- ⑤ **ANTENNA**
 - Antenna jack

Overview of remote control

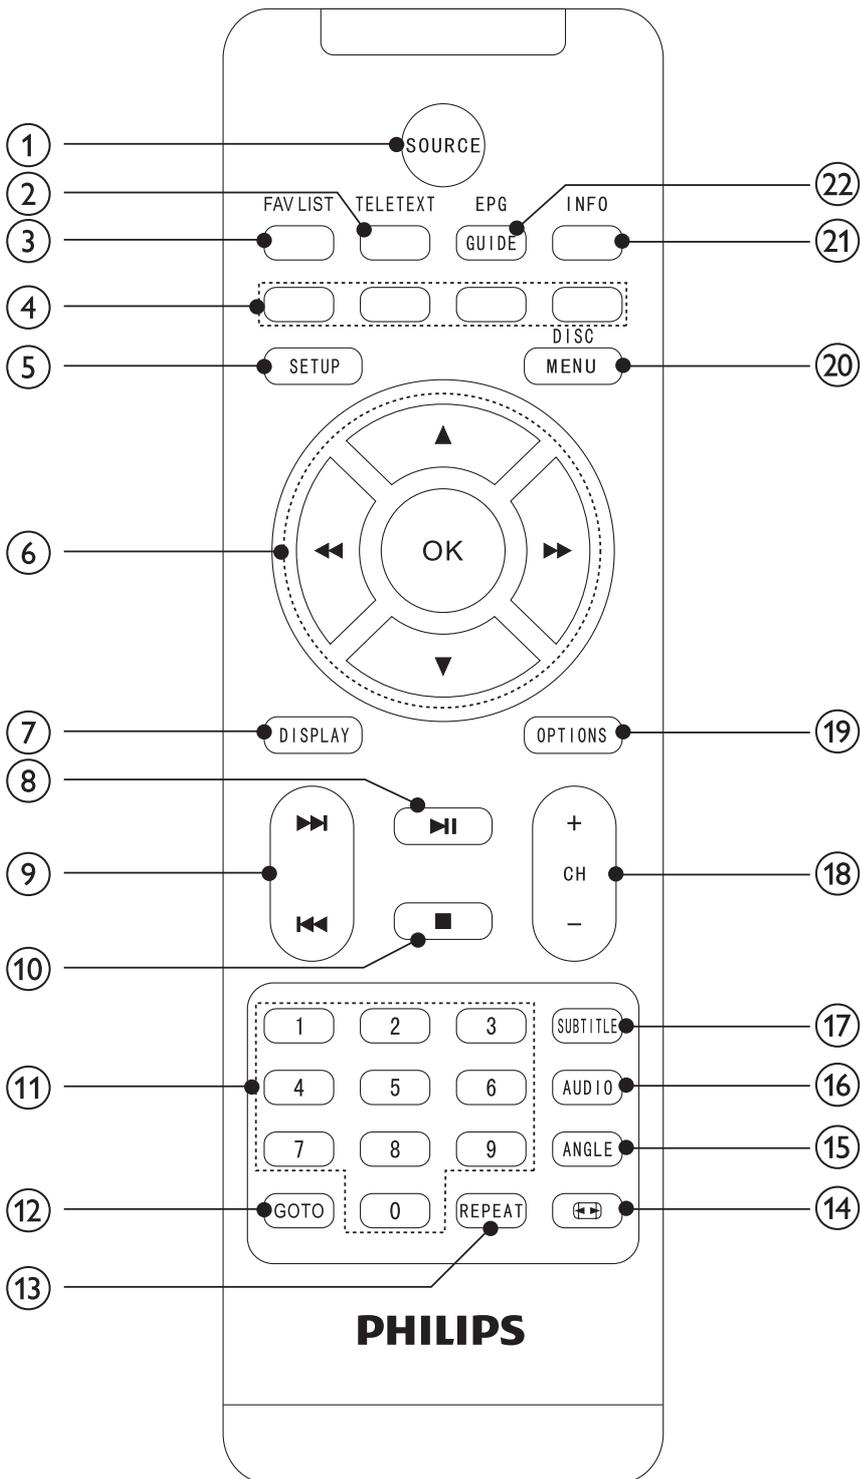

- ① **SOURCE**
 - Switches between DVD and DTTV.
- ② **TELETEXT**
 - Toggles teletext on or off.
- ③ **FAV LIST**
 - Accesses or exits the favorite list.
- ④ **Color keys**
 - Selects tasks or options.

- ⑤ **SETUP**
 - Accesses or exits the setup menu.
- ⑥ **▲, ▼, ◀◀, ▶▶**
 - Navigates through the menus.
- ◀◀, ▶▶**
 - Searches backward/forward at different speeds.
- OK**
 - Confirms an entry or selection.
 - Accesses or exits the channel list.
- ⑦ **DISPLAY**
 - Adjusts the display value of the system.
- ⑧ **▶ ||**
 - Starts or resumes disc play.
- ⑨ **|◀◀, ▶▶|**
 - Skips to the previous or next title, chapter, or track.
- ⑩ **■**
 - Stops disc play.
- ⑪ **0-9**
 - Numeric keypad
- ⑫ **GO TO**
 - Skip to a chapter/track/title or a play time
- ⑬ **REPEAT**
 - Repeats a chapter/track/title.
- ⑭ **◻◻**
 - Adjusts screen aspect ratio.
- ⑮ **ANGLE**
 - Selects a different viewing angle of a DVD.
- ⑯ **AUDIO**
 - For DVD, selects an audio language.
 - For VCD, selects an audio mode.
- ⑰ **SUBTITLE**
 - Selects DVD subtitle language.
- ⑱ **CH +/-**
 - Switches to the next or previous channel.
- ⑲ **OPTIONS**
 - Accesses options relating to the current activity or selection.
- ⑳ **DISC MENU**
 - Accesses or exits the disc menu.
- ㉑ **INFO**
 - Displays program information, if available.

22 EPG

- Toggles the Electronic Program Guide (EPG) on or off. Enabled on digital channels only.

3 Get started



Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. _____

Serial No. _____

Charge the battery



Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



Note

- The type plate is located on the bottom of the player.
- You can only charge the player when it is in power-off mode.

- 1 Slide the **POWER ON/OFF** switch to **OFF** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

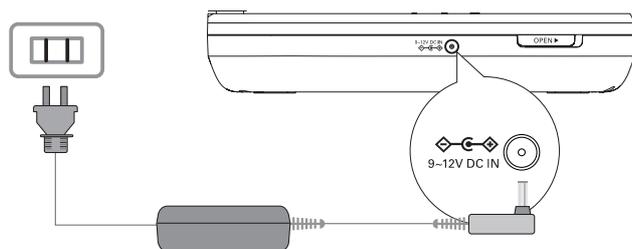

- ↳ The charge indicator turns on. It takes about 7 hours to fully charge the battery.
- ↳ When the battery is fully charged, the charge indicator turns off.

Install remote control battery



Caution


- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

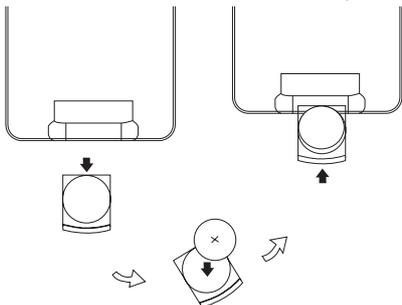


Connect additional equipment

Connect a TV


You can connect the player to a TV to enjoy DVD.

- Match the color of the AV cables (not supplied) with the jacks: the yellow cable is for the yellow video jack, the red/white cable is for the red/white audio jacks.

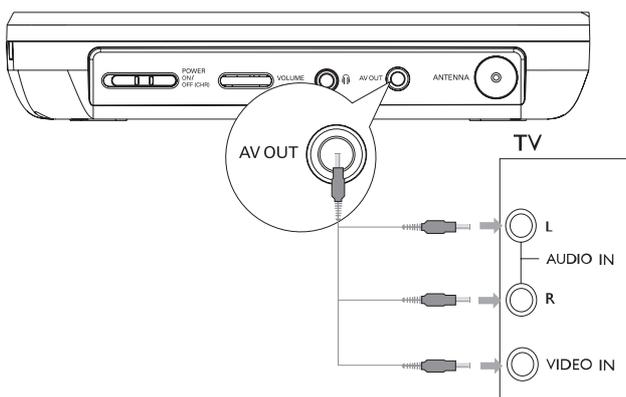

Connect TV antenna

You can connect your player to the antenna to receive digital TV program.

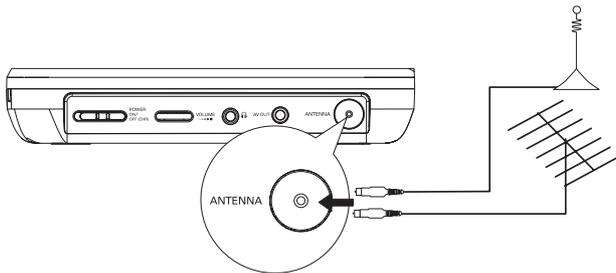

Tip

- For better reception, connect the player to home antenna.

4 Play

Turn on

Slide the **POWER ON/OFF** switch to the **ON** position.

↳ The ① indicator turns on.

Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **SETUP**.
↳ The setup menu appears.
- 2 Select **[General] > [Language]**.
- 3 Press **▶▶** to select an option.
- 4 Press **OK** to confirm.
- 5 Press **SETUP** to exit.

Play discs

- 1 Slide **OPEN▶** on the main unit.
- 2 Insert the disc with label side facing up.
- 3 Push down to close the CD compartment.
↳ Play starts automatically.
 - If a menu appears, select an item, then press **▶||** to start play.
 - To pause, press **▶||**. Press again to start play.
 - To stop, press **■**.
 - To select the previous/next item, press **◀◀** or **▶▶**.
 - To start search within video/audio, press and hold **◀◀** or **▶▶**. Briefly press **◀◀** or **▶▶** during search to adjust search speed.

Play options

1 During play, press **OPTION** to select some play options.

For DVD

- [Subtitles]
- [Audio language]
- [Angle]
- [Zoom & Pan]
- [Setup]

For VCD

- [Audio]
- [Zoom & Pan]
- [Setup]

For audio CDs

- [Repeat]
- [Shuffle All]
- [Setup]

For JPEG CDs

- [Rotate]
- [Zoom & Pan]
- [Setup]

2 Follow the on-screen instructions.

5 Watch TV

Note

- Before you start, ensure that you have connected the antenna to the player.
- Make sure you are in an area with sufficient DTTV signal coverage. You can check the signal coverage with the TV broadcast authority of your country or visit www.philips.com/support.

First time settings

1 Press **SOURCE** to switch to DTTV mode.
↳ You are prompted to select your country.



- 2 Select your country, then press **OK** to confirm.
 - ↳ You are prompted to perform auto channel search.




- 3 Select [**Auto search**], then press **OK** to confirm.
 - ↳ Auto channel search starts.
 - ↳ When auto channel search is complete, the total number of TV and radio channels found is displayed.
 - ↳ To view the programs of the first found channel, press **OK**.
 - ↳ To change channels, press **CH +/-**.

Manual search

You can search TV channels manually.

- 1 Press **SETUP**.
- 2 Select [**DTV**] > [**Manual search**], then press **OK** to confirm.

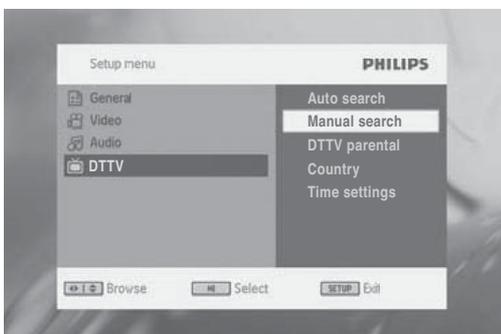

- 3 Select channel number, then press **OK** to confirm.

Set time

- 1 Press **SETUP**.
- 2 Select [**DTV**] > [**Time settings**].

To set time format:

- 1 Select [**Time format**].
- 2 Select an option, then press **OK** to confirm.
 - [**24hrs**]
 - [**12hrs**]

To select time setting mode:

- 1 Select **[Setting mode]**.
- 2 Select an option, then press **OK** to confirm.
 - **[Auto time setting]**: The time is updated automatically according to the broadcasted TV channel.
 - **[Manual time setting]**: Set your time manually.

To set time zone:

- 1 Select **[Setting mode]** > **[Manual time setting]**, then press **OK** to confirm.
- 2 Select **[Time zone]**.
 - Select GMT +01:00 for Germany and Central Europe (time difference with regard to the Greenwich mean time)

To set summer time/DST:

- 1 Select **[Setting mode]** > **[Manual time setting]**, then press **OK** to confirm.
- 2 Select **[Summer time/DST]**
 - If it is not summer time at the moment, select **[Off]**.

View program information

To view brief information of the current program, press **INFO**.



- ① TV program
Radio program
- ② Next program's information
- ③ Program number
- ④ Program name
- ⑤ Local time
- ⑥ Signal length indicator
- ⑦ Program information icons

I-II: Program containing different audio languages. You can press **AUDIO** or **OPTIONS** to access this functions.

...: Program containing subtitles. You can press **SUBTITLE** or **OPTIONS** to access this function.

☰: Program containing Teletext. You can press **TELETEXT** to access this function.

Access teletext

If the current channel has teletext available,  is shown.

- To access teletext, press **TELETEXT**.



Tip

- The program may request using color keys to access or control the viewing features. Follow the instructions on the teletext screen.

Use the electronic program guide

EPG is an on-screen guide available for digital TV programs. You can navigate, select and view programs by time or title.



- Select a channel.
- Press **EPG**.
↳ The Electronic Program Guide appears.
- Press **▼▲** to select a program.
- Press **OK**.
↳ The brief informatin of this program is displayed.
- To exit the EPG menu, press **EPG**.

Rearrange the channel list

- Press **OPTIONS**.
- Select **[Channel Edit]**.
↳ The channel list is displayed.
- Select a channel.
- Follow the on-screen instructions to move the channel up or down.

Manage channels

- Press **OK**.
↳ The channel list is displayed.

- 2 Select a channel.
 - To lock the channel, press the red button.
 - To hide the channel, press the yellow button.
 - To set the channel your favorite one, press the green button.

6 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press **SETUP**.
 - ↳ The setup menu is displayed.
- 2 Use navigation keys to select an option and press **OK** to confirm.

[General]	
[Language]	Select on-screen display language
[PBC settins]	Set playback control function on/off.
[Power save]	Set power saving mode on/off.
[DivX (VOD)]	Get DivX registration code.
[DivX Subtitle]*	Select DivX subtitle language.
[Parental (DVD)]	Select parental options.
[Set password]	Change existing password (1369 by default).
[Factory settings]	Restore factory settings.
[Video]	
[TV display]	Set screen display aspect ratio.
[TV standard]	Set video output format to TV system.
[Audio]	
[Dolby]	Set Dolby output.
[DTTV]	
[Auto search]	Search channels automatically.
[Manual search]	Search channels manually.
[DTTV Parental]	Select parental options.
[Country]	Select specific country.
[Time settings]	Set time.

- 3 Press **◀◀** to go back to previous menu level.
- 4 Press **SETUP** to exit.

**Note**

- *There are 3 options for **[DivX Subtitle]**.
- Latin: Albanian, Breton, Catalan, Danish, Dutch, English, Faroese, Finnish, French, Gaelic, German, Icelandic, Irish, Italian, Norwegian, Portuguese, Spanish and Swedish.
- Central Europe: Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian.
- Turkish: Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish.

7 Product information

**Note**

- Product information is subject to change without prior notice.

Dimensions	200 x 160 x 43.5 mm
Weight	0.84 kg
Power supply	Input: 100-240V, 50/60Hz Output: DC 9-12V, 1.0A
Operating temperature range	0-50°C
Laser wavelength	650 nm
Video system	NTSC/PAL

8 Troubleshooting

**Warning**

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at www.philips.com/welcome.

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

No sound

- Ensure that the AV cable is connected correctly.

No response to the remote control

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

No response to operating commands

- The operation is not permitted by the disc.

The player feels warm


- When the player is in use for a long period of time, its surface will be heated. This is normal.

No/weak signal displayed on the screen

- DVB-T signal is too weak or out of DVB-T signal covering area.
- Make sure you are in an area with sufficient coverage.
- Receiving DVB-T in a driving car may cause signal problems.

Loss of current TV programs when travelling to another country

- 1** Press **SETUP**.
- 2** Select **[DTTV] > [Country]**.
- 3** Select your country.
- 4** Select **[Auto search]**.

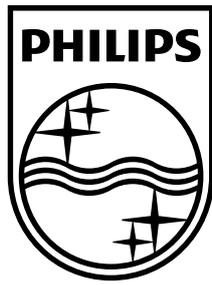

© 2009 Koninklijke Philips Electronics N.V.
All rights reserved.

