

Getting started with Personal Sound System (PSS)

Please take some time to read this before using your PSS.
We hope you enjoy your PSS.

Product Registration

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/register so we can inform you as soon as new free upgrades become available.

Is there a manual?

You have a detailed user manual on the CD packed with your PSS.
Spend some time with it to know all the features available.
You can also download the same file from this website:

www.philips.com/support


Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free upgrades of the latest software and firmware for your product.

These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

English	1
Français	7
Deutsch	15
Español	19
Nederlands	25
Italiano	31
Português	37
Svenska	43
Dansk	49
Suomi	55
Cesky	61
Magyar	67
Polski	73
Slovensky	79
Русский	85
Ελληνικά	91

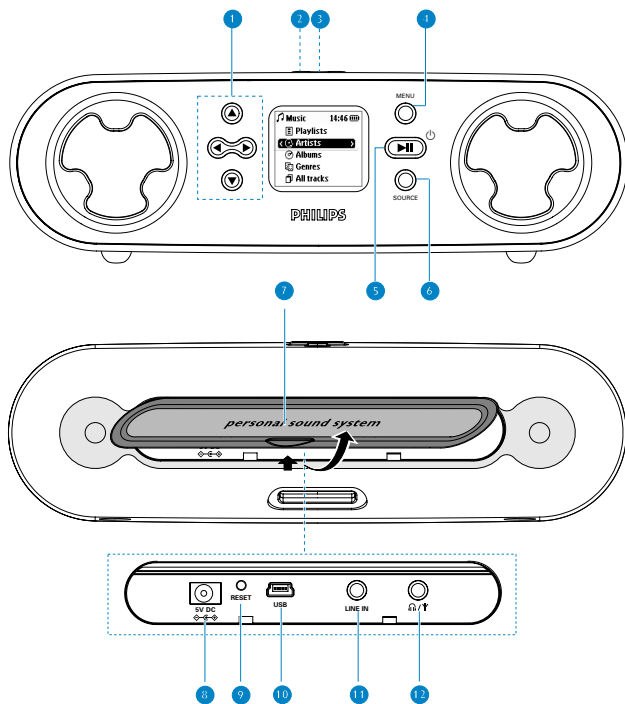

Overview of controls and connections

- | | | |
|---|-------------------|--|
| ① | Navigation | <ul style="list-style-type: none">▲ Up / previous / fast search backwards▼ Down / next / fast search forwards◀ Left / return to previous menu or library levels▶ Right / confirm a menu setting |
| ② | + / - | Increases / decreases volume |
| ③ | DBB | Enables or disables D ynamic B ass B oost to enhance bass tones |
| ④ | MENU | For menu options |
| ⑤ | ▶ | On / off ; plays / pauses music; plays / stores a radio station |
| ⑥ | SOURCE | Returns to root menu / displays playscreen or library options |
| ⑦ | Connections cover | |
| ⑧ | 5V DC | Charger /adapter connection for power supply |
| ⑨ | Reset opening | Press here to reset if the device "hangs" or "freezes" |
| ⑩ | USB | USB cable connector |
| ⑪ | LINE IN | 3.5mm socket for audio cable: connects to LINE OUT of auxiliary equipment |
| ⑫ | 🔊 / Y | 3.5mm jack for headphones (not included) or for FM antenna (included)- if listening via speakers |

1



Charge



Your personal sound system is powered by a rechargeable battery. Please charge for 4 hours for full battery power. You can also use the included adapter / charger to operate PSS.

2

Power on and play

Press and hold the **POWER**  key to power ON.
Press and hold the **POWER**  key to power OFF.
We have put some music tracks on your PSS so that you can jump start your music experience.

Basic Operation	Controls to press
Select Music / Tuner / Line-in	Press SOURCE to highlight and select
Enter/ exit the menu display	Press MENU
Scrolling and browsing	▲, ▼, ◀, ▶ for up, down, left, right
Go to different levels of menu	Press ▶ for next and ◀ for previous
Play music	Highlight selection and press ▶
Pause music playback	Press ▶ during playback
Change volume	Press VOLUME + / -
Fast forward in a track	Press and hold ▼
Rewind in a track	Press and hold ▲
Play next or previous track	Press down ▼ for next and ▲ for previous

English

3

Install

Insert the included CD into your computer's CDROM drive. If the CD does not autorun, please click the file **pss.exe** from the root directory of the CD. Select your language and follow screen instructions to complete installation of **Musicmatch® Jukebox** and **Device Manager**.



ATTENTION!
WINDOWS 98SE USERS:
TO AVOID INSTALLATION PROBLEMS, DO NOT CONNECT
PSS TO THE PC UNTIL AFTER INSTALLATION COMPLETES.

4

Connect



Open the connections cover at the back of your PSS. Connect the included adapter to your PSS and to the main power supply. Connect the smaller end of your USB cable to your PSS, the bigger end to our computer's USB port. Your PSS will be recognized as a portable device on your computer. It is now ready to download music tracks.

5

Transfer

Launch **Musicmatch® Jukebox** from your Windows desktop.



 
Add tracks to your music library

Go to the menu **Options > Music Library > Search and Add Tracks From All Drives**. In the **Look In** field, choose **All Drives** (or any other preferred drives) to search for music files. Check or uncheck other options and click **OK** to start searching. Files will be added to the **Library**.

Build a playlist for transfer

Click on a track / a folder. Drag the selection into the playlist window. Your selection is now in the playlist. It will begin to play.

Send tracks to your player

Click on **File > Send to portable device** for the **Portable Device Manager**. Your PSS will appear as an icon in the **Portable Device Manager** window. Drag and drop tracks and playlists into the **Portable Device Manager**. Alternatively you can also click the  **Sync** button to add all tracks from the **Library** or from specific playlists to your portable device.



Music that has not been transferred to your device using Musicmatch® cannot be played on your device.

Guide d'utilisation rapide du Personal Sound System (PSS)

Merci de consacrer quelques minutes à la lecture du présent document avant d'utiliser l'appareil.

Nous espérons que votre personal sound system (pss) vous donnera entière satisfaction.

Enregistrer

Étant donné que votre lecteur peut être mis à niveau, nous vous conseillons de l'enregistrer à l'adresse www.philips.com/register pour que nous puissions vous avertir de la présence d'éventuelles mises à niveau gratuites.

Documentation

Une version *.PDF de ce manuel figure sur le CD ci-joint. Consultez-le pour découvrir les différentes fonctionnalités du produit. Ce fichier est également disponible en téléchargement à partir de notre site Web: www.philips.com/support

Mises à niveau gratuites

Votre lecteur vous accompagnera pendant de nombreuses années. Pour obtenir des résultats optimaux, nous vous recommandons de consulter régulièrement le site Web www.philips.com/support pour télécharger les dernières versions du logiciel et du microprogramme destinées à votre lecteur.

Ces téléchargements vous permettront d'améliorer les performances de votre lecteur et d'étendre la prise en charge des formats audio.

Vivez une nouvelle expérience musicale!