

**PHILIPS  
NORELCO**

QP6520



BC

Manufactured for:  
Philips Consumer Lifestyle  
A division of Philips Electronics  
North America Corporation  
P.O. Box 10313, Stamford, CT 06904

 This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a registered trademark of Philips Electronics North America Corporation.

PHILIPS and Philips shield are registered trademarks of Koninklijke Philips N.V.

©2017 Philips Electronics North America Corporation. All rights reserved.



[www.philips.com](http://www.philips.com)

4222.002.8588.1

ENGLISH

## IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

**Read all instructions before using this product.**

## DANGER

**To reduce the risk of electric shock:**

- Do not reach for a corded product or charging stand that has fallen into water. Unplug immediately.
- The power cord and the accessories connected to it are not for immersion or for use in shower.
- Do not use an extension cord with this product.
- Do not place or store the product or charging stand while plugged in where it can fall or be pulled into a tub or sink. Do not place or drop the product or charging stand water or other liquid while plugged in.
- Always unplug this product and charging stand from the electrical outlet immediately after (re)charging.
- Unplug and remove power supply cord from this product or charging stand before cleaning.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

## WARNING

**To reduce the risk of burns, fire, electric shock, or injury to persons:**

- Close supervision is required when this product and charging stand are used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids.
- Use this product and charging stand for its intended household use as described in this manual. Do not use

attachments not recommended by Philips Electronics North America Corporation.


- Never operate this product or charging stand if it has a damaged power cord, if it is not working properly, after it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.
- Keep the product, power cord, charging stand and any attachments away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the power cord.
- Do not operate, charge, clean or plug in product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check blade and comb before using the product. Do not use the product if blade or comb are damaged, as injury may occur.
- Always attach power cord to product or charging stand first, then to power outlet. To disconnect, turn product off then remove power cord from outlet.
- Keep the power cord and charging stand dry at all times. Do not handle with wet hands.
- Never put the product or charging stand in direct sunlight or store at a temperature above 140°F (60°C).
- To prevent possible damage to the power cord, do not wrap power cord around the product.
- This product is for use on human hair only. Do not use the product for any other purpose.
- Always store the product, attachments and power cord in a moisture-free area. Make sure the cord is disconnected from the product.
- Do not attempt to open the product to remove or replace the built-in rechargeable battery.
- Only use the power cord and other accessories supplied with the product.

## SAVE THESE INSTRUCTIONS

**IMPORTANT:** The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

## Introduction


Congratulations on your purchase and welcome to Philips Norelco! To fully benefit from the support that Philips Norelco offers, register your product at [www.norelco.com/register](http://www.norelco.com/register).

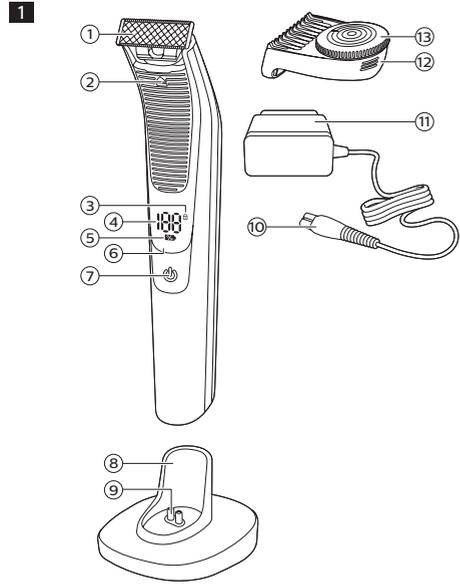

## General description (Fig. 1)

- 1 Blade
  - 2 Blade release slide switch
  - 3 Travel lock
  - 4 Battery status percentage
  - 5 Charge symbol
  - 6 LED Digital display
  - 7 On/off button
  - 8 Charging stand
  - 9 Small plug of the charging stand
  - 10 Small plug
  - 11 Power plug
  - 12 Precision trimming comb
  - 13 Hair length setting wheel
- Not shown: pouch

 This symbol indicates that the product can be used in the bath or shower.

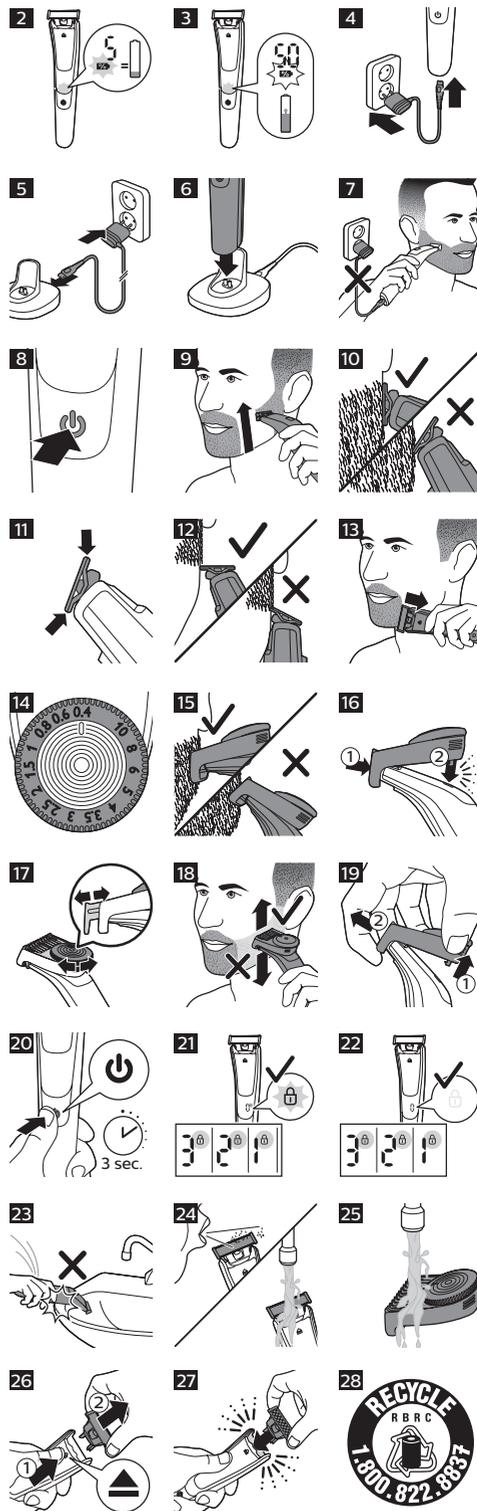

## Charging

Charging takes approx. 1 hour. Charge the product before first use and when the charge symbol blinks orange.

- Charging or using the product at temperatures below 40°F (4,5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

## Battery status indications

- When the product is almost empty, the charge symbol blinks orange (Fig. 2).
- The remaining battery capacity is indicated by the battery status percentage on the display.
- When the product is charging, the charging symbol blinks white (Fig. 3).
- Quick charge: after approx. 5 minutes charging, the product contains enough energy for 5 minutes use. During quick charge the charge symbol blinks white quickly until quick charge is finished.
- When the battery is fully charged, the battery status percentage shows 100% and the charge symbol lights up continuously.

Note: After approx. 30 minutes, the light goes out automatically.

## Charging with the power cord

- 1 Make sure the product is switched off.
- 2 Insert the small plug into the product and put the power plug in any 120V AC outlet (Fig. 5).
- 3 After charging, remove the power plug from the wall outlet and pull the small plug out of the product.

## Charging in the charging stand

- 1 Insert the small plug into the charging stand and put the power plug in any 120V AC outlet (Fig. 5).
- 2 Put the product in the charging stand (Fig. 6).
- 3 After charging, remove the power plug from the wall outlet and pull the small plug out of the charging stand.

## Operating time

When the product is fully charged, it has a cordless operating time of up to 90 minutes.

Note: An adapter plug may be necessary for cord usage in some foreign countries. Use an attachment plug adapter of the proper configuration for power outlet.

## Using the product

**Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.**

**This product is for use on facial hair only. It is not intended for shaving, edging or trimming hairs on lower body parts or scalp hair.**

Note: This product is for cordless use (Fig. 7).

- Use this product for its intended household use as described in this manual.
- For hygienic reasons, the product should only be used by one person.
- Trimming is easier when the skin and hair are dry.
- Be careful when trimming without a comb as the product will trim every hair it touches when it is turned on.
- Before using the product, always check the blade for damage or wear. If the blade is damaged or worn, do not use the product, as injury may occur. Replace a damaged blade before you use the product (see 'Replacement').
- Use the product to trim, edge or shave facial hair (beard, moustache and sideburns). Shave for a smooth result, trim to obtain a certain length and edge to create perfect edges and sharp lines. Take your time when you first start to use the product. You have to acquire practice with the product.

## Turning the product on and off

- 1 Press the on/off button once to turn the product on or off (Fig. 8).

## Shaving

- Make sure that the blade is in full contact with the skin by placing it flat on the skin.
- For the best result, move the product against the grain.
- Make long strokes while pressing lightly.
- Use the product dry or wet with gel or foam, even in the shower.
- Shaving a clean beard and face gives the best results.

- 1 Switch on the product (Fig. 8).
- 2 Place the blade on the skin and move the product up or against the grain in long strokes while pressing lightly (Fig. 9).

Note: Make sure you hold the surface of the blade flat against your skin (Fig. 10).

- 3 Switch off and clean the product after every use (see 'Cleaning').

### Edging

- Use both edges of the blade to create sharp lines and perfect edges.
  - Hold the product in such a way that the blade is perpendicular to the skin and one of its edges touches the skin. This allows more precise detailing of sideburns and the area around the mouth and nose.
- 1 To use the blade for creating sharp edges and lines, use either edge of the blade (Fig. 11).
  - 2 Switch on the product (Fig. 8).
  - 3 Place the edge of the blade perpendicular onto the skin (Fig. 12).
  - 4 Make straight strokes while applying gentle pressure (Fig. 13).
  - 5 Switch off and clean the product after each use (see 'Cleaning').

### Trimming with comb

- The precision trimming comb allows you to trim hair to different lengths. When you trim for the first time, start at the highest length setting to familiarize yourself with the product.
  - The settings on the wheel correspond to the remaining hair length after trimming in millimeters. You can select a length from 0.4mm (1/32 in.) to 10mm (13/32 in.) (Fig. 14).
  - Always trim in the direction of the teeth of the precision trimming comb making sure the flat part of the comb is in full contact with the skin for an even trimming result (Fig. 15).
  - Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
  - Make sure to always move the product against the grain.
  - Trimming is easier when the skin and hair are dry.
- 1 Place the front part of the comb onto the blade and push the projection at the back of the comb into the product ('click') (Fig. 16).
  - 2 Turn the hair length setting wheel to select the desired hair length setting (Fig. 17). The settings on the wheel correspond to the remaining hair length after trimming. You can select a length from 1/32 in./0.4mm to 13/32 in./10mm.
  - 3 Switch on the product (Fig. 8).

- 4 Place the comb onto the skin and move the product upwards slowly, against the grain (Fig. 18).
- 5 Switch off and clean the product after each use (see 'Cleaning').
- 6 To remove the comb, pull the back part off the product and then slide the comb off the blade (Fig. 19).

### Travel lock

The product is equipped with a travel lock function. You can use the travel lock if you are going to store the product for a longer time period or if traveling. The travel lock prevents the product from being switched on by accident.

#### Activating the travel lock

- 1 Press the on/off button for 3 seconds (Fig. 20).
- The travel lock symbol lights up and the digital display counts down (Fig. 21).
  - When the travel lock is activated, the travel lock symbol flashes.

#### Deactivating the travel lock

- 1 Press the on/off button for 3 seconds (Fig. 20).
- The display counts down. Then the travel lock symbol lights up and switches off (Fig. 22).
  - The product is now ready for use.

**Note:** The product unlocks automatically when connected to an electrical outlet.

### Cleaning

Clean the product after every use.

**Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.**

**Do not tap the product or blade against a surface to remove hairs and water as this may cause damage to the product and blade (Fig. 23). If the blade is damaged, replace immediately.**

**Never dry the blade with a towel or tissue, as this may cause damage.**

#### Cleaning the product

- 1 Turn off the product.
- 2 Remove the comb from the blade (Fig. 19).
- 3 Blow off any hairs that have accumulated on the blade and/or comb (Fig. 24).
- 4 Switch on the product briefly while rinsing the blade with lukewarm water (Fig. 24).

- 5 Rinse the comb with lukewarm water (Fig. 25).
- 6 Carefully shake off excess water and let all parts air dry completely.

**Note:** The blade is fragile. Handle it carefully. Replace the blade immediately if it is damaged.

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

### Storage

- Always attach the precision trimming comb on the blade to protect the blade from damage during traveling or storage (Fig. 16).
- Store the product in the pouch supplied. Make sure the product and attachments are dry before storing in the pouch.
- Be sure the product is turned off. Remove cord from outlet and the product before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

### Replacement

#### Replacing the blade

For optimal cutting and gliding performance, we advise you to replace the blade every 4 months or when it no longer provides the shaving or trimming results you expect. Depending on your usage behavior the exact lifetime of the blade could be longer or shorter. Similar to a manual blade, the blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance. Always replace the blade with original Philips Norelco blade (see 'Accessories').

- 1 Turn off the product.
- 2 Carefully push the blade release slide switch upwards while holding the blade on each side (Fig. 26). This will prevent the blade from flying away.
- 3 Hold the new blade on both sides and press it onto the handle ('click') (Fig. 27).

**Note:** Be careful, the edges of the blade are sharp. When you hear a 'click' the new blade is placed correctly and ready for use.

### Accessories

Replacement parts and accessories may be purchased at a store near you or on our website [www.philips.com/store](http://www.philips.com/store).

The following accessories are available:

- Model QP210 Philips Norelco Replacement Blade, 1-Pack
- Model QP220 Philips Norelco Replacement Blade, 2-Pack

### Assistance

For assistance, visit our website: [www.philips.com/support](http://www.philips.com/support) or call toll free 1-800-243-3050.

Online information is available 24 hours a day, 7 days a week.

### Disposal

- This product contains a rechargeable lithium-ion battery which must be disposed of properly (Fig. 28). Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit [www.call2recycle.org](http://www.call2recycle.org) for battery drop-off locations.
- For assistance, visit our website [www.philips.com/support](http://www.philips.com/support) or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit [www.recycle.philips.com](http://www.recycle.philips.com)

### Full Two-Year Warranty

Philips Electronics North America Corporation warrants this new product (except blade and comb) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

**IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage or batteries.\*

**NO RESPONSIBILITY IS ASSUMED  
FOR ANY SPECIAL, INCIDENTAL OR  
CONSEQUENTIAL DAMAGES.**

In order to obtain warranty service, simply go to [www.philips.com/norelco](http://www.philips.com/norelco) or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

**NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

\*Read enclosed instructions carefully.

**45-DAY MONEY-BACK GUARANTEE**

If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price.

**The product must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed.**

**We cannot be responsible for lost mail.**

The product must be postmarked no later than 45 days after the date of purchase.

Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

**To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance.**

**Delivery of refund check will occur 6–8 weeks after receipt of returned product.**