

ENGLISH

General description (Fig. 1)

- A** Spray nozzle
- B** Cap of filling opening
- C** Steam control
 - = no steam
 - △ = minimum steam
 - ☉ = maximum steam
 - = Calc-Clean function
- D** Shot-of-steam button
- E** Spray button
- F** Automatic shut-off light (RI2560 only)
- G** Mains cord
- H** Anti-Calc tablet (all types except RI2522 and RI2510)
- I** Temperature light
- J** Type plate
- K** Water tank
- L** Temperature dial

Important

Read this user manual carefully before you use the appliance and save it for future reference.

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket.
- Do not use the appliance if the plug, the cord or the appliance itself shows visible damage, or if the appliance has been dropped or is leaking.
- Check the cord regularly for possible damage.
- If the mains cord is damaged, you must have it replaced by Walita, a service centre authorised by Walita or similarly qualified persons in order to avoid a hazard.
- Never leave the appliance unattended when it is connected to the mains.
- Never immerse the iron and the stand, if provided, in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The soleplate of the iron can become extremely hot and may cause burns if touched.
- Do not allow the cord to come into contact with the soleplate when it is hot.
- When you have finished ironing, when you clean the appliance, when you fill or empty the water tank and also when you leave the iron even for a short while: set the steam control to position ○, put the iron on its heel and remove the mains plug from the wall socket.
- Always place and use the iron and the stand, if provided, on a stable, level and horizontal surface.
- This appliance is intended for household use only.

Electromagnetic fields (EMF)

This Walita appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use

Filling the water tank

- 1 Remove the mains plug from the wall socket.
- 2 Set the steam control to position ○ (= no steam) (Fig. 2).
- 3 Open the cap of the filling opening.
- 4 Tilt the iron and fill the water tank up to maximum level (Fig. 3).

If the tap water in your area is very hard, we advise you to use distilled water. Do not use chemically descaled water.

Do not fill the water tank beyond the MAX indication.

Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.

- 5 Close the cap of the filling opening ('click').

Setting the temperature

- The iron may give off some smoke when you use it for the first time. This will cease after a short while.

- 1 Put the iron on its heel and set the temperature dial to the required ironing temperature by turning it to the appropriate position (Fig. 4).
- Check the laundry care label for the required ironing temperature.
 - ● Synthetic fabrics (e.g. acrylic, viscose, polyamide, polyester)
 - ● Silk
 - ●● Wool
 - ●●● Cotton, linen
 - If you do not know what kind or kinds of fabric an article is made of, determine the right ironing temperature by ironing a part that will not be visible when you wear or use the article.
 - Silk, woollen and synthetic materials: iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains.

- 2 Put the mains plug in an earthed wall socket.

- 3 When the temperature light has gone out, wait a while before you start ironing.

Note: The temperature light will go on from time to time during ironing.

Using the appliance

Steam ironing

Make sure that there is enough water in the water tank.

- 1 Set the temperature dial to the recommended position (see section 'Setting the temperature').
- 2 Set the steam control to the appropriate steam position (Fig. 2).
 - △ for minimum steam (temperature settings ●● and ●●●).
 - ☉ for maximum steam (temperature settings ●●● to MAX).

Note: The iron will start steaming as soon as the set temperature has been reached.

RI2640/RI2620/RI2530/RI2528/RI2520/RI2510 only:

Water may leak from the soleplate if the set temperature is too low (MIN to ●●).

Ironing without steam

- 1 Set the steam control to position ○ (= no steam).
- 2 Set the temperature dial to the recommended position (see section 'Setting the temperature').

Features

Spray function

You can use the spray function to remove stubborn creases at any temperature

- 1 Make sure that there is enough water in the water tank.
- 2 Press the spray button several times to moisten the article to be ironed (Fig. 5).

Shot of steam

A powerful shot of steam helps to remove very stubborn creases. The shot-of-steam function only works at temperature settings between ●● and MAX.

- 1 Press and release the shot-of-steam button (Fig. 6).

Vertical shot of steam (all types except RI2510)

- 1 The shot-of-steam function can also be used when you are holding the iron in vertical position. This is useful for removing creases from hanging clothes, curtains, etc (Fig. 7).

Never direct the steam at people.

Drip stop (RI2652/RI2650/RI2560/RI2522 only)

This iron is equipped with a drip stop function: the iron automatically stops producing steam when the temperature is too low to prevent water from dripping out of the soleplate. When this happens you will hear a click.

Automatic shut-off (RI2560 only)

The electronic shut-off function automatically switches the heating element off if the iron has not been moved for a while.

- The automatic shut-off light starts blinking to indicate that the heating element has been switched off (Fig. 8).

To let the iron heat up again, pick the iron up or move it slightly. The automatic shut-off light goes out.

- 1 If the temperature light goes on, wait for it to go out before you start ironing.
- 2 If the temperature light does not go on, the iron is ready for use.

Cleaning and maintenance

Double-Active Calc System

- All types except RI2510: The Anti-Calc tablet prevents scale from clogging the steam vents. The tablet is constantly active and does not need to be replaced (Fig. 9).
- The Calc-Clean function removes the scale particles.

Calc-Clean function

Use the Calc-Clean function once every two weeks. If the water in your area is very hard (i.e. when flakes come out of the soleplate during ironing), the Calc-Clean function should be used more frequently.

- 1 Set the steam control to position ○.
- 2 Fill the water tank to the maximum level.

Do not pour vinegar or other descaling agents into the water tank.

- 3 Set the temperature dial to MAX (Fig. 10).
- 4 Put the plug in the wall socket.
- 5 Unplug the iron when the temperature light has gone out.
- 6 Hold the iron over the sink and set the steam control to the Calc-Clean position (●). The steam control will spring up slightly.
- 7 Pull the steam control upwards and remove it (Fig. 11).
- 8 Hold the iron over the sink and move it to and fro (Fig. 12).

Note: Steam and boiling water will come out of the soleplate. Impurities and scale (if any) will be flushed out.

- 9 Use vinegar to remove scale, if any, from the steam control needle (Fig. 13).

Do not bend or damage the steam control needle.

- 10 Put the steam control back into the iron by inserting the point of the needle exactly in the centre of the hole and by fitting the small projection on the side of the needle into the slot. Press down the steam control while turning it to position ○ (Fig. 14).

- 11 Repeat the Calc-Clean process if the iron still contains a lot of impurities.

After the Calc-Clean process

- 1 Put the plug in the wall socket and let the iron heat up to allow the soleplate to dry.
- 2 Unplug the iron when the temperature light has gone out.
- 3 Move the iron gently over a piece of used cloth to remove any water stains that may have formed on the soleplate.

Storage

- 1 Set the steam control to position ○, remove the plug from the wall socket and let the iron cool down.
- 2 Clean the appliance and wipe scale and any other deposits off the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.

Keep the soleplate smooth: avoid hard contact with metal objects.

Never use a scouring pad, vinegar or other chemicals.

- 3 Regularly rinse the water tank with water and empty it after cleaning (Fig. 15).
- 4 Wind the mains cord round the cord storage facility (Fig. 16).
- 5 Always store the iron standing on its heel in a safe and dry place.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 17).


Guarantee & service

If you need information or if you have a problem, please visit the Walita website at www.walita.com.br or contact the Walita Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Walita dealer or contact the Service Department of Walita.

Troubleshooting

This chapter summarises the most common problems you could encounter with your iron. If you are unable to solve the problem, please contact the Walita Customer Care Centre in your country.

Problem	Cause	Solution
The iron is plugged in but the soleplate is cold.	There is a connection problem.	Check the mains cord, the plug and the wall socket.
No steam.	There is not enough water in the water tank.	Fill the water tank (see chapter 'Preparing for use', section 'Filling the water tank').
	The steam control has been set to position ○.	Set the steam position to △ or ☉ (see chapter 'Using the appliance', section 'Steam ironing').
	The soleplate is not hot enough and/or the drip stop function (specific types only) has been activated.	Set the temperature dial to a position in the steam area (●● to MAX). Put the iron on its heel and wait until the temperature light has gone out before you start ironing.
No shot of steam or no vertical shot of steam (specific types only).	The shot-of-steam function has been used too often within a very short period.	Continue ironing in horizontal position and wait a while before using the shot-of-steam function again.
	The soleplate is not hot enough.	Set the temperature dial to a position in the steam area (●● to MAX). Put the iron on its heel and wait until the temperature light has gone out before you start ironing.
Flakes and impurities during ironing.	Hard water forms flakes inside the soleplate.	Use the Calc-Clean function a few times (see chapter 'Cleaning and maintenance', section 'Calc-Clean function').
The red light blinks (RI2560 only).	The automatic shut-off function has been activated (see chapter 'Features', section 'Automatic shut-off').	Pick the iron up or move it slightly to deactivate the automatic shut-off function. The red light stops blinking.
There are water droplets on the fabric.	The cap of the filling opening has not been closed properly.	Press onto the cap until you hear a click.
There are water droplets on the fabric.	(RI2640/RI2620/RI2530/RI2528/RI2520/RI2510 only). The set temperature is too low for steam ironing.	Set the temperature dial to a position in the steam area (●● to MAX). Put the iron on its heel and wait until the temperature light has gone out before you start ironing.
Water drips out of the soleplate after the iron has cooled down or has been stored.	The iron has been put in horizontal position while there was still water in the water tank.	Empty the water tank and set the steam control to position ○ after use. Store the iron on its heel.

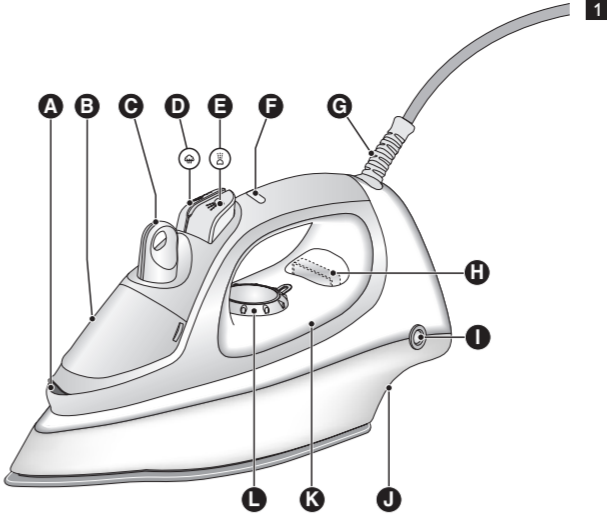

PHILIPS WALITA

RI2652, RI2650, RI2640, RI2620,
RI2560, RI2530, RI2528, RI2522, RI2520, RI2510



100% papel reciclado

www.walita.com.br

4239.000.6808.2

CIC Centro de Informações ao Consumidor

PHILIPS WALITA

Grande SP. (11) 2121 - 0203
Demais localidades: 0800 701 0203

CERTIFICADO DE GARANTIA

ATENÇÃO

Este certificado é uma vantagem adicional oferecida ao consumidor, porém, para que o mesmo tenha validade é imprescindível que seja apresentada a competente NOTA FISCAL de compra do produto. Com este produto, a WALITA tem como objetivo atender plenamente o consumidor, proporcionando a garantia na forma aqui estabelecida.

1. Esta garantia é complementar à legal e estipula que todas as partes e componentes, ficam garantidos integralmente contra eventuais defeitos de peças ou de fabricação que venham a ocorrer no prazo de 2 (dois) anos a partir da data de entrega do produto ao consumidor, conforme expresso na nota fiscal de compra.
2. Se o consumidor vier a transferir a propriedade deste produto, a garantia ficará automaticamente transferida, respeitando o prazo de validade, contado a partir da 1ª aquisição.
3. Constatado o eventual defeito de fabricação, o consumidor deverá entrar em contato com a Assistência Técnica Autorizada mais próxima.
4. Nas demais localidades onde não exista Assistência Técnica Autorizada as despesas de transportes do produto correm por conta do consumidor.
5. No prazo de garantia as partes, peças e componentes eventualmente defeituosos, serão trocados gratuitamente, assim como a mão de obra aplicada.
6. Esta garantia fica extinta se ocorrer uma das hipóteses a seguir:
 - a) Se o defeito for ocasionado pelo uso não domiciliar ou mau uso e em desacordo com as recomendações do manual de instruções do produto,
 - b) Se o produto foi examinado, alterado, adulterado, fraudado, ajustado ou consertado por oficina ou pessoa não autorizada pelo fabricante,
 - c) Se qualquer peça, parte ou componente agregado ao produto, se caracterizar como não original,
 - d) Se ocorrer a ligação deste produto em voltagem diversa da indicada no produto,
 - e) Se o número de série que identifica o produto, estiver de alguma forma adulterado ou rasurado,
 - f) Por casos fortuitos ou de força maior, bem como aqueles causados por agentes da natureza.
7. Não está coberta por esta garantia a mudança ou alteração de voltagem do produto.

IMPORTADO POR PHILIPS DO BRASIL LTDA. - Divisão WALITA
AV. OTTO SALGADO, 259 - DISTR. INDUSTRIAL CLAUDIO GALVÃO NOGUEIRA
VARGINHA - MINAS GERAIS - CEP 37066-440 - CX. POSTAL 311 - CNPJ(MF) 61.086.336/0144-06

