

EN	Quick start guide	1	DA	Hurtig start	57
FR	Guide de démarrage rapide	8	SU	Nopea aloitus	64
DE	Kurzanleitung	15	CS	Rychlý přehled	71
ES	Guía de inicio rápido	22	HU	Gyors áttekintés	78
NL	Handleiding voor snel gebruik	29	PL	Krótką instrukcja obsługi	85
IT	Guida di riferimento rapido	36	SL	Rýchly prehľad	92
PO	Início rápido	43	RU	Быстрый запуск	99
SV	Snabbguide	50	EL	Γρήγορη έναρξη	106



Getting started with GoGear™ Digital Audio Player

Please take some time to read this before using your digital audio player.
We hope you enjoy your digital audio player.

Product Registration

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/register so we can inform you as soon as new free upgrades become available.


Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free upgrades of the latest software and firmware for your product.

These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Please read the user manual on the included CD for detailed information

English	1
Français	8
Deutsch	15
Español	22
Nederlands	29
Italiano	36
Português	43
Svenska	50
Dansk	57
Suomi	64
Cesky	71
Magyar	78
Polski	85
Slovensky	92
Русский	99
Ελληνικά	106

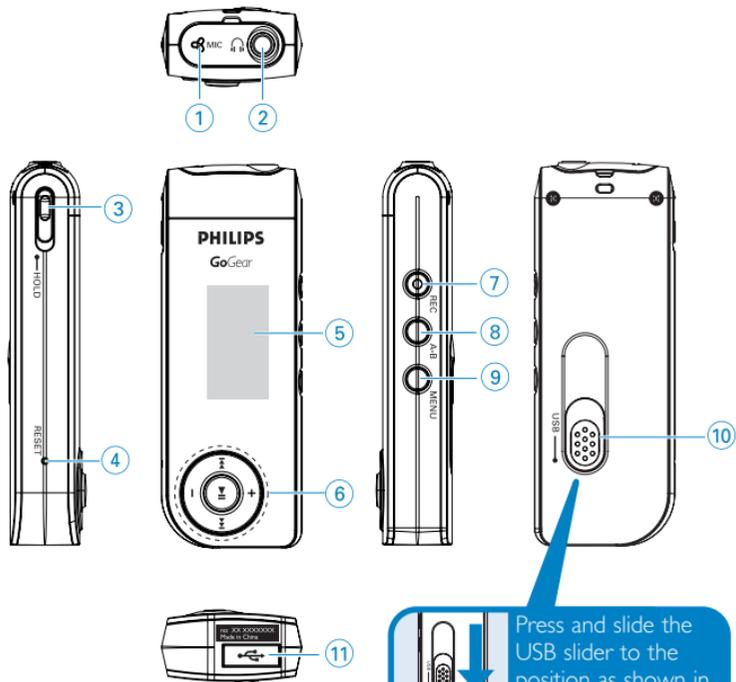

Press and slide the USB slider to the position as shown in the figure to slide out the USB connector.

Press and slide the USB slider to the position as shown in the figure to slide in the USB connector.

Overview of controls and connections

- | | | |
|---|---|--|
| ① | MIC | Microphone |
| ② |  | Headphones jack |
| ③ | HOLD | Disable key press |
| ④ | RESET | Restore the player |
| ⑤ | Display | Dynamically displays menu, options and track information |
| ⑥ |  | Rewind / Fast forward; Up / Down to 1 level |
| |  | Power on / off and Play / Pause; confirms a menu setting |
| | Volume + / - | Volume control; Scroll; Skip to previous / next |
| ⑦ | REC | Start or Stop Voice / FM Radio |
| ⑧ | A - B | Repeat or loop a sequence |
| ⑨ | MENU | For menu options |
| ⑩ | USB slider | Press and Slide for USB |
| ⑪ | USB | USB cable connector |

1

Charge

Please charge for 4 hours before first time use for best performance and enjoyment.

It may take some time for you to see charging happening. The power of your digital audio player might have been completely drained during transport and handling.



2

Install

Please install **Musicmatch Jukebox** for optimum product experience.



ATTENTION!
WINDOWS 98SE USERS:
TO AVOID INSTALLATION PROBLEMS, DO NOT CONNECT
DIGITAL AUDIO PLAYER TO THE PC UNTIL AFTER INSTALLATION
COMPLETES.

3

Connect

Connect the smaller end of your USB cable to your device, the bigger end to our computer's USB port.



4

Transfer

You can transfer files through drag-and-drop within the Windows environment.



5

Disconnect safely from your PC

Click this icon  in your Windows task tray to safely remove device from your PC.

WINDOWS 98SE users: there is no such icon.
Unplug your device after transfer completes.

6

Power on

Connect the supplied headphones to your digital audio player.

Press and hold the  key to power ON.
Press and hold the  key to power OFF.



7

Root menu

When your device powers up, you will see the Root Menu.
Otherwise, press and hold MENU key to get into root menu.

Music library

From the root menu, select **MUSIC** to enter the **MUSIC** library. Your device will play all your music alphabetically in the music library as you press **▶|**.

Basic Operation	Controls to press
Go to next track	Press ▶
Go to previous track	Press ◀◀
Pause music	Press ▶ during playback
Forward search	Press and hold ▶
Backward search	Press and hold ◀◀
Volume control	+ / -

Folder view

- ① From the root menu, select **Folder view** to enter the folder view.
The **Folder view** will display your music according to how you arrange them in folders when you transfer by drag and drop. Folders and tracks will be listed in alphabetical order.
- ② Use the **+** key to go to the previous track or folder.
Use the **-** key to go to the next track or folder.
Use the **▶|** key to go into a folder.
Use the **◀◀** key to go up one folder level.
Press **▶||** to select an item.
- ③ Select **Play** to start playing all the tracks from the selected point in the chosen folder.

Making voice recordings

When your device is not connected to the computer, you can make voice recordings. during stop or pause mode.

Making voice recording

- ① Press **REC** to start voice recording. Device shows the recording state.
- ② Press **REC** again to stop voice recording. Device shows the saving state. Your voice recording will be saved on your device (filename = **VOICE REC > MIC-xxx.wav**; xxx = track number).

Radio mode (only available to some regions)

Auto tune and playback

- ① From the root menu, select **RADIO** to enter the preferred radio station.
- ② Press **MENU**. Select **Autotune**. Press **▶||** to confirm.
→ Your device will automatically select up to 30 strongest available stations.
- ③ Press **◀◀** to scroll up or **▶▶** to scroll down for your preset.
- ④ The selected preset will be automatically played.

Making FM recording

- ① From the root menu, select **RADIO** to enter the radio mode.
- ② Press **REC** to start FM recording. Device shows the recording state.
- ③ Press **REC** again to stop FM recording. Device shows the saving state. Your FM recording will be saved on your device (filename = **FM REC > FM-xxx.wav**; xxx = track number).



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2005 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

