

Philips GoGear audio player

SA2610 SA2611 SA2615  
SA2616 SA2620 SA2621  
SA2625 SA2626 SA2627  
SA2628 SA2629 SA2640  
SA2641 SA2645 SA2646  
SA2647

# Quick start guide



- 1 Install
- 2 Connect
- 3 Transfer
- 4 Enjoy

**PHILIPS**

# Need help?

Please visit

[www.philips.com/welcome](http://www.philips.com/welcome)

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

# Need help?

Look up our Support Centre website

[www.philips.com/welcome](http://www.philips.com/welcome)

# Besoin d'aide ?

Visitez la page Web de notre centre  
d'assistance à l'adresse

[www.philips.com/welcome](http://www.philips.com/welcome)

# ¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,

[www.philips.com/welcome](http://www.philips.com/welcome)

# Support?

Besuchen Sie unser Support Center auf

[www.philips.com/welcome](http://www.philips.com/welcome)

- 2 Is there a manual?
- 2 Register your product
- 2 Don't forget about upgrades
- 3 What's in the box
- 4 Overview of controls and connections
- 5 Install
- 5 Connect and charge
  - 5 Insert the battery
  - 5 Read the battery level indication of your player
  - 6 Connect to PC
- 6 Transfer
  - 6 Transfer music
- 7 Enjoy
  - 7 Turn on and play
  - 7 Main menu
  - 7 Navigate the menu
- 8 Music mode
- 8 Radio\*
  - 8 Auto tune
  - 8 Play a preset radio station
- 9 Recordings
  - 9 Make recordings
  - 9 Play back recordings
- 10 Troubleshooting
  - 10 How do I reset my player?
- 10 Need help?
- 10 Disposal of your old product

\* This feature is only available for some regional versions.

# Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: [www.philips.com/support](http://www.philips.com/support)

# Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on [www.philips.com/welcome](http://www.philips.com/welcome) so we can inform you as soon as new free upgrades become available.

# Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to [www.philips.com/support](http://www.philips.com/support) for free updates of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

# What's in the box



Headphones



USB cable



AAA battery



CD-ROM



Quick start guide

 
What else you'll need.




 

 
 



Computer

A computer with:  
Windows 2000, XP or Vista  
Pentium III 800MHz processor or higher  
CD-ROM drive  
128 MB RAM  
500MB Hard Disk space  
USB Port  
Internet connection (preferable)  
Microsoft Internet Explorer 6.0 or later
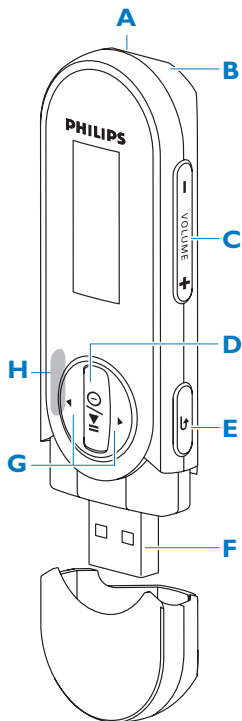
# Overview of controls and connections



<b>A</b> 	Headphone jack
<b>B</b> 	Microphone
<b>C</b> 	Increases/decreases volume (hold to increase/decrease fast)
<b>D</b> 	On / Off Play/Record / Pause Confirm selection
<b>E</b> 	Back one level (hold to return to root menu)
<b>F</b> 	USB connector
<b>G</b> 	Scrolls up/down (hold to quick scroll)
<b>H</b> 	Hold slider to lock/unlock all keys (except -VOLUME+)



# 1 Install

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of **Philips Device Manager**.

# 2 Connect

## A Insert the battery



- 1 Remove the USB cap.



- 2 Remove the battery door by sliding it in the direction of the arrow.



- 3 Insert the supplied AAA battery into the battery compartment.

## B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full




Half full



Low

 


Empty

**Note** When the batteries are almost empty, the low battery screen  blinks. The player saves all settings and unfinished recordings and switches off in less than 60 seconds.

## C Connect to PC

Use the supplied USB cable to connect the player to the PC.

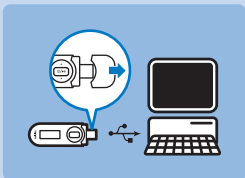

- 1 Pull off the USB cap.
- 2 Connect the supplied USB cable to the USB port at the bottom of the player, the other end to your PC.

## 3 Transfer

The player appears as a USB mass storage device in **Windows Explorer**. You can organize files, and transfer music to your player during USB connection.

### A Transfer music

- 1 Click and highlight one or more songs to transfer between your player and your computer.
- 2 Use drag and drop actions to complete your transfer.

**Tip** To transfer music CDs to the player use software such as Musicmatch Jukebox or Windows Media Player, rip (convert) the songs on your music CD into MP3/WMA files. Copy the files into the digital audio player via Windows Explorer. Free versions of these programs can be downloaded from the internet.






# 4 Enjoy

## A Turn on and play

To turn on, press ►|| until the display shows the **Philips** logo.  
To turn off, press and hold ►|| until the display shows 'Bye'.




**Tip** If the player is idle and no button is pressed for 10 minutes, it switches off automatically.

## B Main menu

 Music	Play your digital music tracks
 Radio*	Listen to FM radio
 Recording	Create or listen to recordings
 Folder view	View files in folders
 Settings	Customize the settings of your player

## C Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

Goal	Action
Return to previous menu	Press 
Return to main menu	Press and hold 
Browse through menus	Press ►   or 
Scroll through a list	Press ▲ or ▼
Selection an option	Press ►

\* This feature is only available for some regional versions.

# Music mode (also play mode for recordings)

The player offers the following music mode options:

Goal	Action
Play / Pause music	Press ►
Skip to next audio file	Press ▼
Return to previous audio file	Press ▲
Fast forward	Press and hold ▼

Goal	Action
Fast rewind	Press and hold ▲
Return to browsing menu	Press ↶ key
Increase volume	Press Vol +
Decrease volume	Press Vol -

## Radio\*

From the main menu, select  to enter radio mode.

### Connect the headphones

The supplied headphones serve as a radio antenna. Ensure you connect the headphones properly for an optimal reception.

### Auto tune

1 From the Radio menu , select **Auto tune**.

> *The radio automatically tunes radio stations and saves the frequencies to presets.*


*The radio can store up to 20 radio station to presets.*

### Play a preset radio station

1 From the Radio menu , select **Presets**.

2 Press ▲/▼ to select preset, ►|| to start playing.

3 To change to another preset radio station, press ▲ / ▼.

To exit radio, long press .

\* *This feature is only available for some regional versions.*






# Recordings

You can record audio with the player. The section **Overview of controls and connections** shows you the location of the microphone.

## Make recordings


- 1 From the main menu, select  > **Start voice recording**



- > *The player records and shows the recording display.*
- 2 Press  to pause.
- 3 Press  to stop.
- 4 Press  to save the recording or press  to cancel.
- > *Recordings will be saved on the player. (Filename format: VOICEXXX.WAV where XXX is the recording number which will be automatically generated.)*
- 5 You can find this file under  > **Recordings library** > **Voice**.

## Play back recordings

From the main menu, select  > **Recordings library** > **Voice**.


- 1 Select the recording you want to hear.
- 2 Press  to confirm.

# Troubleshooting

## How do I reset my player?

To do a reset, extract and reinsert the battery.

### If none of the above works, then you may have to use the Device Manager to recover your player:

- 1 Launch the **Philips Device Manager** at **Start > Programs > Philips Digital Audio Player > SA26XX > Philips SA26XX Device Manager** on your PC.
- 2 Press and hold the  button while your player is connecting to the PC.
- 3 Keep holding the key until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 4 Click the **Repair** button and follow the instructions given by the **Device Manager**.
- 5 After the player has been repaired, disconnect it from your PC and re-start.

## Need help?

### User Manual

See the user manual that came with your player.

### Online

Go to [www.philips.com/welcome](http://www.philips.com/welcome)

## Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. Batteries (including built-in rechargeable batteries) contain substances that may pollute the environment. Always hand the appliance in at an official collection point to remove any built-in batteries before discarding the appliance. All batteries should be disposed of at an official collection point.



Be responsible  
Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

[www.philips.com](http://www.philips.com)



Printed in China

wk8083