

Philips GoGear audio video player

SA3214 SA3215
SA3216 SA3224
SA3225 SA3226
SA3244 SA3245
SA3246

Quick start guide



- 1 Install
- 2 Connect and Charge
- 3 Transfer
- 4 Enjoy

PHILIPS

Need help?

Please visit

www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

Need help?

Look up our Support Centre website

www.philips.com/welcome

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/welcome

¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,

www.philips.com/welcome

Support?

Besuchen Sie unser Support Center auf

www.philips.com/welcome

- 2 **Is there a manual?**
- 2 **Register your product**
- 2 **Don't forget about upgrades**
- 3 **What's in the box**
- 4 **Overview of controls and connections**
- 5 **Install**
- 5 **Connect and charge**
 - 5 Connect to PC
 - 6 Read the battery level indication of your player
- 6 **Transfer**
 - 6 Transfer music, picture and text
 - 7 Transfer video
- 9 **Enjoy**
 - 9 Turn on and play
 - 9 Main menu
 - 9 Navigate the menu
- 10 **Music mode**
- 10 **Video**
 - 10 Video play
- 11 **Radio**
 - 11 Auto tune
 - 11 Play a preset radio station
 - 11 Record from FM radio when the radio is playing
- 12 **Recordings**
 - 12 Make recordings
 - 12 Play back recordings
- 13 **Troubleshooting**
 - 13 How do I reset my player?
- 14 **Need help?**
- 14 **Disposal of your old product**

Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: www.philips.com/support

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free updates of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

What's in the box



Headphones



USB cable



CD-ROM



Quick start guide

 
What else you'll need:









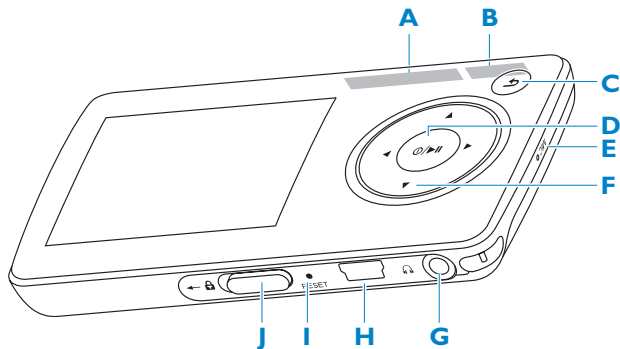

Computer

A computer with:
Windows 2000, XP or Vista
Pentium III 800MHz processor or higher
CD-ROM drive
128 MB RAM
500MB Hard Disk space
USB Port
Internet connection (preferable)
Microsoft Internet Explorer 6.0 or later

Overview of controls and connections



A -VOLUME+	Increases/decreases volume (hold to increase/decrease fast)
B PLAYLIST	Adds/deletes current selection to/from playlist
C 	Shows previous/last viewed / root display
D 	On / Off Play/Record / Pause Confirm selection
E MIC	Microphone
F 	Skips back (hold to quick skip)
	Skips forward (hold to quick skip)
	Scrolls up/down (hold to quick scroll)
G 	Headphones jack
H 	USB connector
I RESET	
J  slider	Hold slider to lock/unlock all keys (except -VOLUME+)

 
 
1 Install

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of **Philips Device Manager** and **Media Converter**. The Media Converter converts video clips and JPEG pictures into suitable formats for the player.

2 Connect and charge

A Connect to PC

When you connect the player to the PC, it automatically charges.

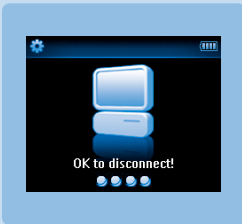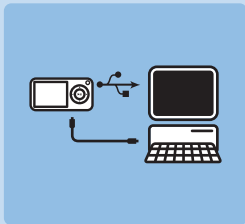

- 1 Before you use the player for the first time, charge it for at least 5 hours.
 - > The battery has a 100% charge after 4 hours and an 80% charge after 2 hours.
- 2 Connect the supplied USB cable to the mini USB port at the bottom of the player, the other end to your PC.
 - > The player will start to charge as soon as it is connected to your PC.

B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full




Half full



Low



Empty

Note When the batteries are almost empty, the low battery screen  blinks. The player saves all settings and unfinished recordings and switches off in less than 60 seconds.

3 Transfer

Your player appears as a USB mass storage device in **Windows Explorer**. You can organize files, transfer music, picture and text files to your player during USB connection. Use **Media Converter** to transfer video files. See **Media Converter** for details.

A Transfer music, picture and text

- 1 Click and highlight one or more songs to transfer between your player and your computer.
- 2 Use drag and drop actions to complete your transfer.


Tip To transfer music CDs to the player use software such as Musicmatch Jukebox or Windows Media Player, rip (convert) the songs on your music CD into MP3/WMA files. Copy the files into the digital audio player via Windows Explorer. Free versions of these programs can be downloaded from the internet.

B Transfer video

 
Important Play DRM protected videos once in **Windows Media Player** on your PC, before you transfer them with **MediaConverter** .



Use **MediaConverter** to convert the video files to the correct screen size and transfer videos from your PC to your player. This application will convert your video files to the right format and resolution before transferring them to your player so that they are guaranteed to playback on your player without any problems.


- 1 Use the supplied USB cable to connect your player to the PC.
- 2 Click on the  icon on your desktop, to start the media converter.

Note Video conversion and transfer is usually a long process and dependent on your PC configuration.

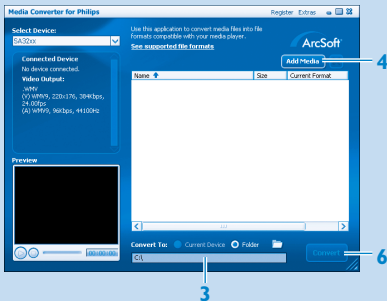

- 3 In the option **Convert to:** at the bottom of the screen, select **Current Device**.
- 4 Press the **Add Media** button and locate the files on the PC.
- 5 Click **OPEN** to add the selected file.
You can add multiple files.
- 6 Press **Convert**.
 
> *All the converted files will be transferred to the player.*

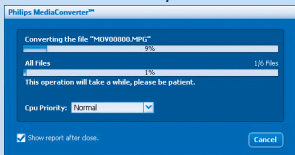

> *The progress of conversion and transfer is shown.*










Note If needed, the files will first be converted to a format that can be played on the player.

4 Enjoy

A Turn on and play








To turn on, press   until the display shows the Philips logo.
To turn off, press and hold   until the display shows 'Bye'.

B Main menu

 Videos	Watch your videos
 Pictures	View pictures
 Music	Play your digital music tracks
 Radio	Listen to FM radio
 Recording	Create or listen to recordings
 Folder view	View your folders
 Text reader	Read your TXT files
 Settings	Customize the settings of your player
 Now playing	Go to the play screen
Last played	Resume play

C Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

Goal	Action
Return to previous menu	Press 
Return to main menu	Press and hold 
Browse through menus	Press  or 
Scroll through a list	Press  or 
Selection an option	Press 

Music mode (also play mode for recordings)

The player offers the following music mode options:


Goal	Action
Play / Pause music	Press ▶
Skip to next audio file	Press ▶
Return to previous audio file	Press ◀
Fast forward	Press and hold ▶

Goal	Action
Fast rewind	Press and hold ◀
Return to browsing menu	Press ↶ key
Increase volume	Press Vol +
Decrease volume	Press Vol -

Video

Video play

You can play video clips that are stored on the player.

- 1 From the main menu, select  to enter Video mode.
> A list of video files stored on the player is displayed.
- 2 Press ▲ or ▼ to select the file and press ▶|| to play.
- 3 Short press ↶ to go back to the previous menu, and long press ↶ to return to the main menu.


Radio

From the main menu, select  to enter radio mode.

Connect the headphones

The supplied headphones serve as a radio antenna. Ensure you connect the headphones properly for an optimal reception.

Auto tune

1 From the Radio menu , select **Auto tune**.

> *The radio automatically tunes radio stations and saves the frequencies to presets.*


The radio can store up to 20 radio station to presets.

Play a preset radio station

1 From the Radio menu , select **Presets**.

2 Press  to select preset,  to start playing.


3 Press  to change to another preset.

4 To fine tune frequency, quick press .

5 To search for the next stronger signal, long press .

To exit radio, long press .

Record from FM radio when the radio is playing

1 Press  one or more times to enter Radio menu.

2 Select **Start FM Recording**.

3 Press  to start recording.


To stop recording, press .

 
To exit radio, long press .

Recordings




You can record audio with the player.

Make recordings

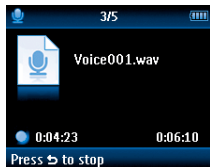- 1 From the main menu, select .
- 2 Select **Start voice recording** to start recording from the microphone.



> The player records and shows the recording display.


- 3 Press  to pause.
- 4 Press  to stop and save the recording.
> Your recording will be saved on the player. (Filename format: VOICEXXX.WAV where XXX is the recording number which will be automatically generated.)
- 5 You can find this file under  > **Recordings Library** > **Voice recordings**.

Tip You can pause and restart a recording anytime with .

Note To record FM radio, see section **Radio**.

Play back recordings

From the main menu, select  > **Recordings Library** > **Voice** or **FM radio**.


- 1 Select the recording you want to hear.
- 2 Press  to confirm.

Troubleshooting

How do I reset my player?

Insert a small pin or other sharp object into the reset hole located at the bottom of the player. Hold until the player shuts down.

If none of the above works, then you may have to use the Device Manager to recover your player:

- 1 Launch the **Philips Device Manager** at **Start > Programs > Philips Digital Audio Player > SA32XX > Philips SA32XX Device Manager** on your PC.
- 2 Press and hold the  button while your player is connecting to the PC.
- 3 Keep holding the key until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 4 Click the **Repair** button and follow the instructions given by the **Device Manager**.
- 5 After the player has been repaired, disconnect it from your PC and re-start.

Need help?

User Manual

See the user manual that came with your player.

Online

Go to www.philips.com/welcome

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

 Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

The built-in rechargeable battery contains substances that may pollute the environment. Always hand the appliance in at an official collection point to remove the battery before discarding the appliance. Battery should be disposed of at an official collection point.



Be responsible
Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

www.philips.com



Printed in China

wk8095